


2012 - Mazda6 - Body and Accessories

FLOOR UNDER COVER REMOVAL/ INSTALLATION

1. Remove the bolts, cap nuts, nuts and fasteners.

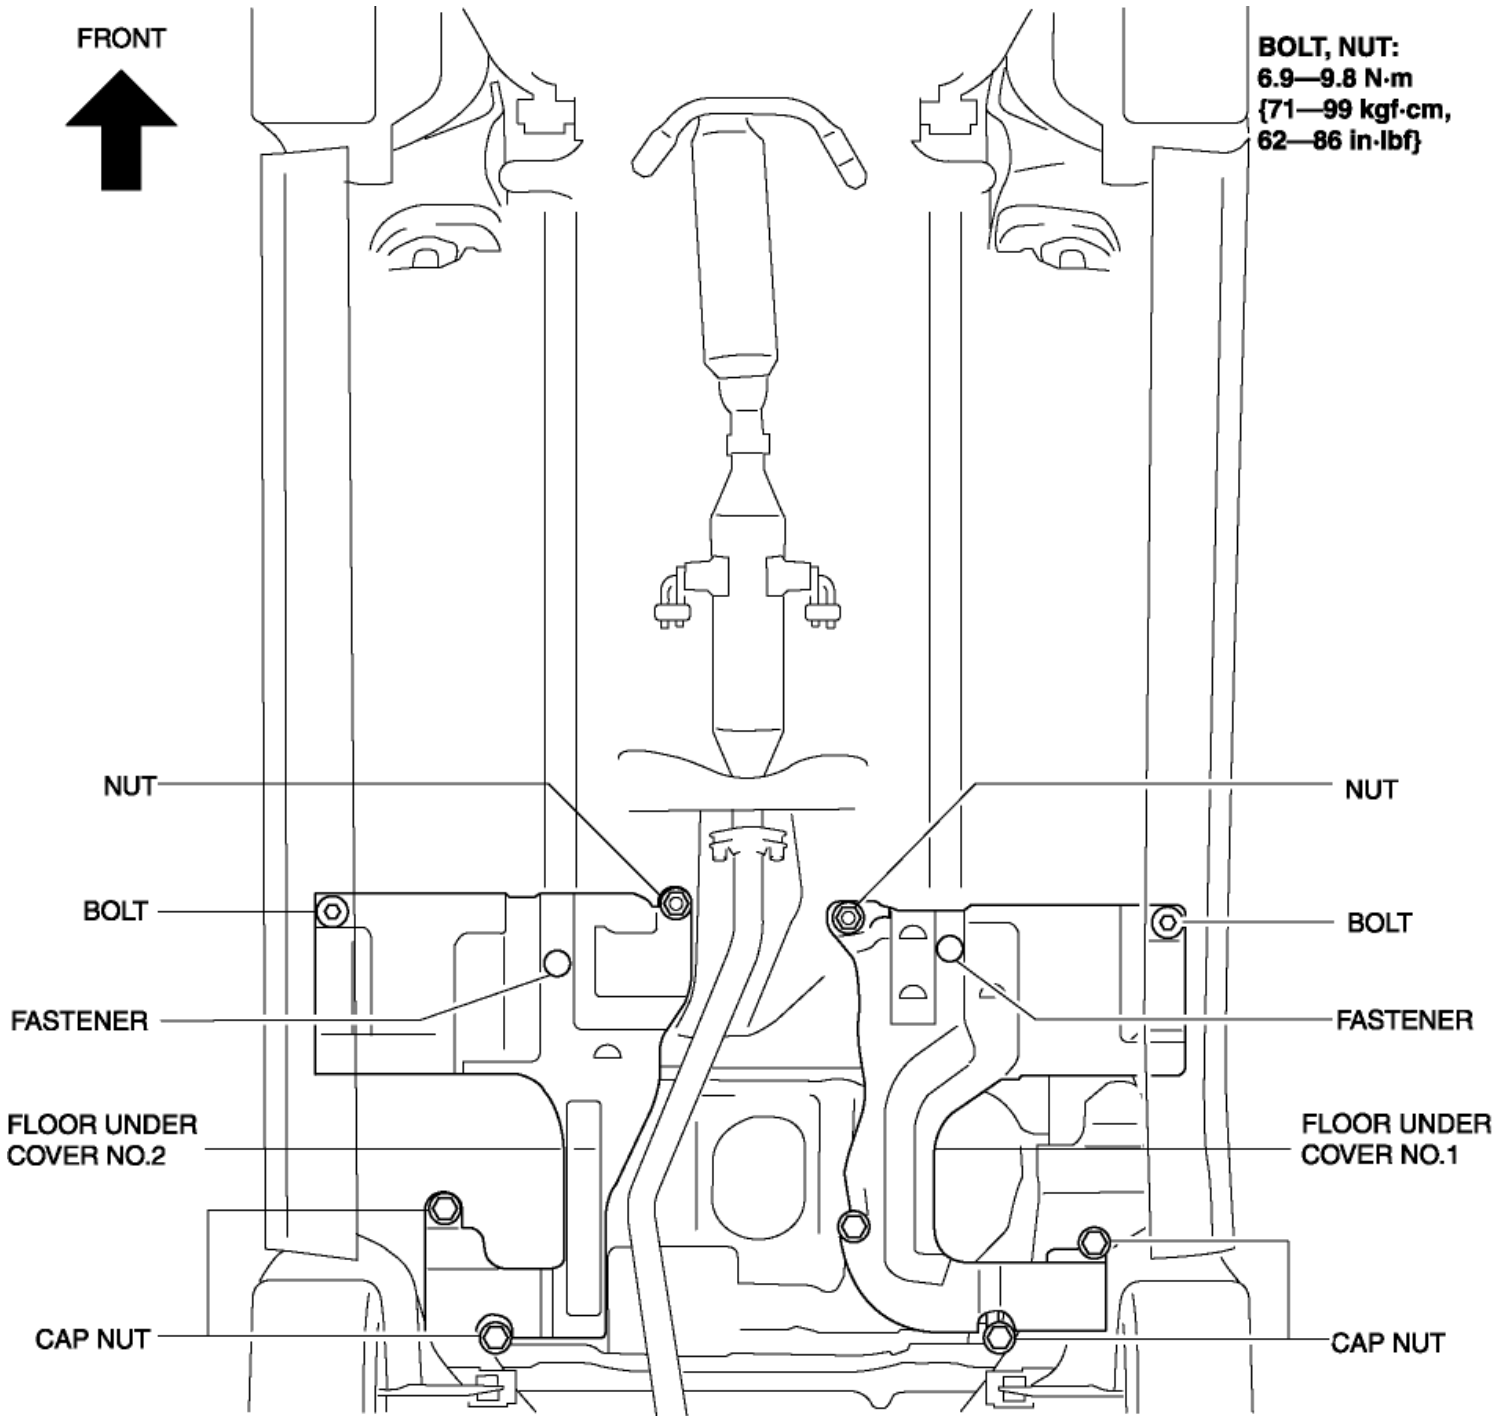

2. Remove the floor under cover and remove it while detaching the tabs.

CAUTION:


- Be careful not to damage the floor under cover during removal.

3. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

FLOOR UNDER COVER REMOVAL/ INSTALLATION

1. Remove the bolts, cap nuts, nuts and fasteners.

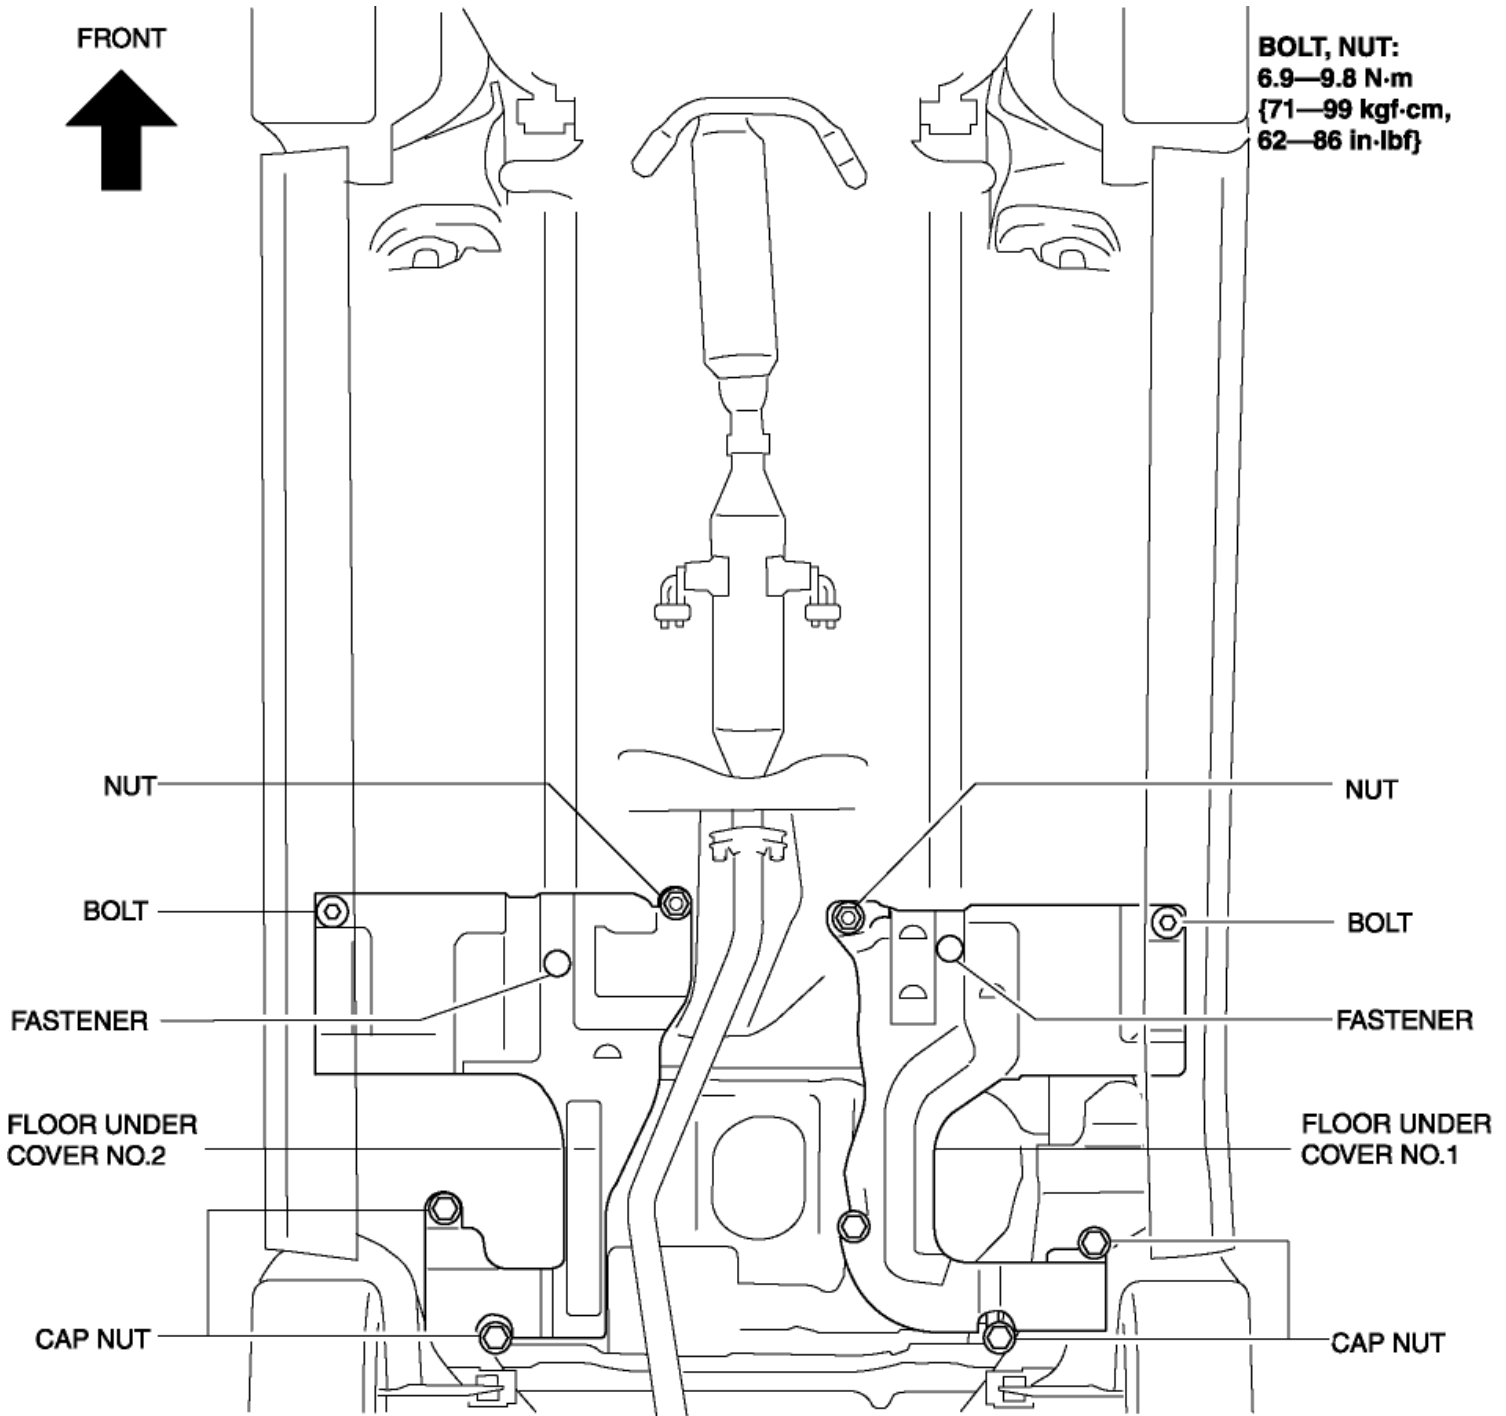

2. Remove the floor under cover and remove it while detaching the tabs.

CAUTION:

- Be careful not to damage the floor under cover during removal.

3. Install in the reverse order of removal.

