

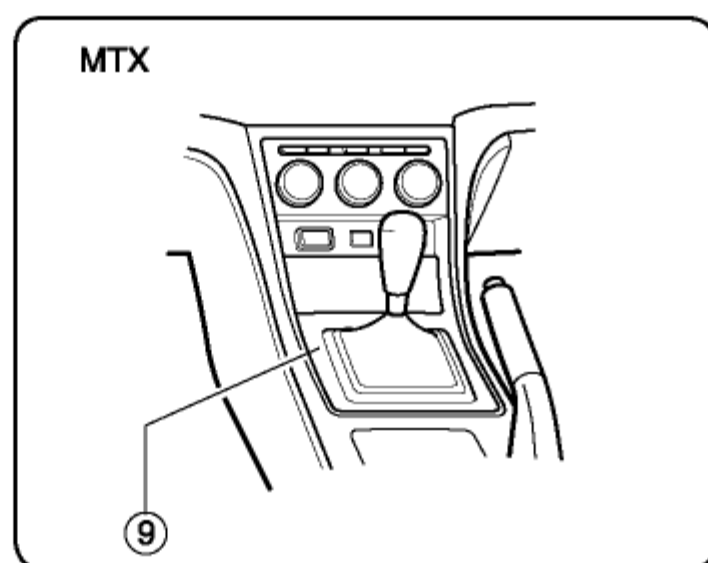


2012 - Mazda6 - Body and Accessories

INTERIOR TRIM LOCATION INDEX

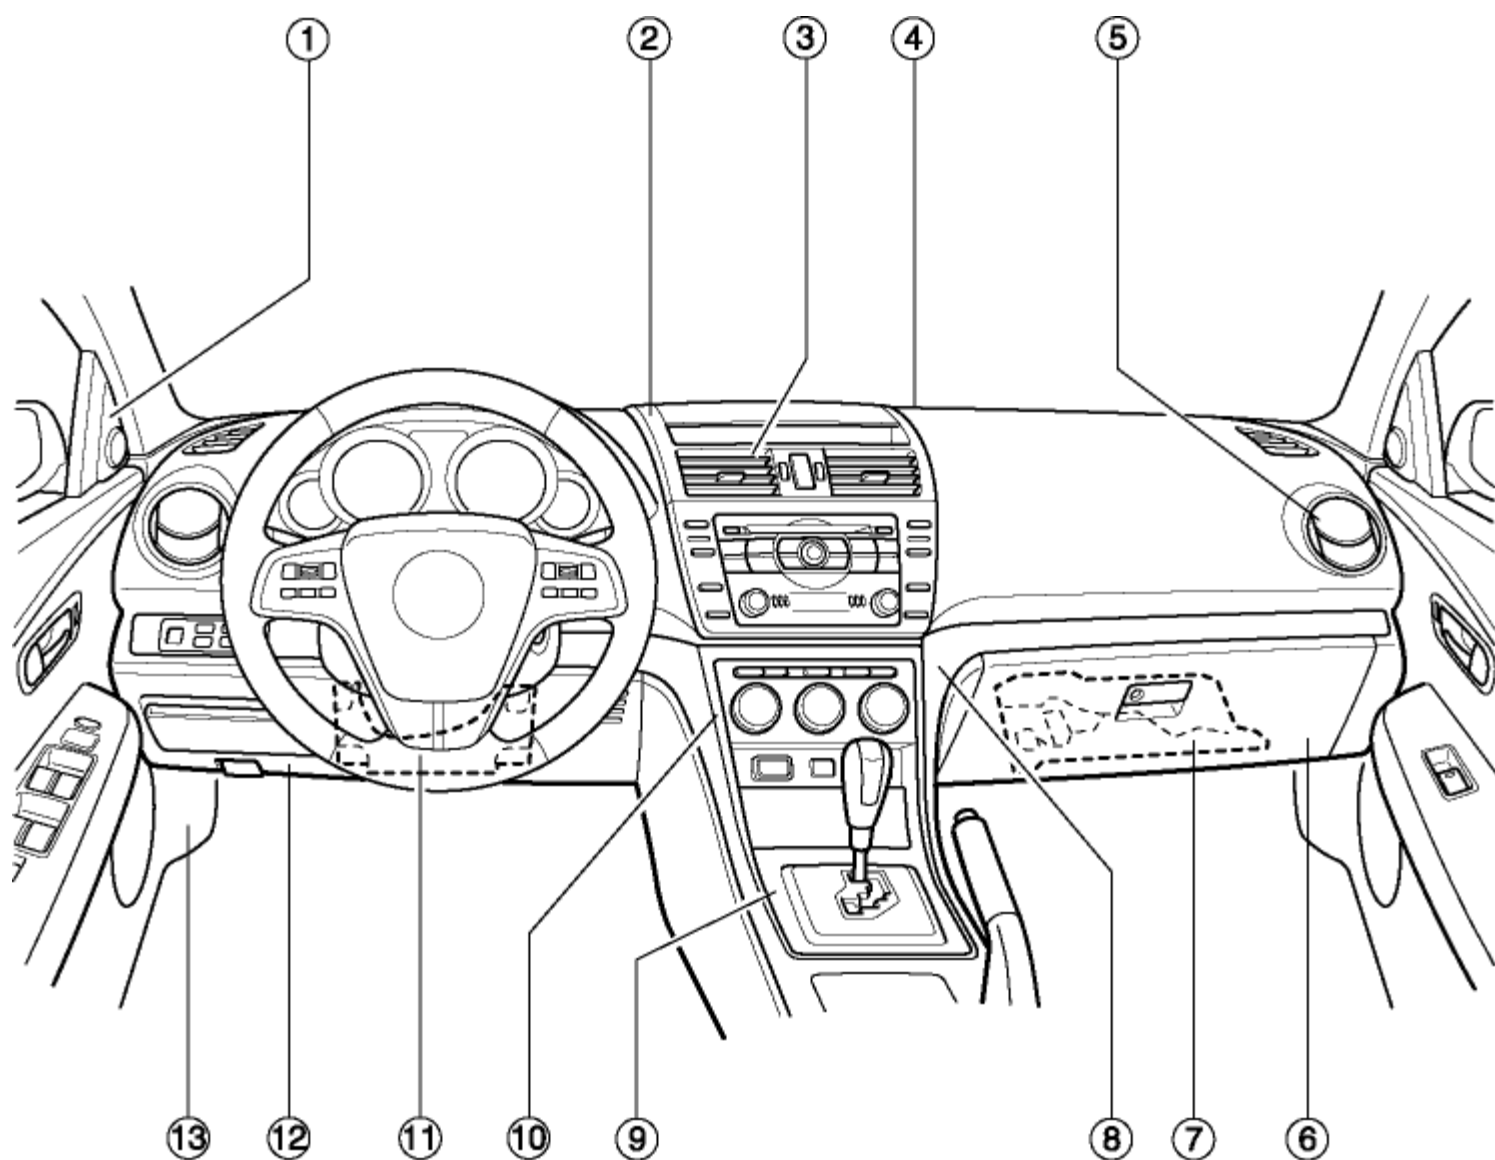


1	Inner garnish (See INNER GARNISH REMOVAL/ INSTALLATION.)
2	Center panel upper (See CENTER PANEL UPPER REMOVAL/ INSTALLATION.)
3	Center ventilator grille (See VENTILATOR GRILLE REMOVAL/ INSTALLATION.)
4	Dashboard (See DASHBOARD REMOVAL/ INSTALLATION.) (See DASHBOARD DI SASSEMBLY/ ASSEMBLY.)
5	Ventilator grille (See VENTILATOR GRILLE REMOVAL/ INSTALLATION.)
6	Grove compartment (See GLOVE COMPARTMENT REMOVAL/ INSTALLATION.)
7	Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/ INSTALLATION.)
8	Decoration panel (See DECORATION PANEL REMOVAL/ INSTALLATION.)
9	Shift panel (See SHIFT PANEL REMOVAL/ INSTALLATION.)
10	Center panel lower (See CENTER PANEL LOWER REMOVAL/ INSTALLATION.)
11	Knee bolster (See KNEE BOLSTER REMOVAL/ INSTALLATION.)
12	Lower panel (See LOWER PANEL REMOVAL/ INSTALLATION.)
13	Front side trim (See FRONT SIDE TRIM REMOVAL/ INSTALLATION.)

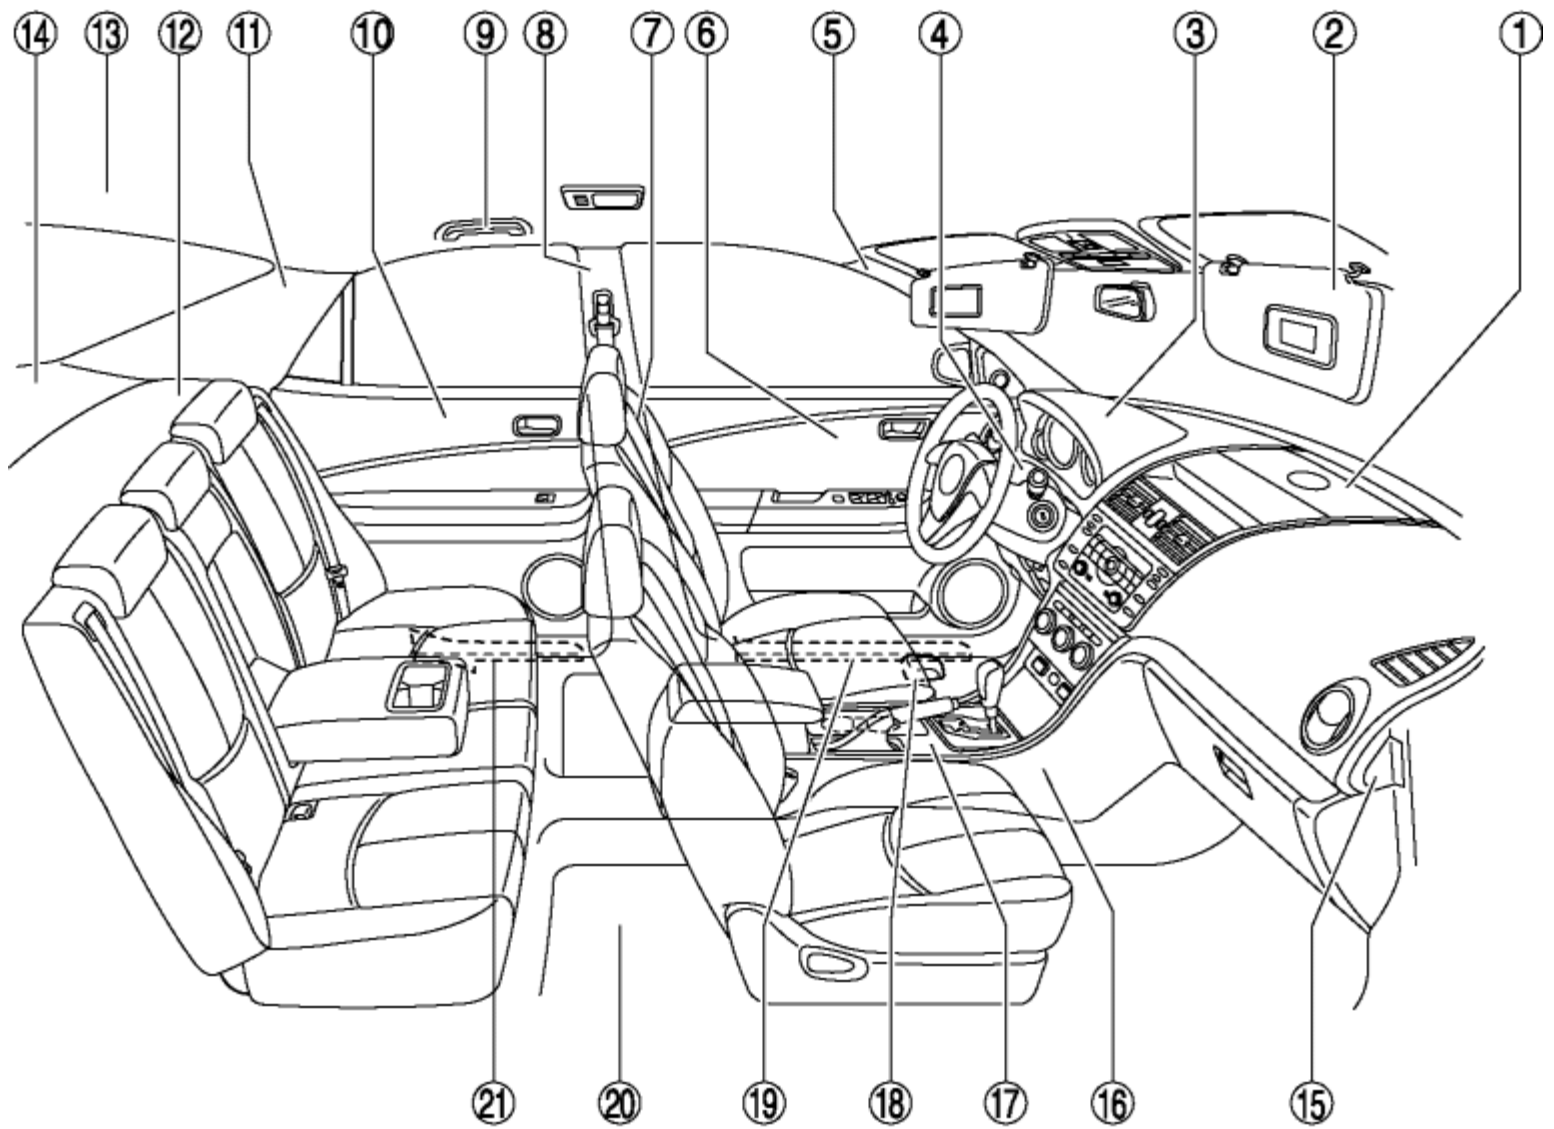

1	Speaker grille (See SPEAKER GRILLE REMOVAL/ INSTALLATION.)
2	Sunvisor (See SUNVISOR REMOVAL/ INSTALLATION.)
3	Meter hood (See METER HOOD REMOVAL/ INSTALLATION.)
4	Column cover (See COLUMN COVER REMOVAL/ INSTALLATION.)
5	A-pillar trim

	(See A-PILLAR TRIM REMOVAL/ INSTALLATION.)
6	Front door trim (See FRONT DOOR TRIM REMOVAL/ INSTALLATION.) (see FRONT DOOR TRIM DI SASSEMBLY/ ASSEMBLY.)
7	B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.)
8	B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION.)
9	Assist handle (See ASSIST HANDLE REMOVAL/ INSTALLATION.)
10	Rear door trim (See REAR DOOR TRIM REMOVAL/ INSTALLATION.)
11	C-pillar trim (See C-PILLAR TRIM REMOVAL/ INSTALLATION.)
12	Rear package trim (See REAR PACKAGE TRIM REMOVAL/ INSTALLATION.)
13	Headliner (See HEADLINER REMOVAL/ INSTALLATION.)
14	Trunk side trim (See TRUNK SIDE TRIM REMOVAL/ INSTALLATION.)
15	Side panel (See SIDE PANEL REMOVAL/ INSTALLATION.)
16	Rear console (See REAR CONSOLE REMOVAL/ INSTALLATION.) (See REAR CONSOLE DI SASSEMBLY/ ASSEMBLY.)
17	Upper panel

	(See UPPER PANEL REMOVAL/ INSTALLATION.)
18	Fuel-filler lid opener bezel (See FUEL-FILLER LID OPENER BEZEL REMOVAL/ INSTALLATION.)
19	Front scuff plate (See FRONT SCUFF PLATE REMOVAL/ INSTALLATION.)
20	Floor covering (See FLOOR COVERING REMOVAL/ INSTALLATION.)
21	Rear scuff plate (See REAR SCUFF PLATE REMOVAL/ INSTALLATION.)

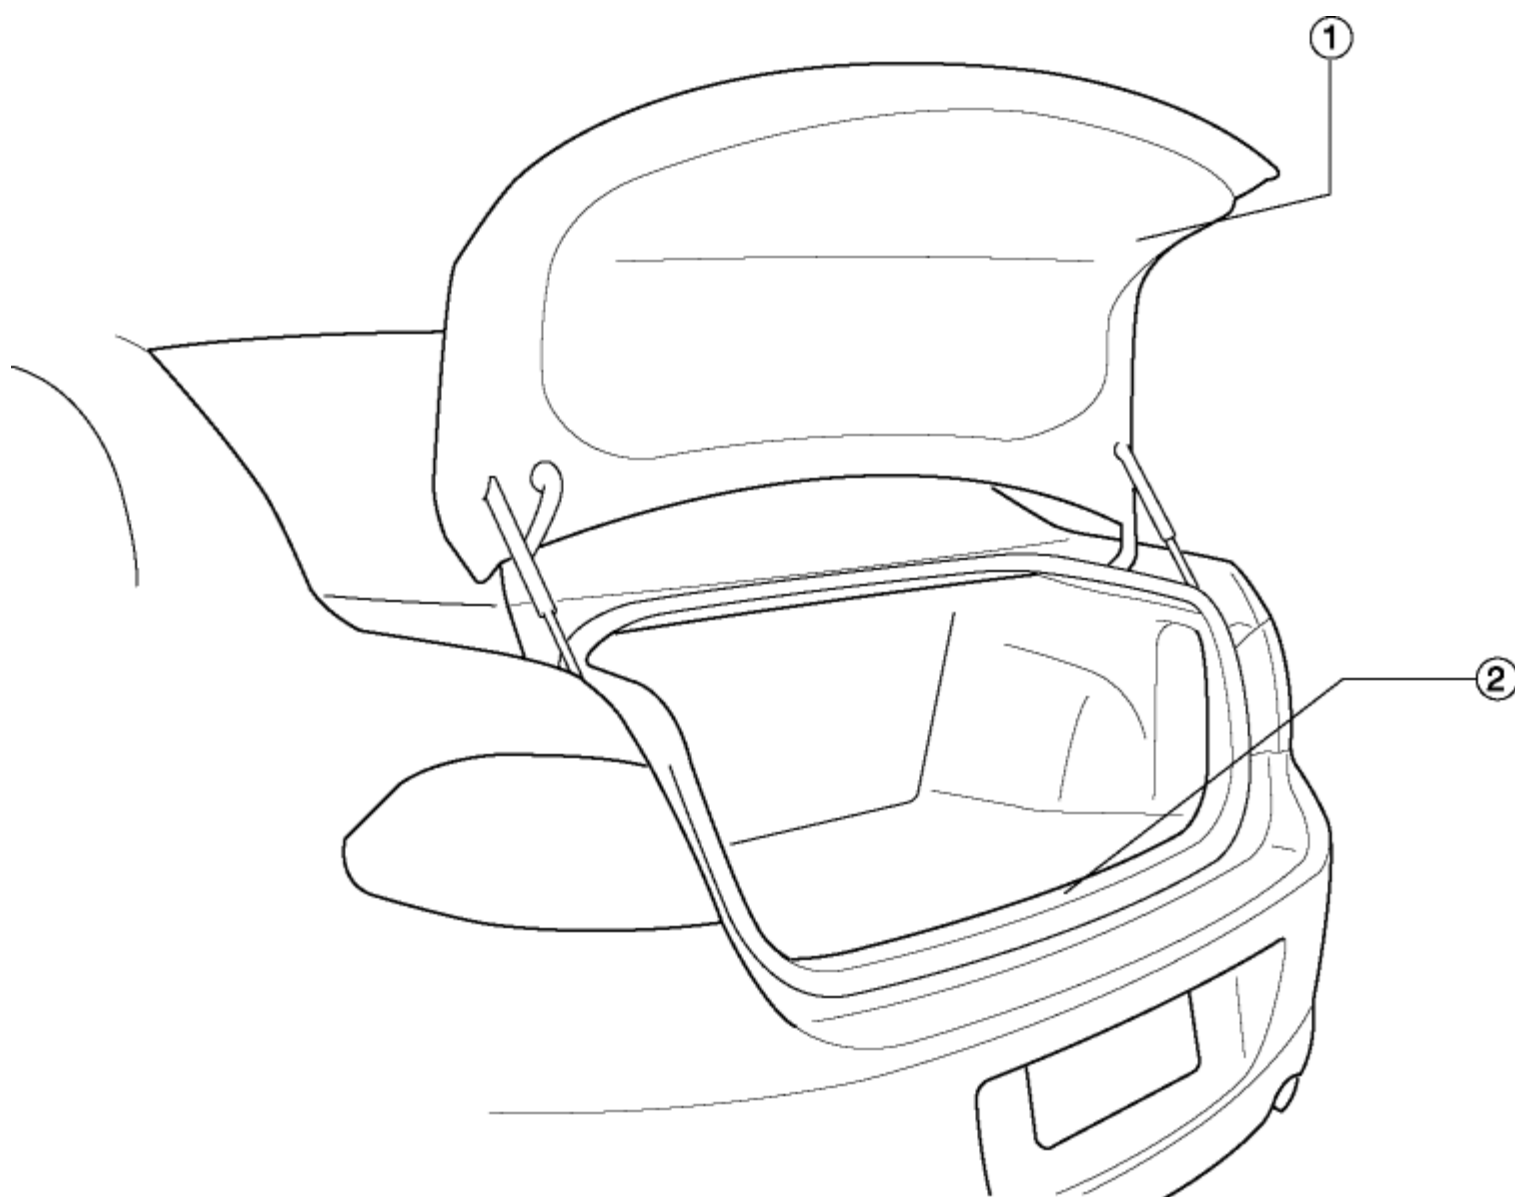

1	Trunk lid trim (See TRUNK LID TRIM REMOVAL/ INSTALLATION.)
2	Trunk end trim (See TRUNK END TRIM REMOVAL/ INSTALLATION.)



[< Previous](#) [Next >](#)

[Back to Top](#)


© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

INTERIOR TRIM LOCATION INDEX

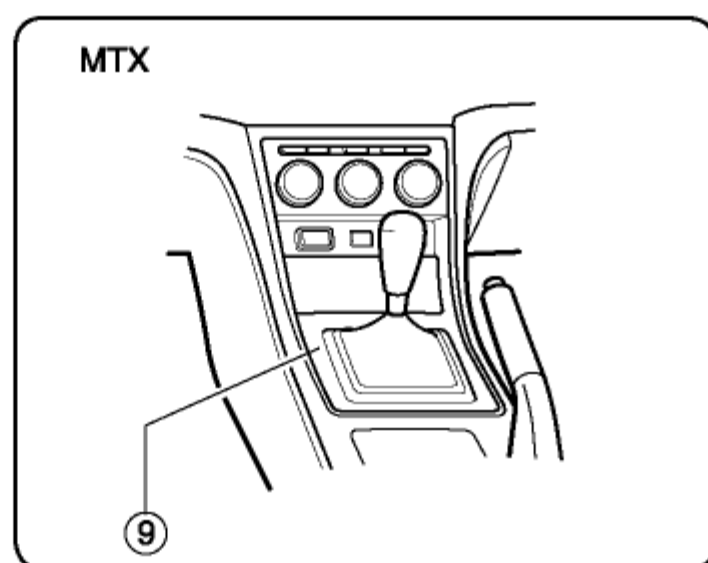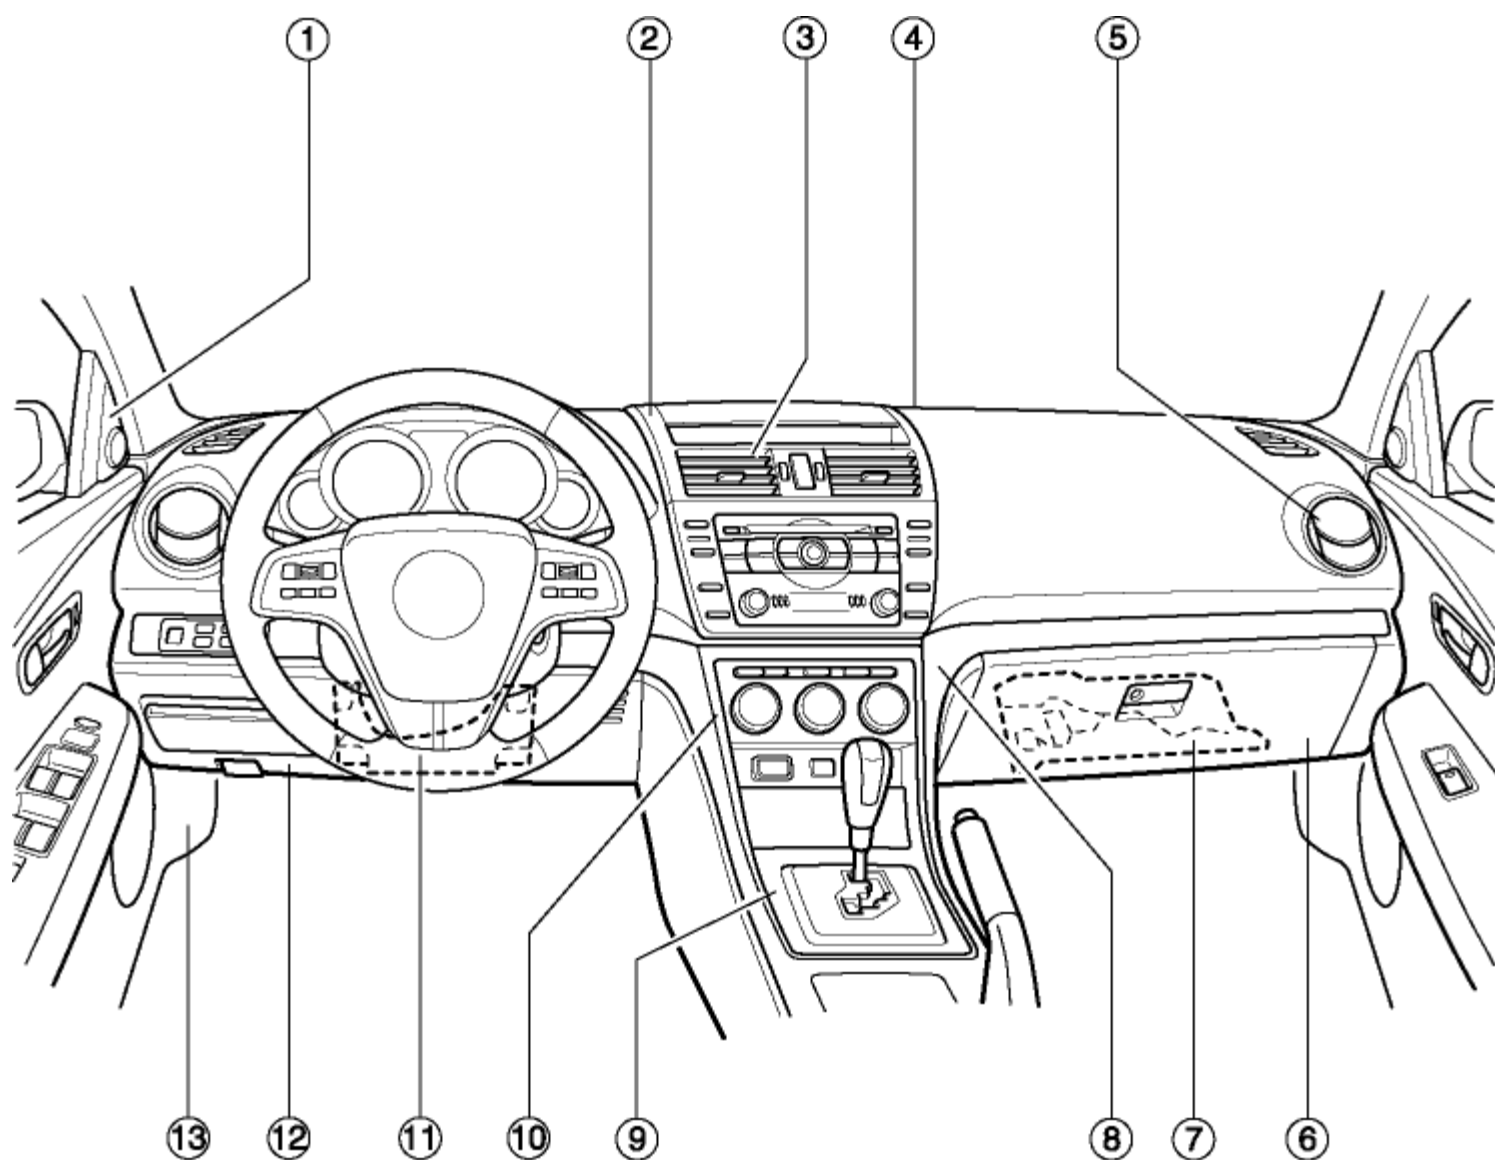

1	Inner garnish (See INNER GARNISH REMOVAL/ INSTALLATION.)
2	Center panel upper (See CENTER PANEL UPPER REMOVAL/ INSTALLATION.)
3	Center ventilator grille (See VENTILATOR GRILLE REMOVAL/ INSTALLATION.)
4	Dashboard (See DASHBOARD REMOVAL/ INSTALLATION.) (See DASHBOARD DI SASSEMBLY/ ASSEMBLY.)
5	Ventilator grille (See VENTILATOR GRILLE REMOVAL/ INSTALLATION.)
6	Grove compartment (See GLOVE COMPARTMENT REMOVAL/ INSTALLATION.)
7	Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/ INSTALLATION.)
8	Decoration panel (See DECORATION PANEL REMOVAL/ INSTALLATION.)
9	Shift panel (See SHIFT PANEL REMOVAL/ INSTALLATION.)
10	Center panel lower (See CENTER PANEL LOWER REMOVAL/ INSTALLATION.)
11	Knee bolster (See KNEE BOLSTER REMOVAL/ INSTALLATION.)
12	Lower panel (See LOWER PANEL REMOVAL/ INSTALLATION.)
13	Front side trim (See FRONT SIDE TRIM REMOVAL/ INSTALLATION.)

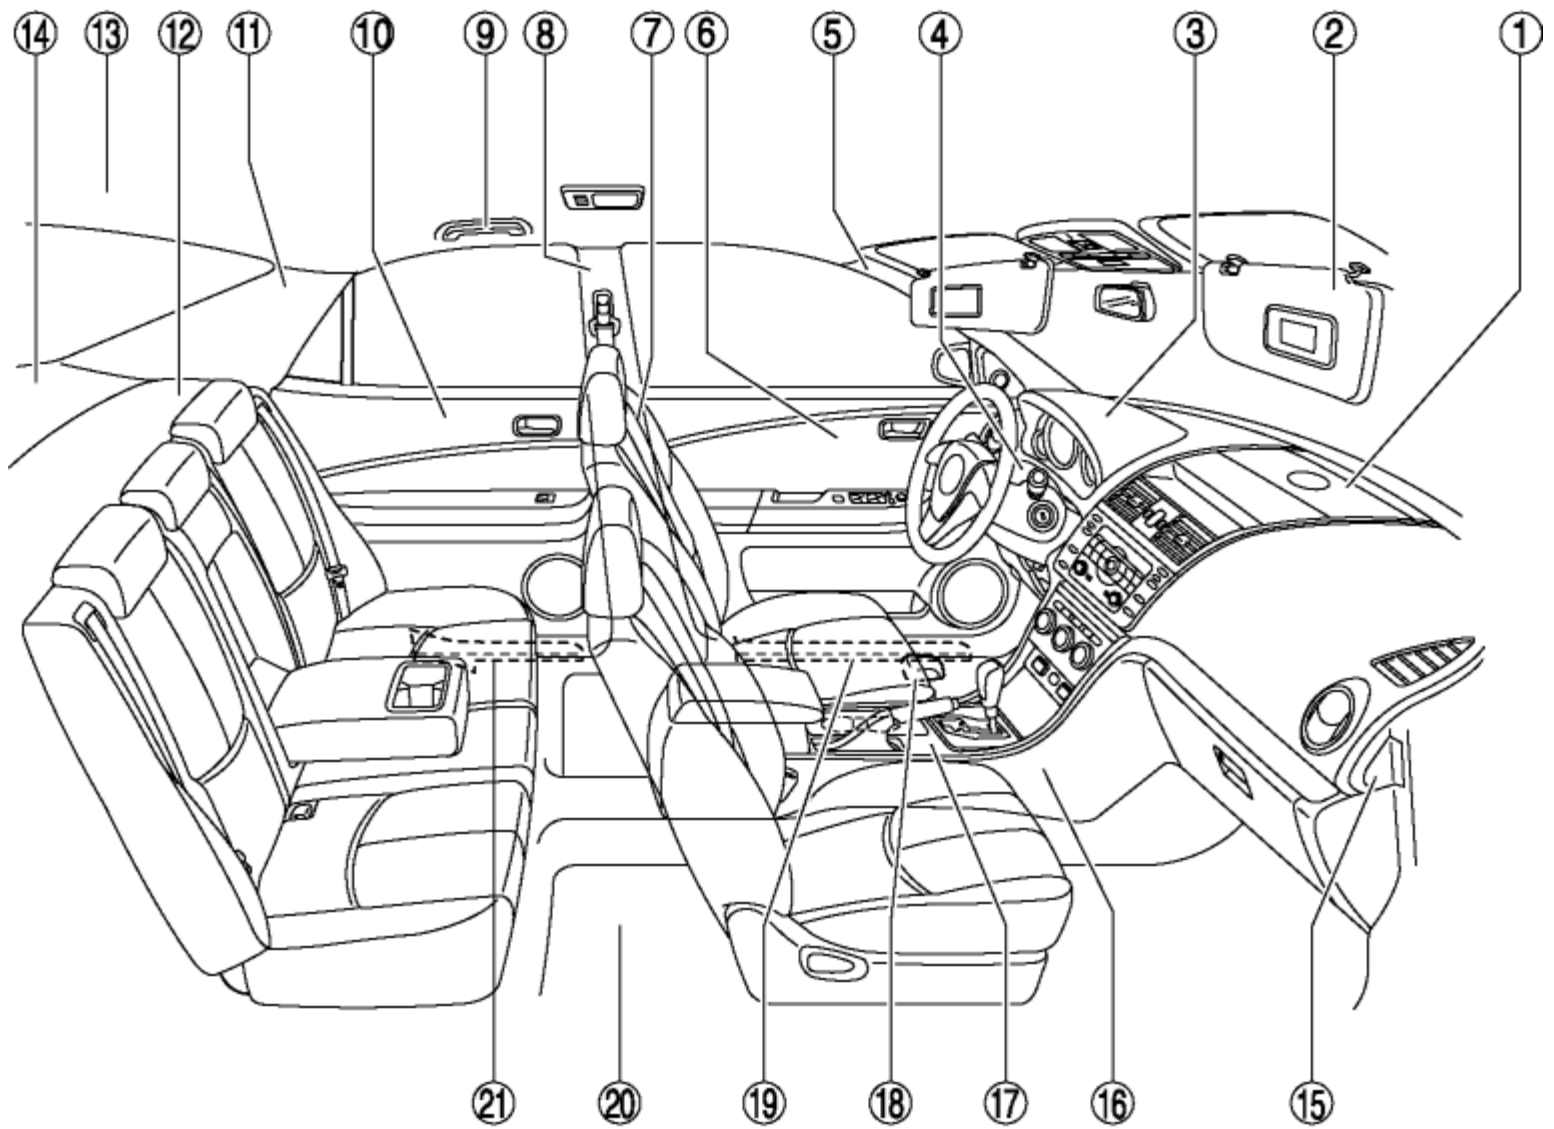

1 Speaker grille

(See **SPEAKER GRILLE REMOVAL/ INSTALLATION.**)

2 Sunvisor

(See **SUNVISOR REMOVAL/ INSTALLATION.**)

3 Meter hood

(See **METER HOOD REMOVAL/ INSTALLATION.**)


4 Column cover

(See **COLUMN COVER REMOVAL/ INSTALLATION.**)

5 A-pillar trim

	(See A-PILLAR TRIM REMOVAL/ INSTALLATION.)
6	Front door trim (See FRONT DOOR TRIM REMOVAL/ INSTALLATION.) (see FRONT DOOR TRIM DI SASSEMBLY/ ASSEMBLY.)
7	B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.)
8	B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION.)
9	Assist handle (See ASSIST HANDLE REMOVAL/ INSTALLATION.)
10	Rear door trim (See REAR DOOR TRIM REMOVAL/ INSTALLATION.)
11	C-pillar trim (See C-PILLAR TRIM REMOVAL/ INSTALLATION.)
12	Rear package trim (See REAR PACKAGE TRIM REMOVAL/ INSTALLATION.)
13	Headliner (See HEADLINER REMOVAL/ INSTALLATION.)
14	Trunk side trim (See TRUNK SIDE TRIM REMOVAL/ INSTALLATION.)
15	Side panel (See SIDE PANEL REMOVAL/ INSTALLATION.)
16	Rear console (See REAR CONSOLE REMOVAL/ INSTALLATION.) (See REAR CONSOLE DI SASSEMBLY/ ASSEMBLY.)
17	Upper panel

	(See UPPER PANEL REMOVAL/ INSTALLATION.)
18	Fuel-filler lid opener bezel (See FUEL-FILLER LID OPENER BEZEL REMOVAL/ INSTALLATION.)
19	Front scuff plate (See FRONT SCUFF PLATE REMOVAL/ INSTALLATION.)
20	Floor covering (See FLOOR COVERING REMOVAL/ INSTALLATION.)
21	Rear scuff plate (See REAR SCUFF PLATE REMOVAL/ INSTALLATION.)

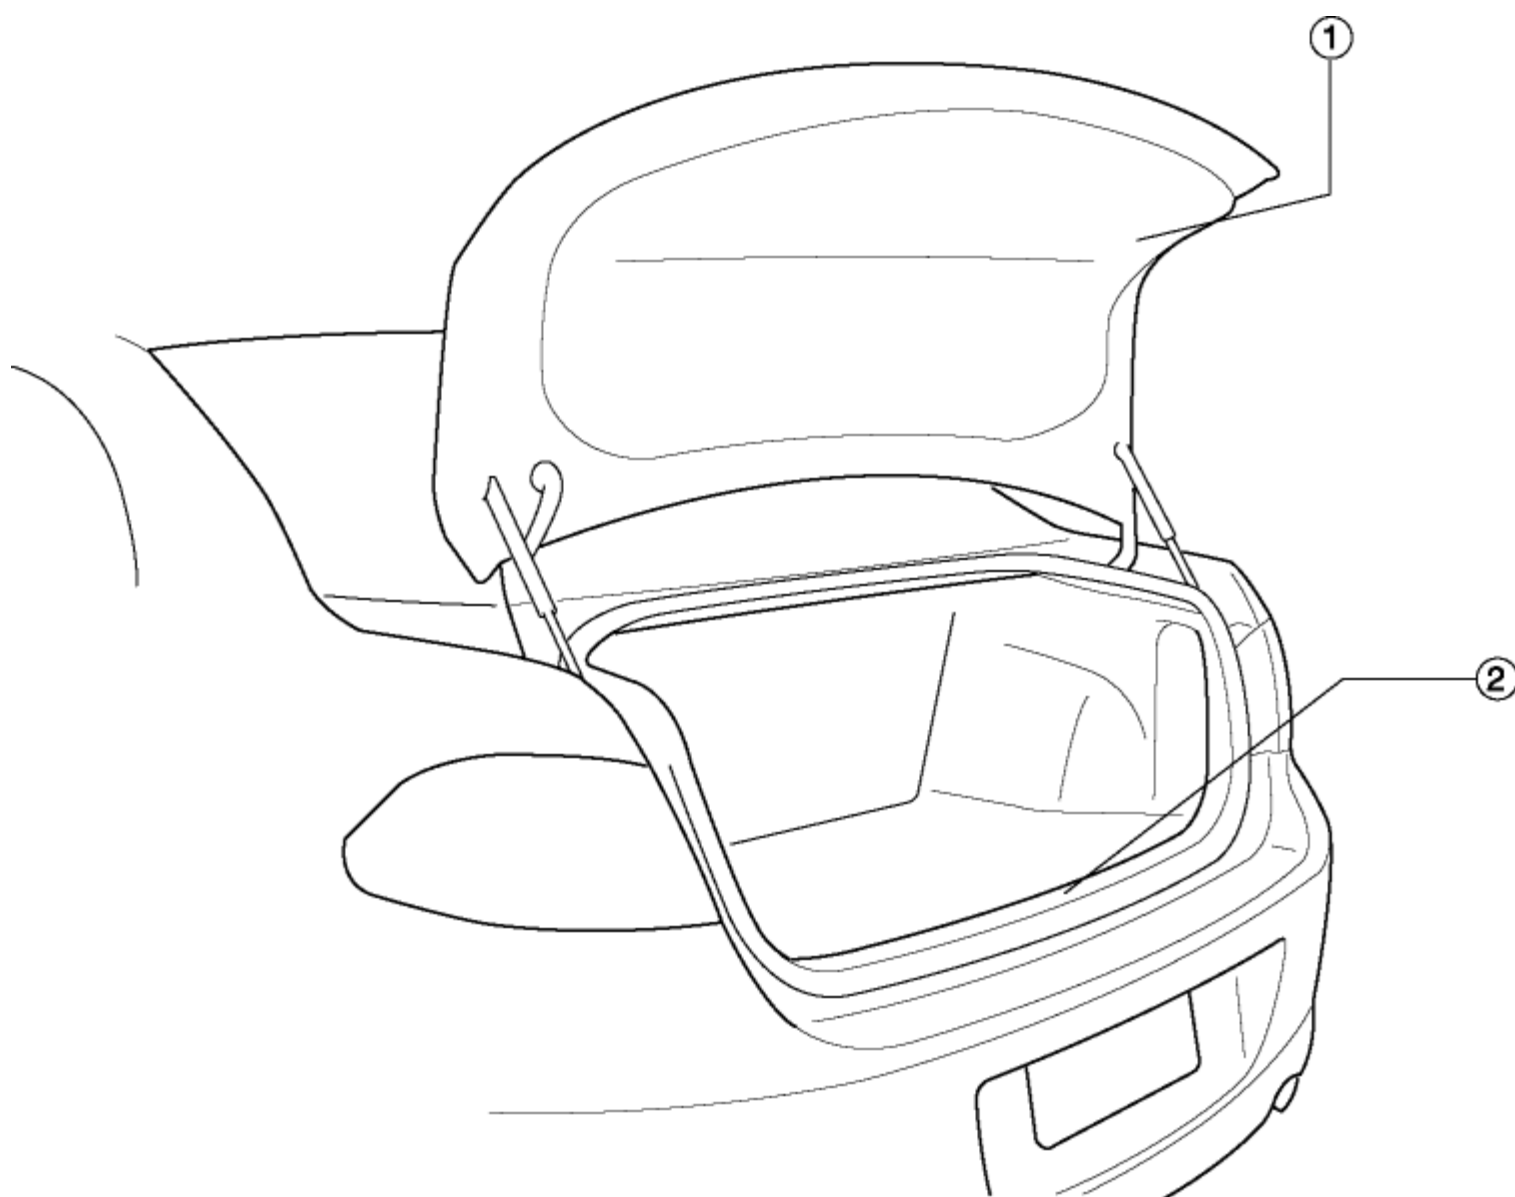

1	Trunk lid trim (See TRUNK LID TRIM REMOVAL/ INSTALLATION.)
2	Trunk end trim (See TRUNK END TRIM REMOVAL/ INSTALLATION.)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.