


2012 - Mazda6 - Body and Accessories


DASHBOARD REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Glove compartment (See [GLOVE COMPARTMENT REMOVAL/ INSTALLATION.](#))
 - b. Dashboard under cover (See [DASHBOARD UNDER COVER REMOVAL/ INSTALLATION.](#))
 - c. Front scuff plates (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - d. Front side trims (See [FRONT SIDE TRIM REMOVAL/ INSTALLATION.](#))
 - e. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - f. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - g. Shift lever knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
 - h. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - i. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - j. Climate control unit (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[FULL-AUTO AIR CONDITIONER\].](#)) (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[MANUAL AIR CONDITIONER\].](#))
 - k. Rear console (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
 - l. Hood release lever (See [HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.](#))
 - m. Lower panel (See [LOWER PANEL REMOVAL/ INSTALLATION.](#))
 - n. Driver-side air bag module (See [DRIVER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.](#))
 - o. Steering wheel (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))
 - p. Column cover (See [COLUMN COVER REMOVAL/ INSTALLATION.](#))
 - q. Combination switch (See [COMBINATION SWITCH REMOVAL/ INSTALLATION.](#))
 - r. Meter hood (See [METER HOOD REMOVAL/ INSTALLATION.](#))
 - s. Instrument cluster (See [INSTRUMENT CLUSTER REMOVAL/ INSTALLATION.](#))
 - t. Center panel upper (See [CENTER PANEL UPPER REMOVAL/ INSTALLATION.](#))
 - u. Audio unit (Vehicles with audio system) (See [AUDIO UNIT REMOVAL/ INSTALLATION.](#))
 - v. Car-navigation unit (Vehicles with car-navigation system) (See [CAR-NAVIGATION UNIT REMOVAL/ INSTALLATION.](#))
 - w. Steering shaft cover (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))
 - x. Steering shaft (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))
 - y. Side panel (See [SIDE PANEL REMOVAL/ INSTALLATION.](#))
 - z. SIRIUS satellite radio unit (See [SIRIUS SATELLITE RADIO UNIT REMOVAL/ INSTALLATION.](#))
 - aa. Passenger-side air bag module (See [PASSENGER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.](#))
 - ab. A-pillar trims (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
3. Disconnect antenna feeder No.1 clip from the A-pillar inner panel.
4. Disconnect the washer hose. (See [WINDSHIELD WASHER HOSE REMOVAL/ INSTALLATION.](#))
5. Disconnect the dashboard wiring harness connectors.

6. Remove the caps.
7. Remove bolts A, B, C, D and E.

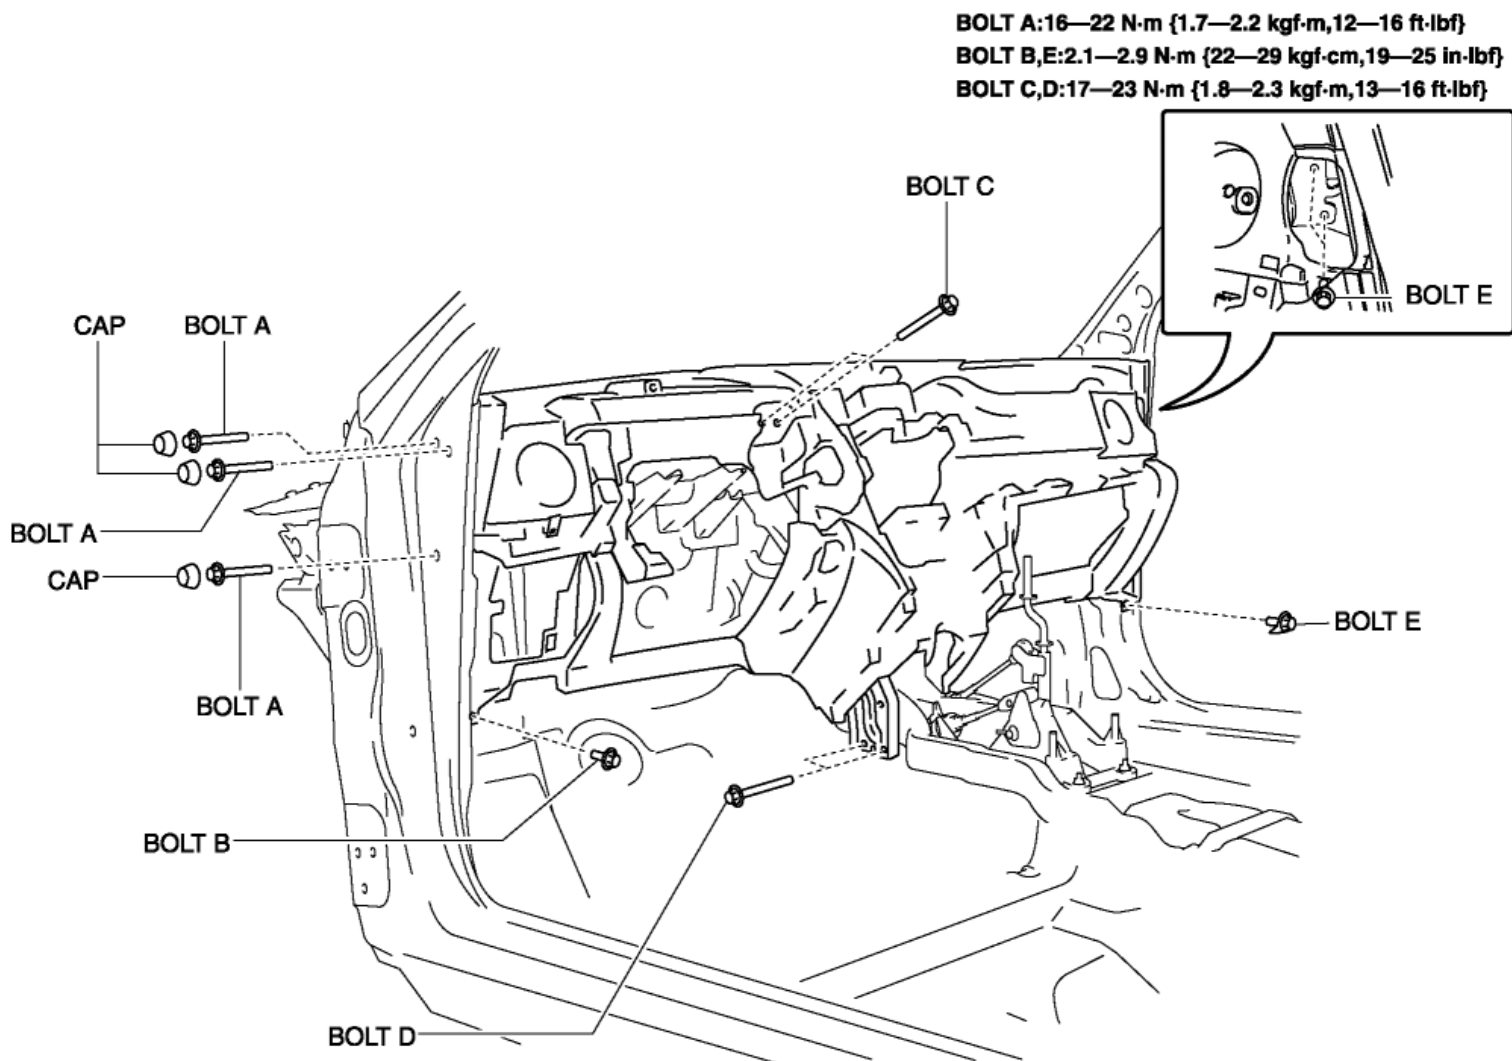

8. Raise the back side of the dashboard rotate it in the direction of the arrow shown in the figure.

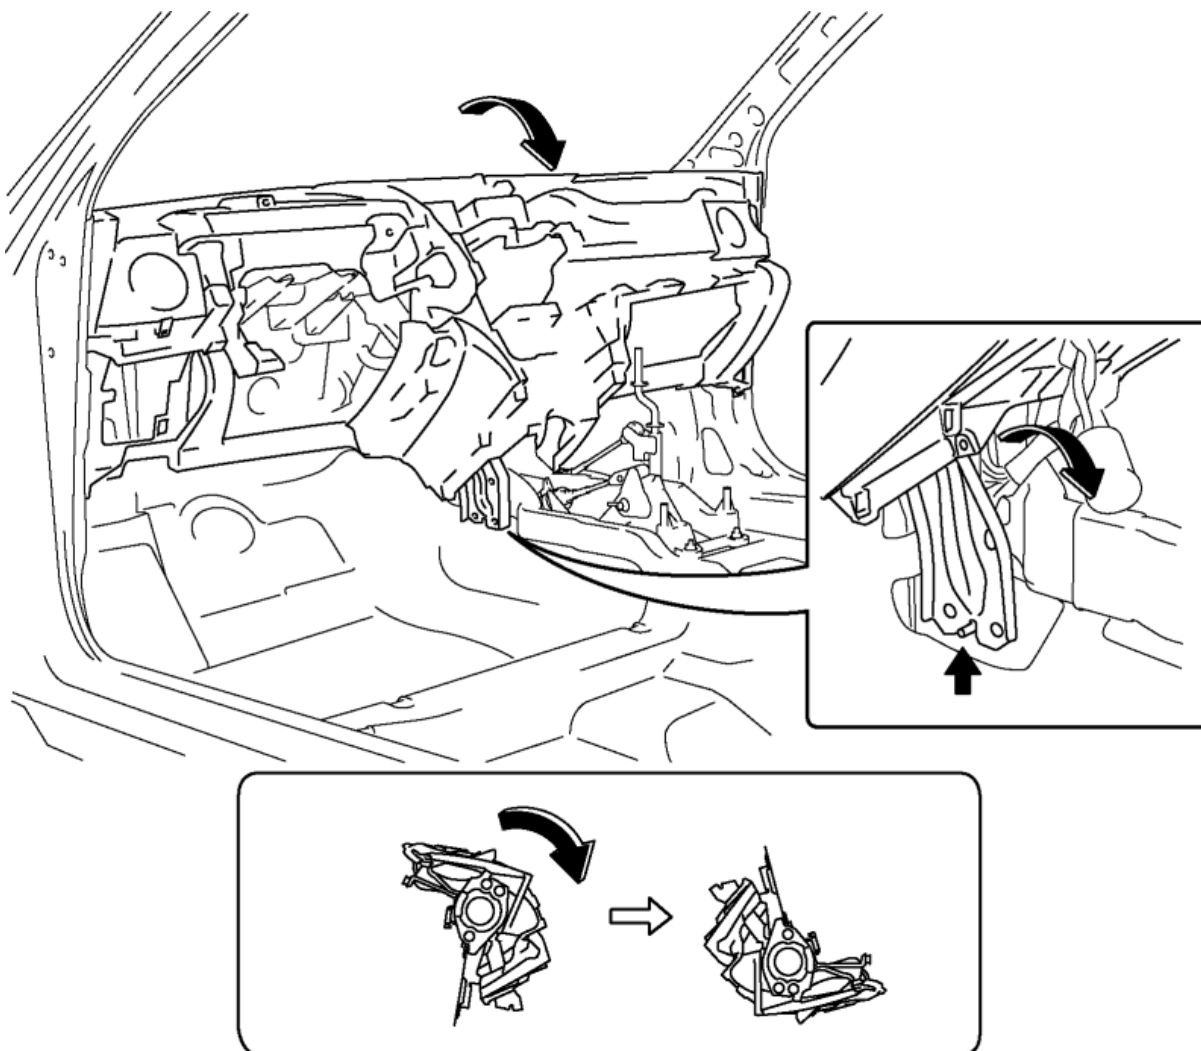

9. Take the dashboard out through the opened driver's door.

10. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)


© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories


DASHBOARD REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Glove compartment (See [GLOVE COMPARTMENT REMOVAL/ INSTALLATION.](#))
 - b. Dashboard under cover (See [DASHBOARD UNDER COVER REMOVAL/ INSTALLATION.](#))
 - c. Front scuff plates (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - d. Front side trims (See [FRONT SIDE TRIM REMOVAL/ INSTALLATION.](#))
 - e. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - f. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - g. Shift lever knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
 - h. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - i. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - j. Climate control unit (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[FULL-AUTO AIR CONDITIONER\].](#)) (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[MANUAL AIR CONDITIONER\].](#))
 - k. Rear console (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
 - l. Hood release lever (See [HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.](#))
 - m. Lower panel (See [LOWER PANEL REMOVAL/ INSTALLATION.](#))
 - n. Driver-side air bag module (See [DRIVER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.](#))
 - o. Steering wheel (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))
 - p. Column cover (See [COLUMN COVER REMOVAL/ INSTALLATION.](#))
 - q. Combination switch (See [COMBINATION SWITCH REMOVAL/ INSTALLATION.](#))
 - r. Meter hood (See [METER HOOD REMOVAL/ INSTALLATION.](#))
 - s. Instrument cluster (See [INSTRUMENT CLUSTER REMOVAL/ INSTALLATION.](#))
 - t. Center panel upper (See [CENTER PANEL UPPER REMOVAL/ INSTALLATION.](#))
 - u. Audio unit (Vehicles with audio system) (See [AUDIO UNIT REMOVAL/ INSTALLATION.](#))
 - v. Car-navigation unit (Vehicles with car-navigation system) (See [CAR-NAVIGATION UNIT REMOVAL/ INSTALLATION.](#))
 - w. Steering shaft cover (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))
 - x. Steering shaft (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))
 - y. Side panel (See [SIDE PANEL REMOVAL/ INSTALLATION.](#))
 - z. SIRIUS satellite radio unit (See [SIRIUS SATELLITE RADIO UNIT REMOVAL/ INSTALLATION.](#))
 - aa. Passenger-side air bag module (See [PASSENGER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.](#))
 - ab. A-pillar trims (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
3. Disconnect antenna feeder No.1 clip from the A-pillar inner panel.
4. Disconnect the washer hose. (See [WINDSHIELD WASHER HOSE REMOVAL/ INSTALLATION.](#))
5. Disconnect the dashboard wiring harness connectors.

6. Remove the caps.
7. Remove bolts A, B, C, D and E.

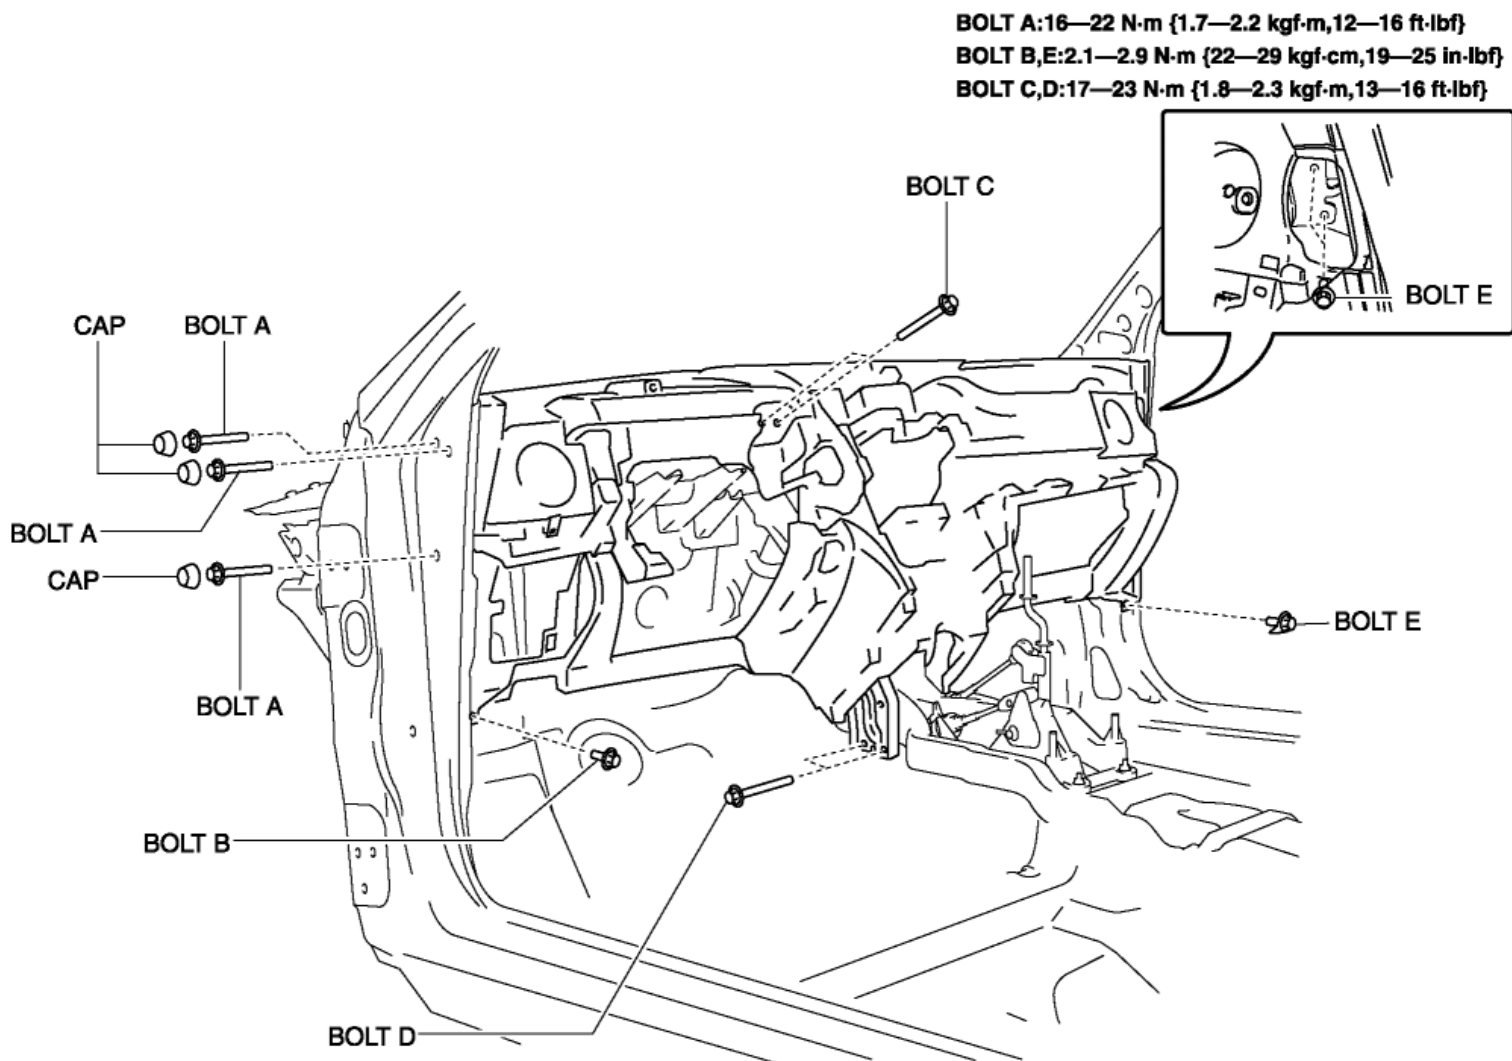

8. Raise the back side of the dashboard rotate it in the direction of the arrow shown in the figure.

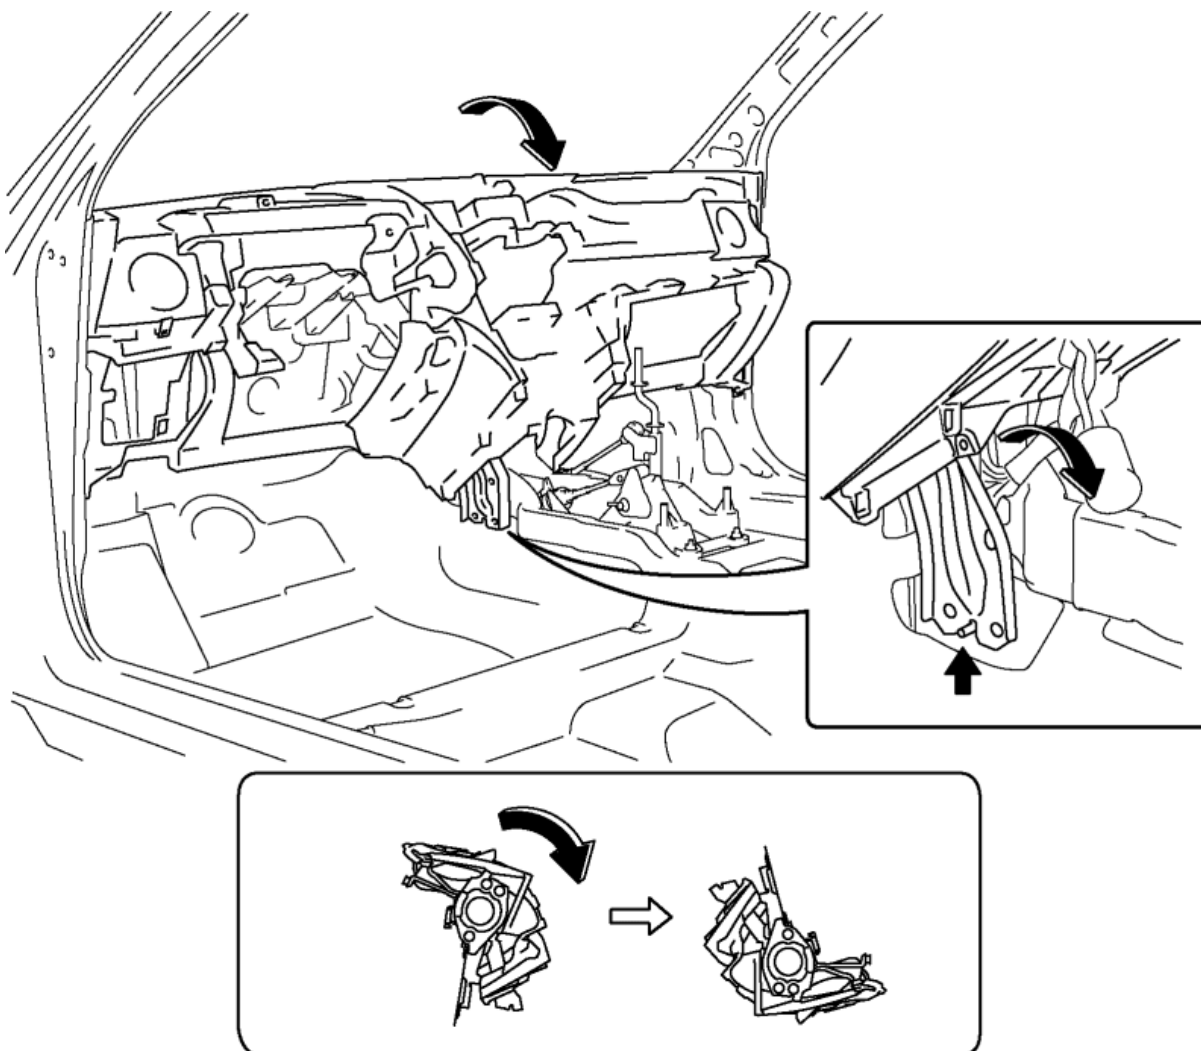

9. Take the dashboard out through the opened driver's door.

10. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.