


## 2012 - Mazda6 - Body and Accessories

### GLOVE COMPARTMENT REMOVAL/ INSTALLATION


#### CAUTION:

- If the glove compartment is closed without being joined to the stay damper, the stay damper may be damaged. Verify that the stay damper is joined to the glove compartment before closing the glove compartment.


1. Pull the stay damper in the direction of the arrow shown in the figure, and detach the connecting part between the glove compartment and the stay damper.

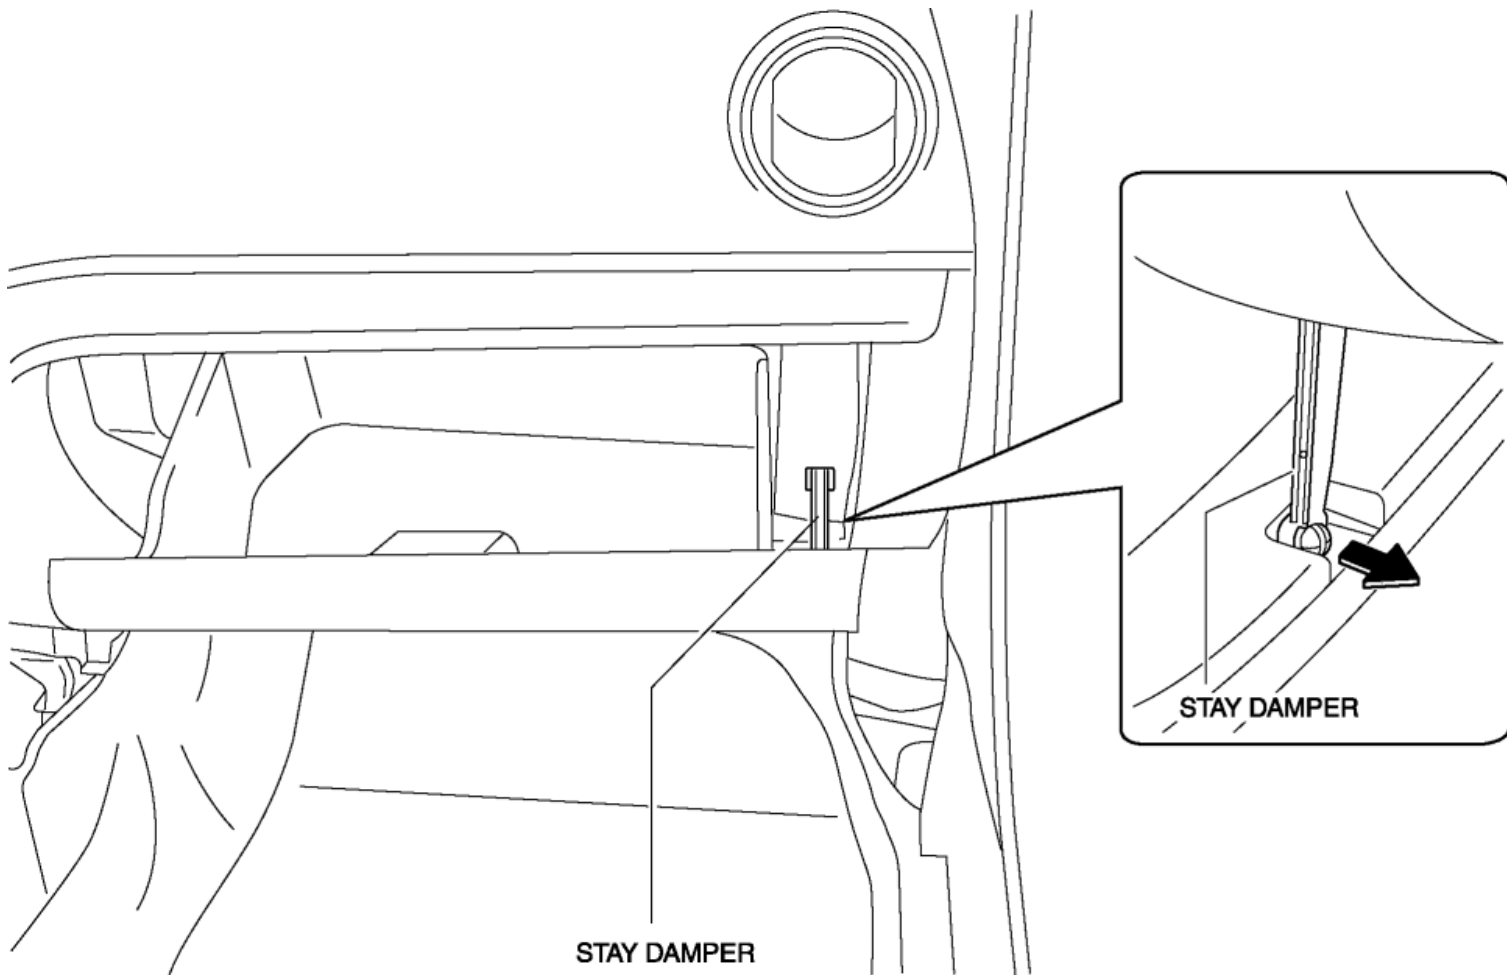

2. Push both ends of the inner-side glove compartment in the direction of the arrow shown in the figure.

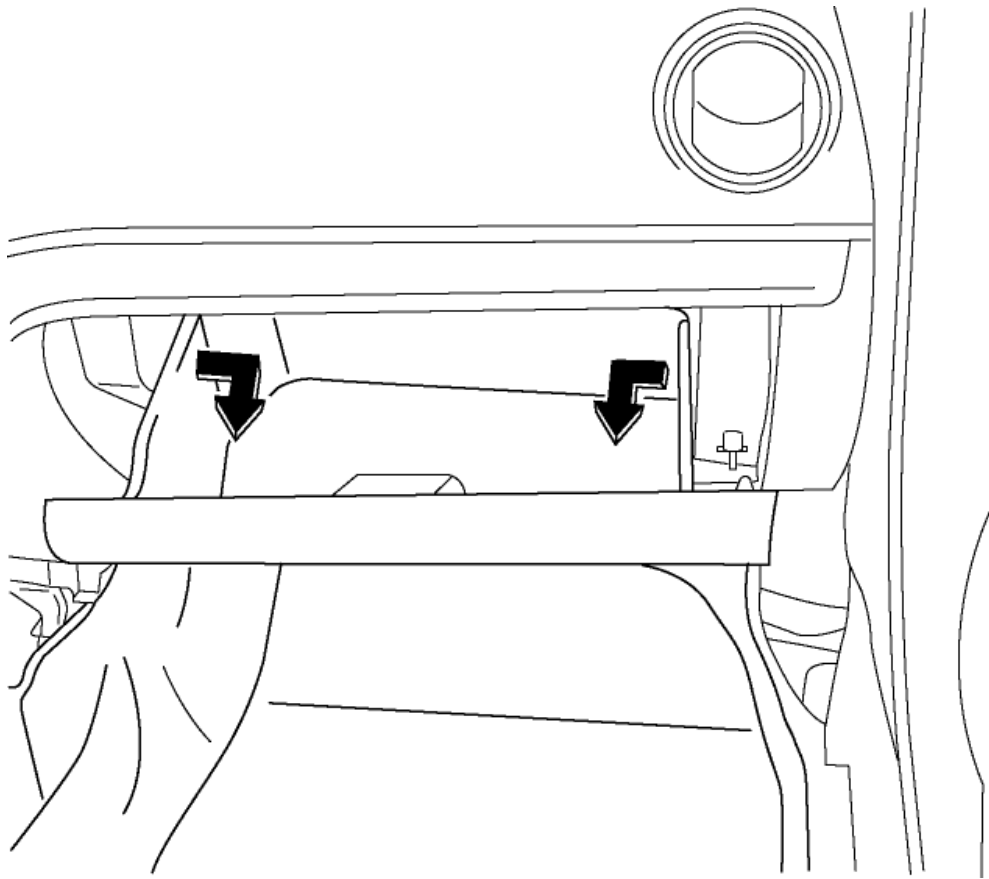

3. Lower the glove compartment in the direction of the arrow shown in the figure.

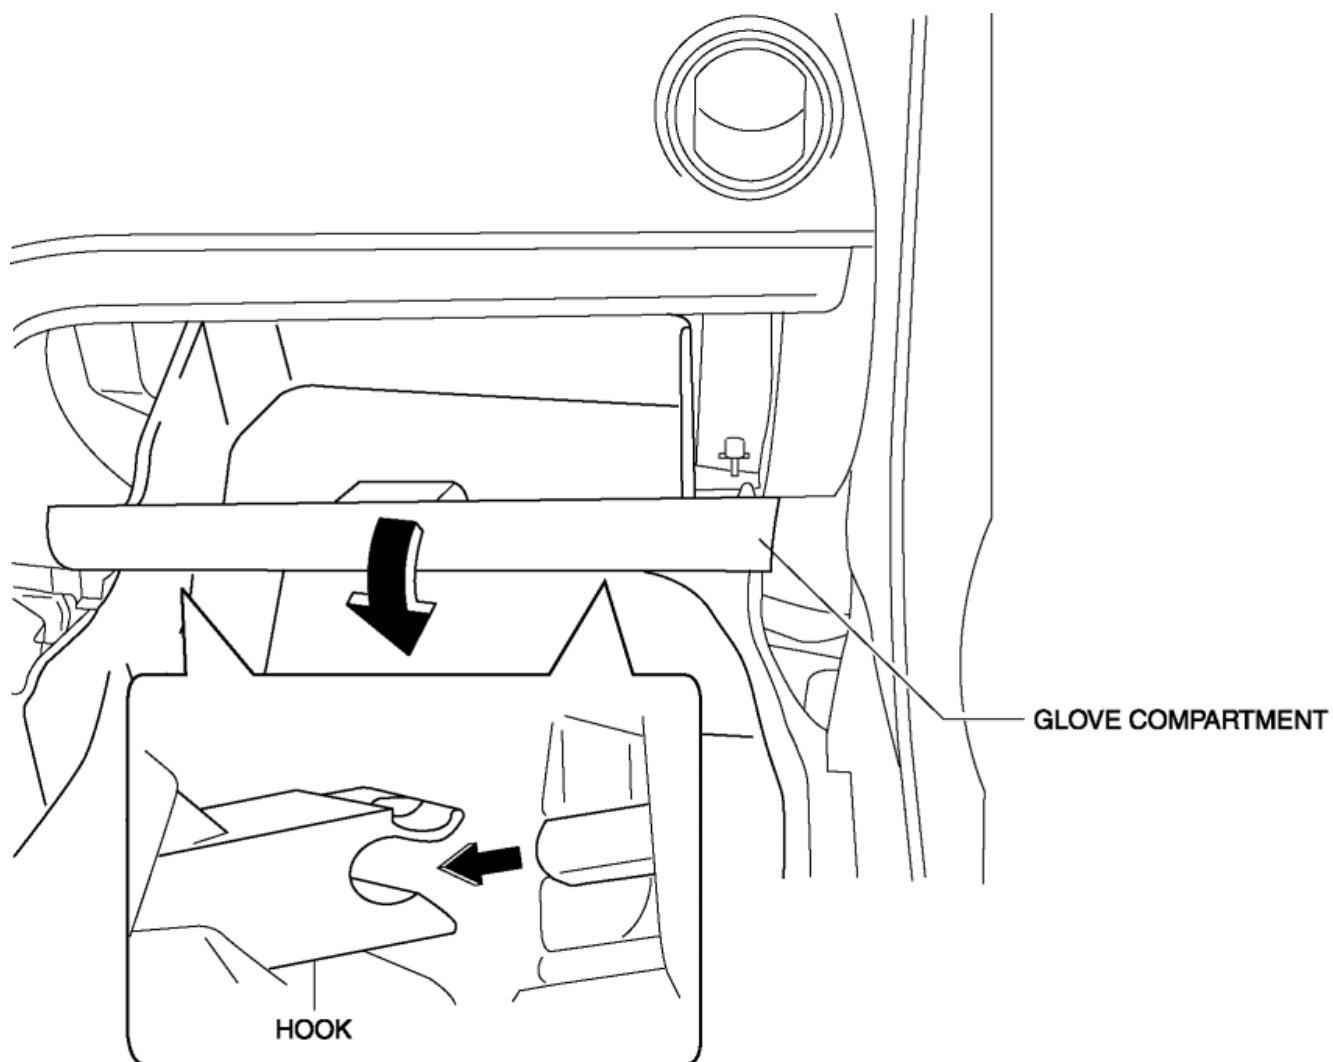

4. Detach the hook from the dashboard in the direction of the arrow shown in the figure and remove the glove compartment.
5. Install in the reverse order of removal.


## 2012 - Mazda6 - Body and Accessories

### GLOVE COMPARTMENT REMOVAL/ INSTALLATION


#### CAUTION:

- If the glove compartment is closed without being joined to the stay damper, the stay damper may be damaged. Verify that the stay damper is joined to the glove compartment before closing the glove compartment.


1. Pull the stay damper in the direction of the arrow shown in the figure, and detach the connecting part between the glove compartment and the stay damper.

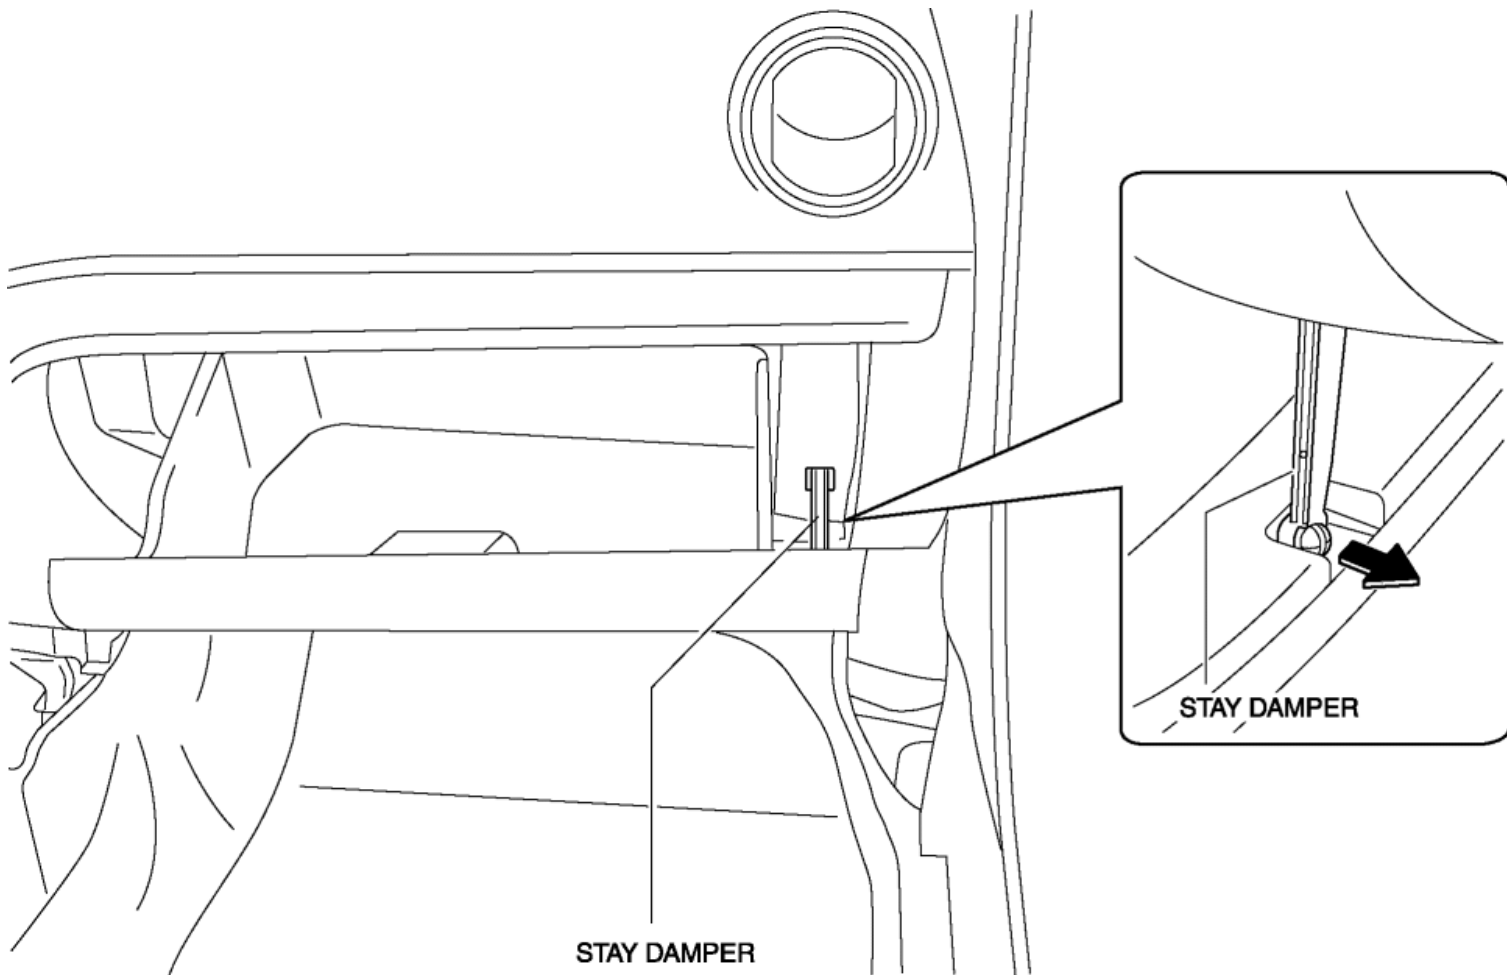

2. Push both ends of the inner-side glove compartment in the direction of the arrow shown in the figure.

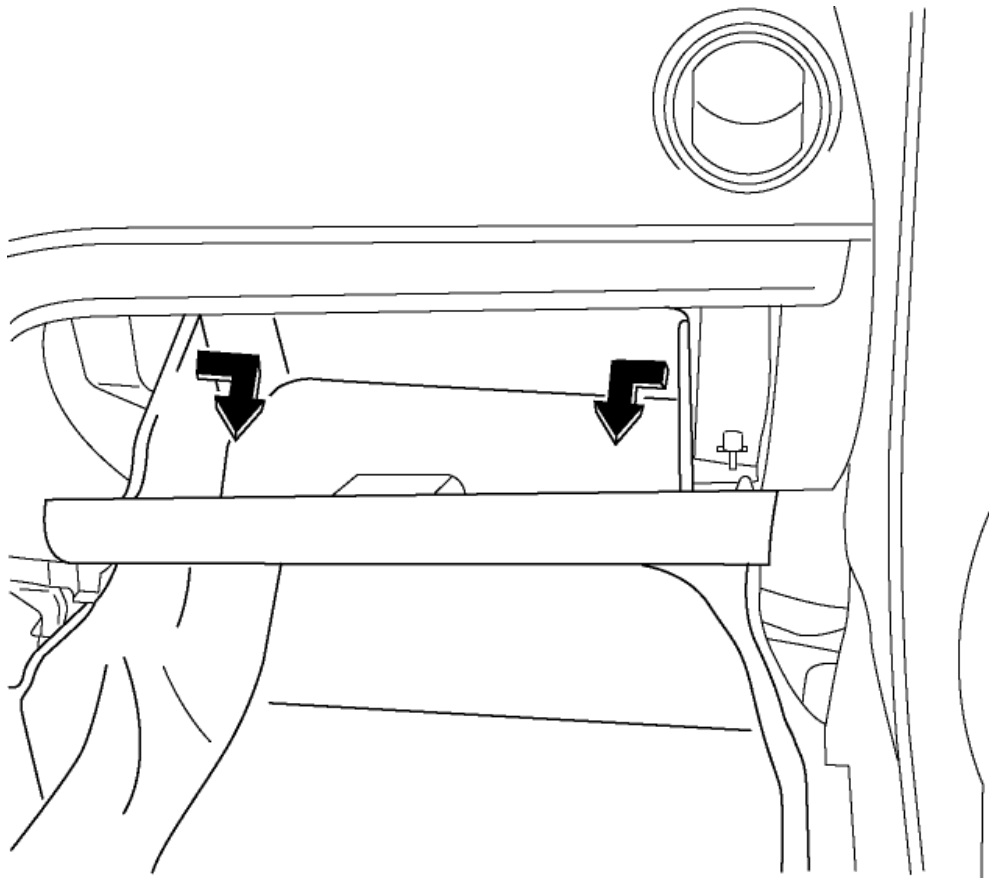

3. Lower the glove compartment in the direction of the arrow shown in the figure.

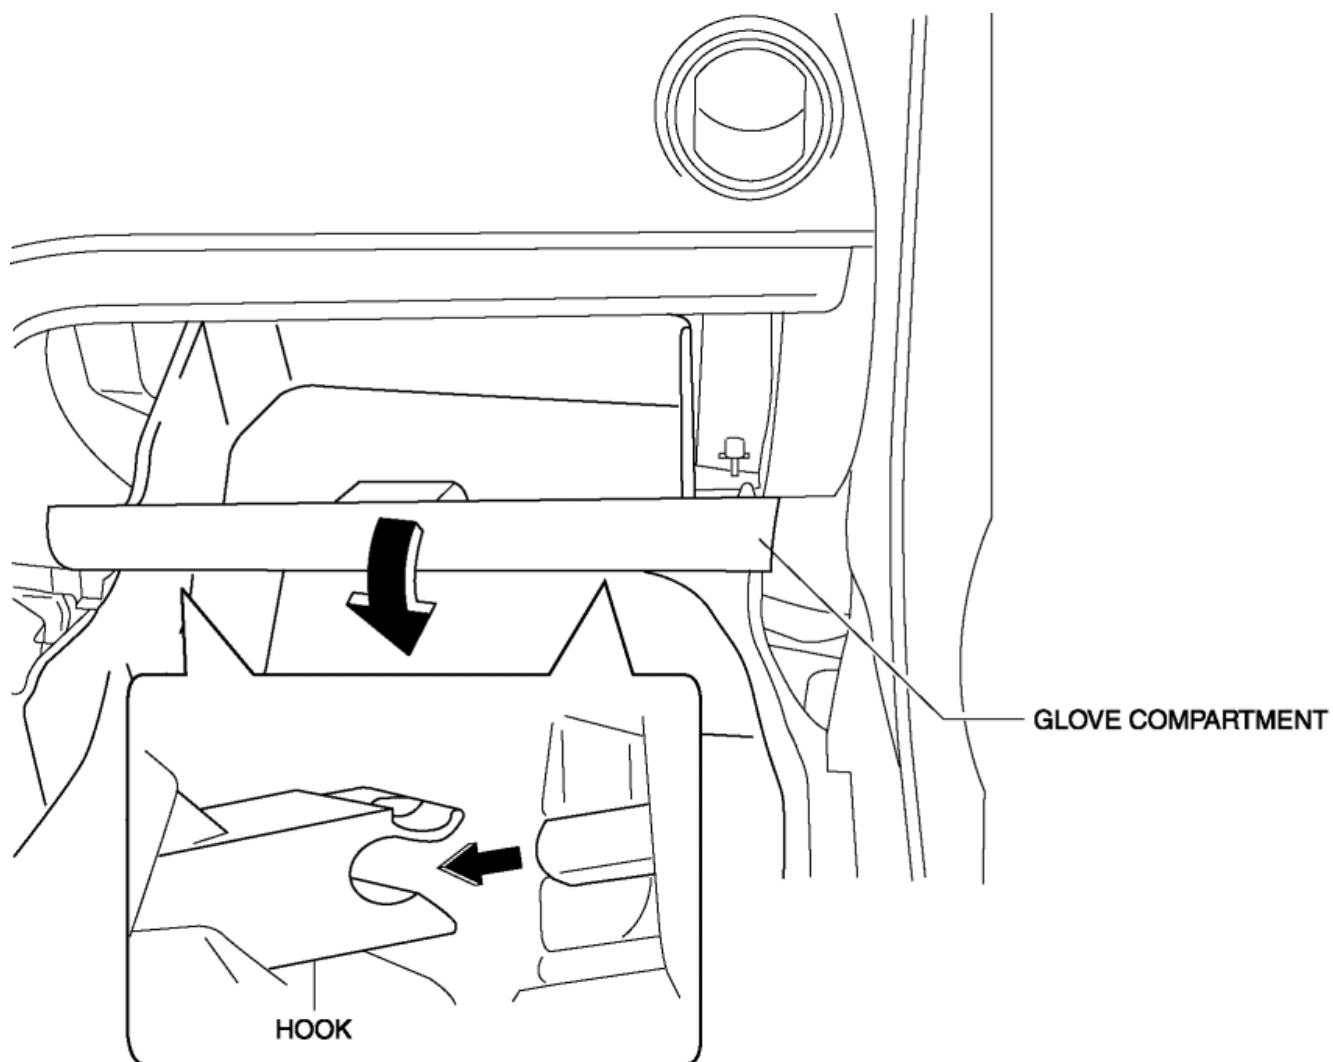

4. Detach the hook from the dashboard in the direction of the arrow shown in the figure and remove the glove compartment.
5. Install in the reverse order of removal.