


2012 - Mazda6 - Body and Accessories

FRONT SCUFF PLATE REMOVAL/ INSTALLATION

1. Detach tabs A while pulling the front scuff plate in the direction of the arrow (1) shown in the figure, then detach tabs B, pins C, clips D, pin E and guides F while pulling in the direction of the arrow (2).

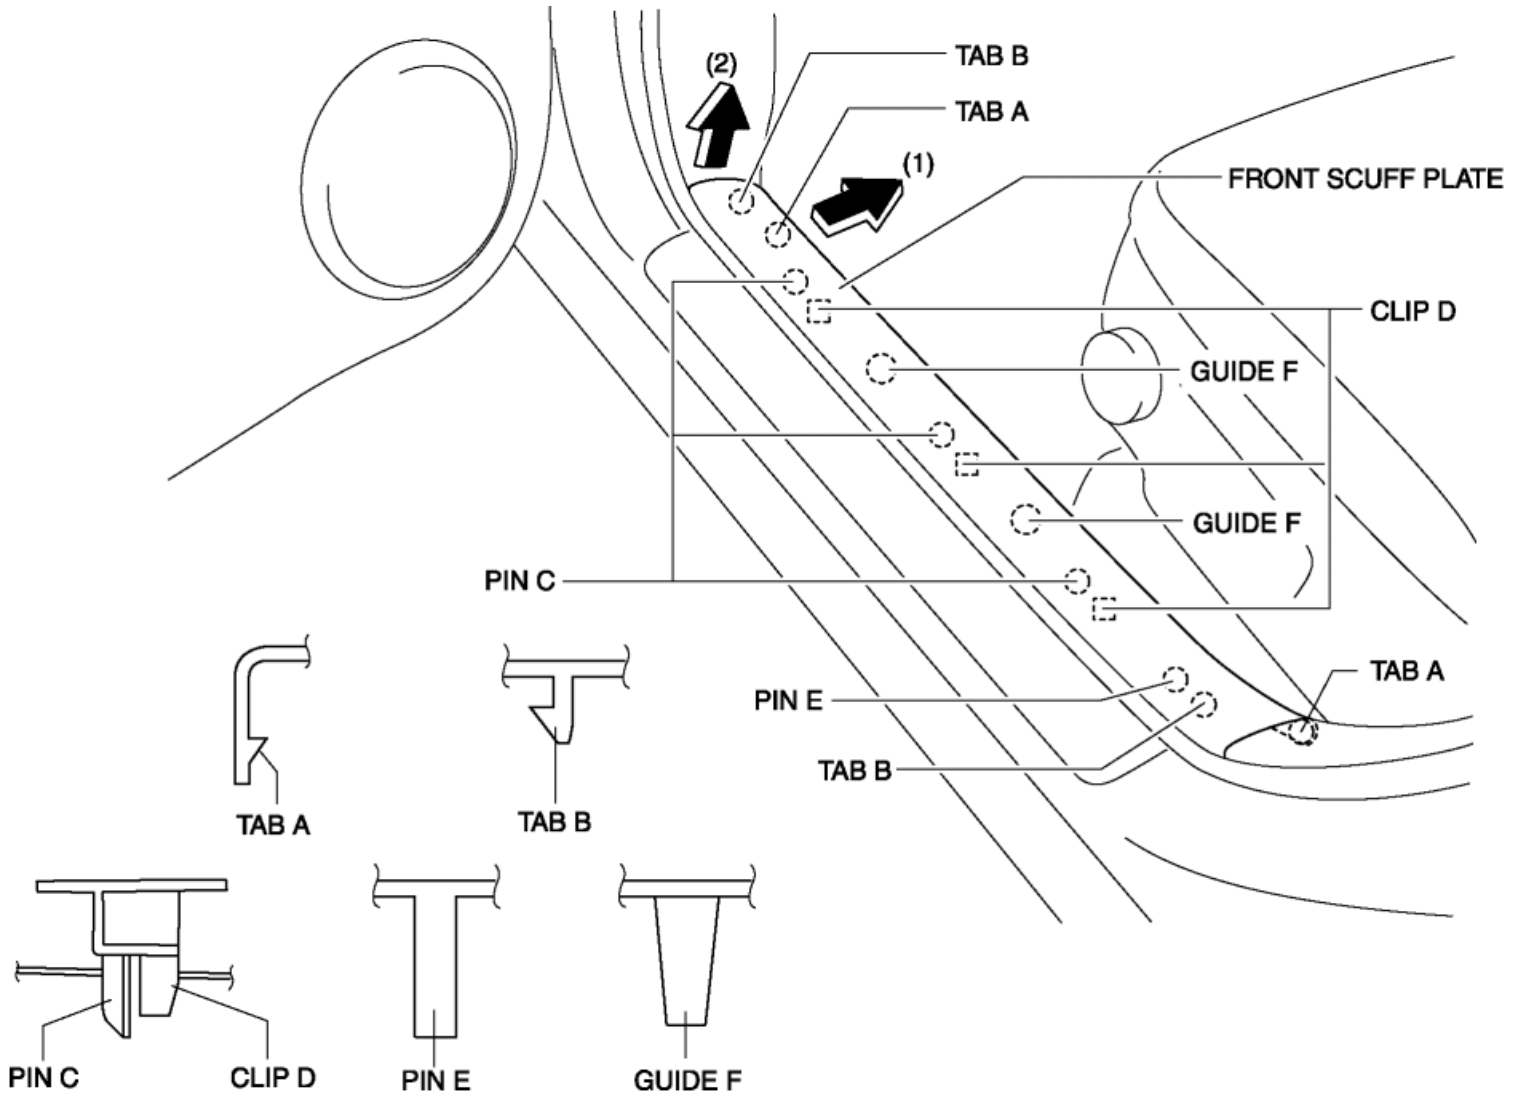


2. Remove the front scuff plate.
3. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

FRONT SCUFF PLATE REMOVAL/ INSTALLATION

1. Detach tabs A while pulling the front scuff plate in the direction of the arrow (1) shown in the figure, then detach tabs B, pins C, clips D, pin E and guides F while pulling in the direction of the arrow (2).

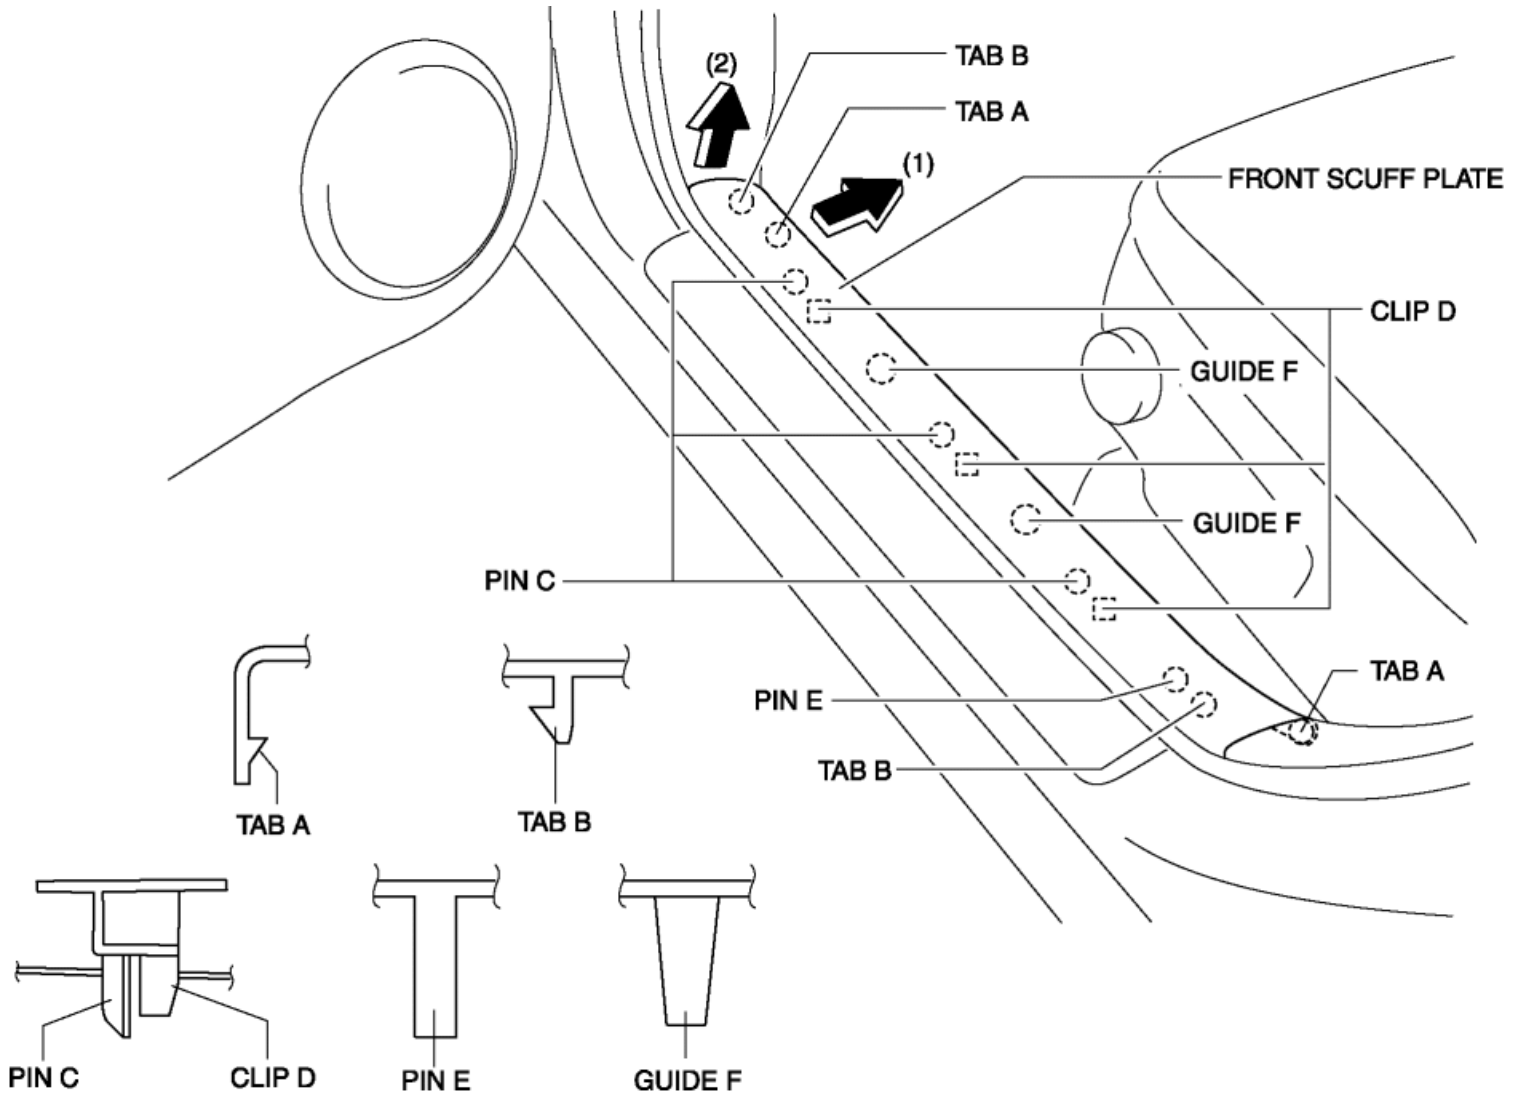

2. Remove the front scuff plate.
3. Install in the reverse order of removal.