


2012 - Mazda6 - Body and Accessories

REAR SCUFF PLATE REMOVAL/ INSTALLATION

1. Remove the rear seat cushion. (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION](#).)
2. Remove the fastener A.
3. Detach tab B while pulling the rear scuff plate in the direction of the arrow (1) shown in the figure, then detach tab C, pin D, E, clip F and G while pulling in the direction of the arrow (2).

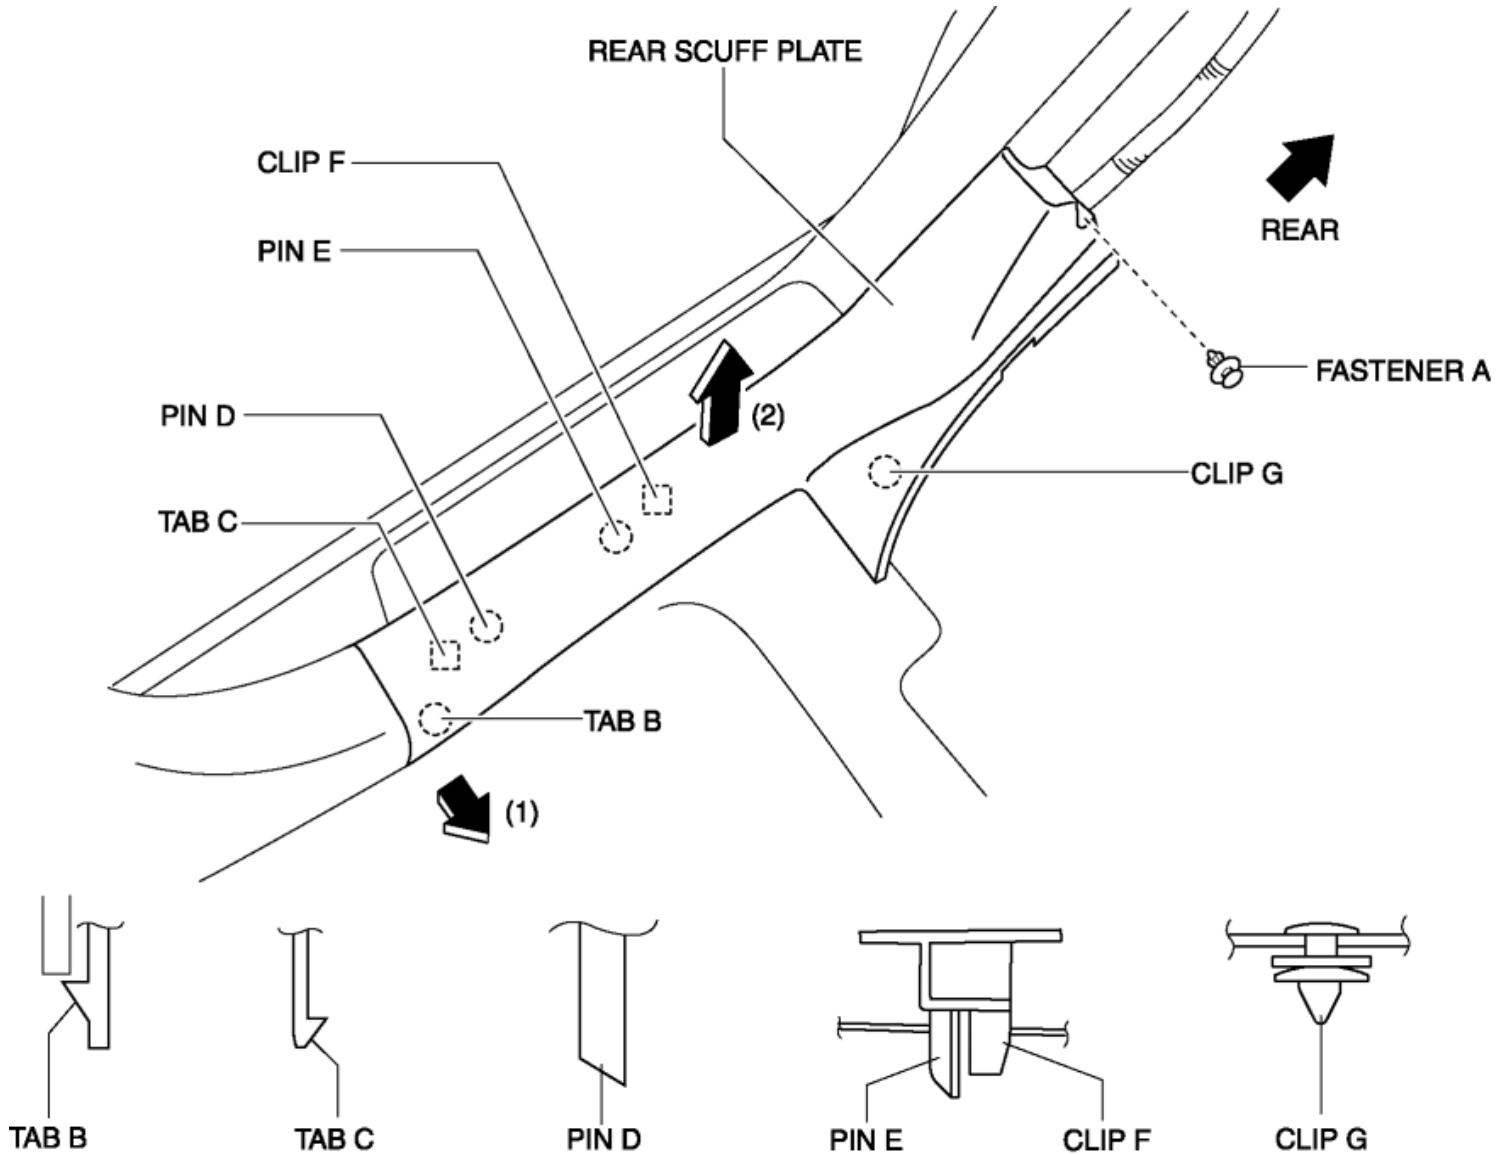


4. Remove the rear scuff plate.
5. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

REAR SCUFF PLATE REMOVAL/ INSTALLATION

1. Remove the rear seat cushion. (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION](#).)
2. Remove the fastener A.
3. Detach tab B while pulling the rear scuff plate in the direction of the arrow (1) shown in the figure, then detach tab C, pin D, E, clip F and G while pulling in the direction of the arrow (2).

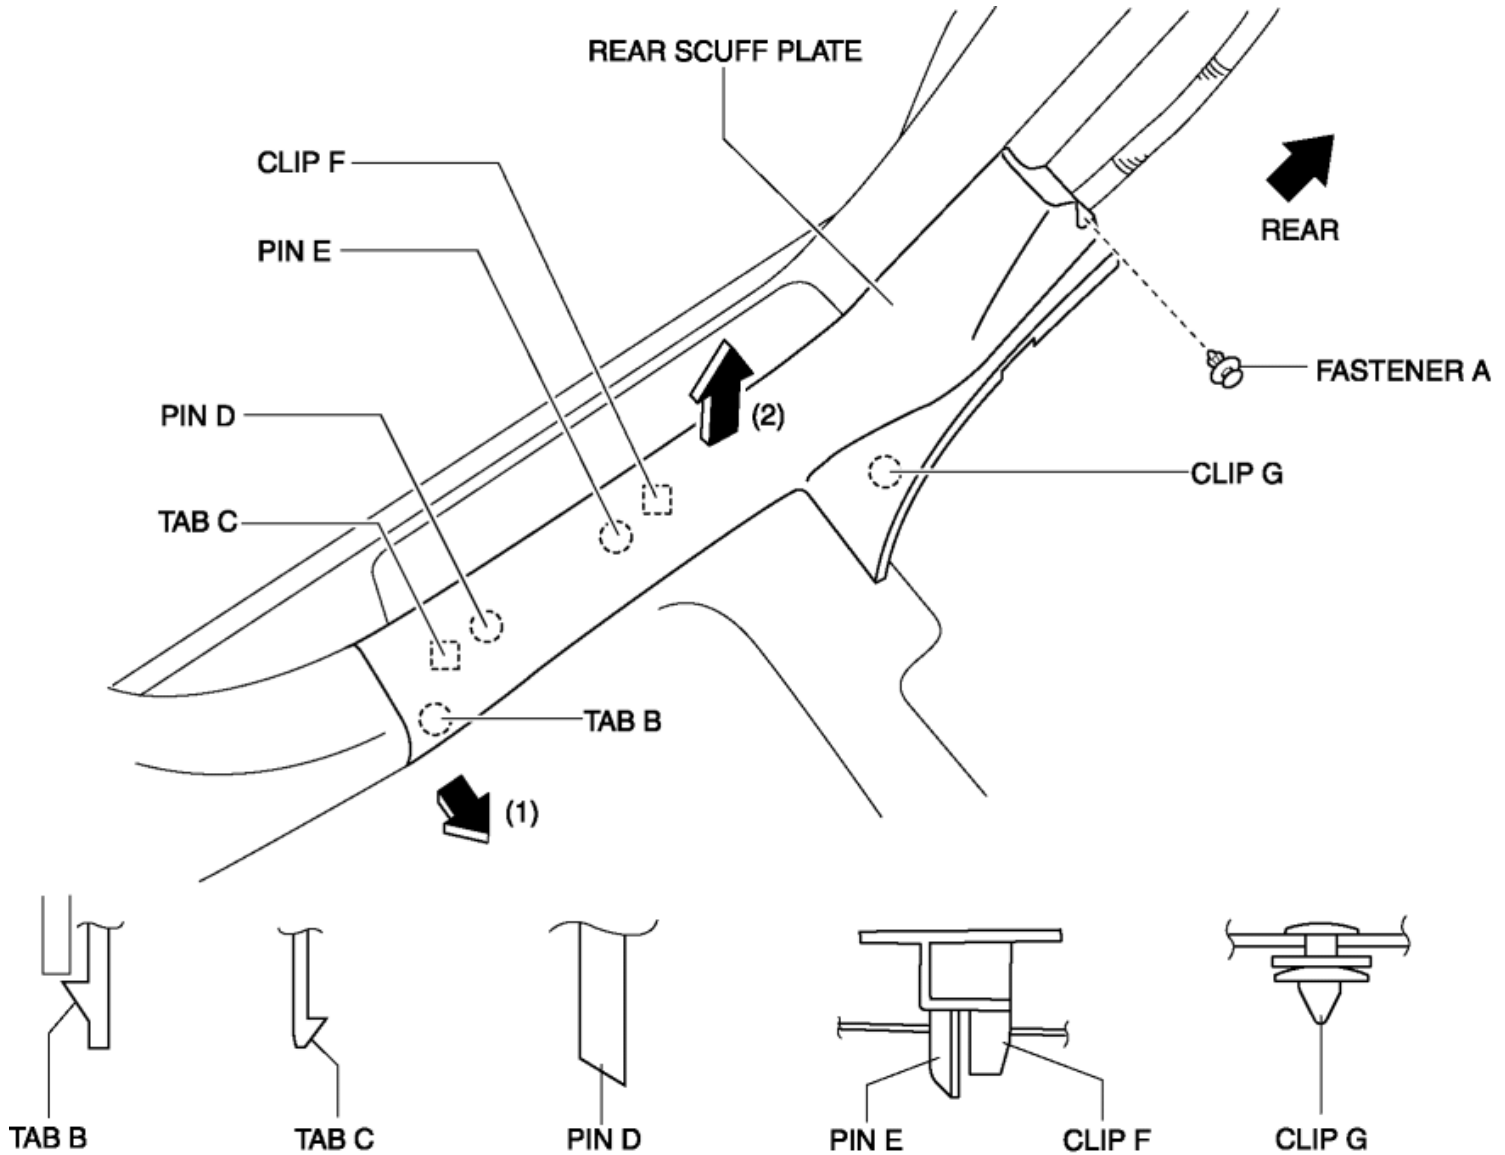

4. Remove the rear scuff plate.
5. Install in the reverse order of removal.