


2012 - Mazda6 - Body and Accessories



HEADLINER REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Partially peel back the seaming welt.
3. Remove the rain sensor cover. (Vehicles with auto light/wiper system) (See [RAIN SENSOR REMOVAL/ INSTALLATION](#))
4. Disconnect the rain sensor connector. (Vehicles auto light/wiper system)
5. Remove the following parts:
 - a. Sunroof seaming welt (vehicles with sunroof system)
 - b. A-pillar trims (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
 - c. Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - d. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - e. B-pillar lower trims (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.](#))
 - f. Front seat belt upper anchor installation bolts (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
 - g. B-pillar upper trims (See [B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION.](#))
 - h. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
 - i. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
 - j. C-pillar trims (See [C-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
6. Disconnect the auto-dimming mirror connector. (vehicles with auto-dimming mirror)
7. Remove the sunvisors. (See [SUNVISOR REMOVAL/ INSTALLATION](#))
8. Remove the map light. (See [MAP LIGHT REMOVAL/ INSTALLATION](#))
9. Remove the assist handle. (See [ASSIST HANDLE REMOVAL/ INSTALLATION](#))
10. Disconnect the roof harness connector, remove the clip, and remove the connector.
11. Remove the fasteners.

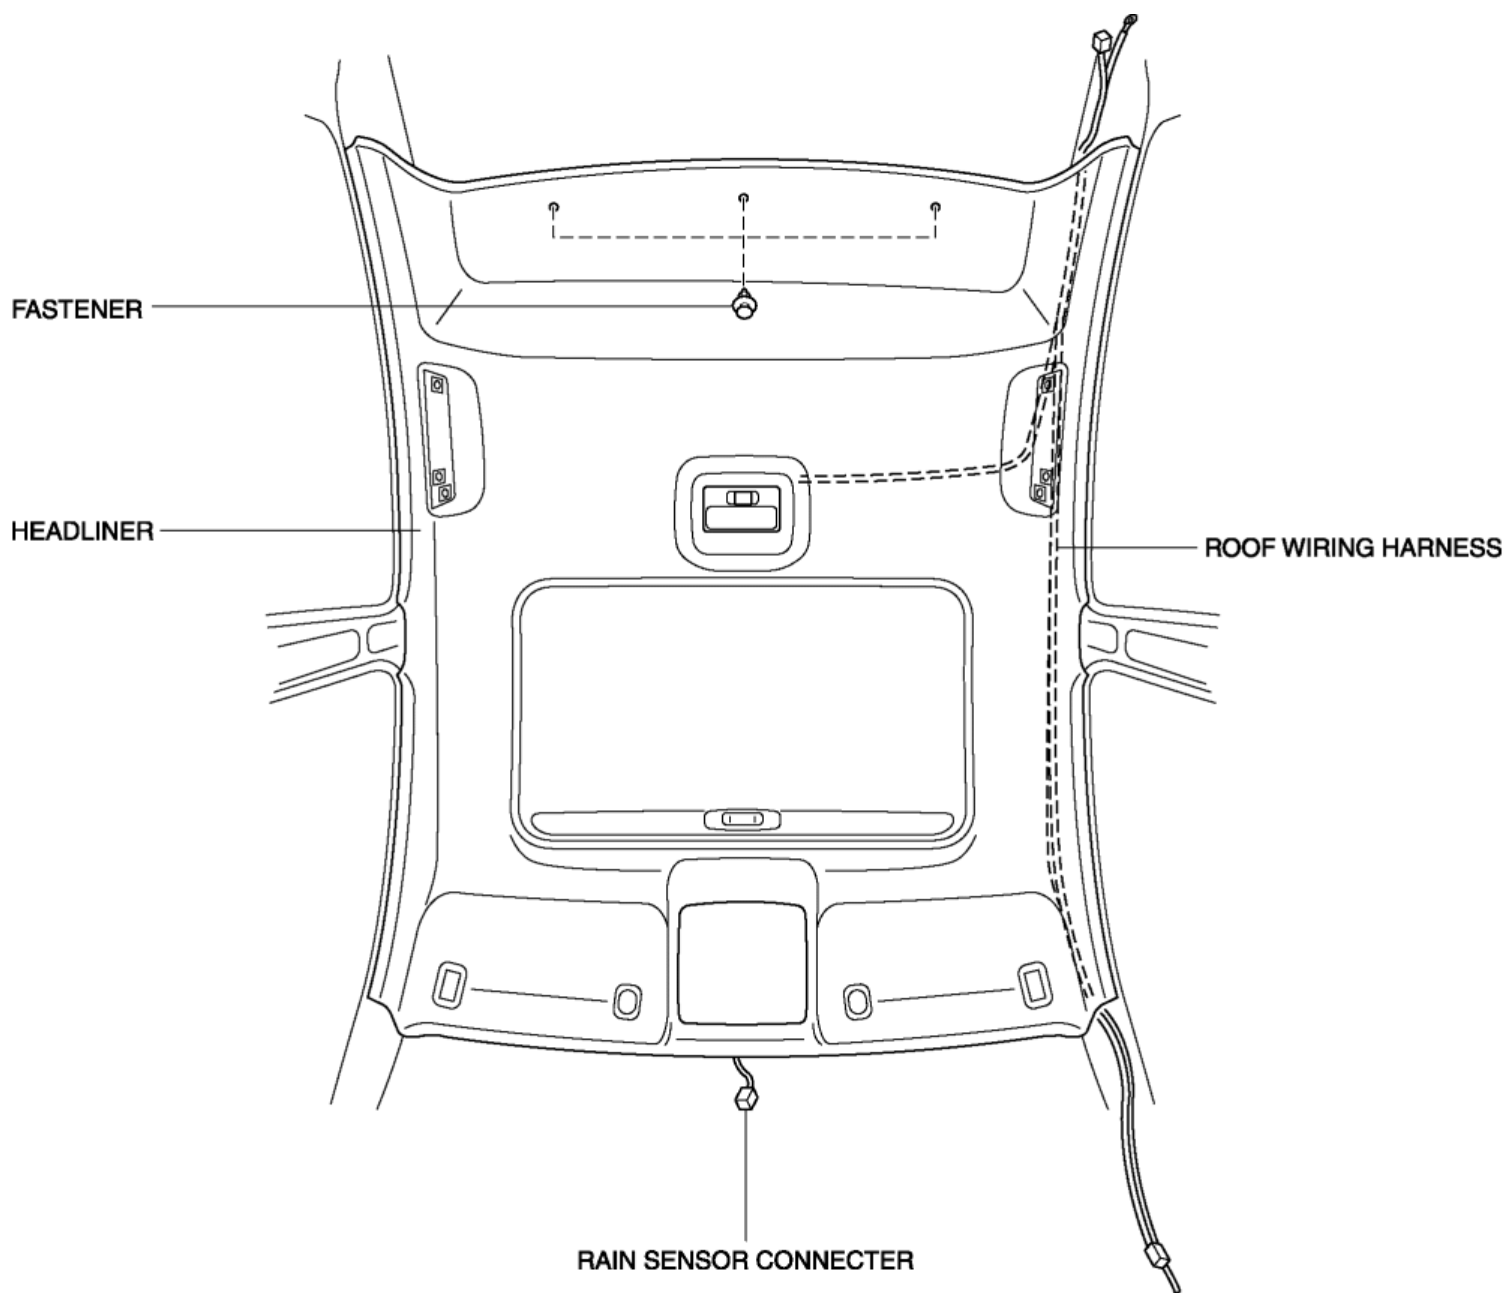

12. Remove the retainer holding the roof panel and remove the headliner.

13. Take the headliner off from the passenger-side door opening.

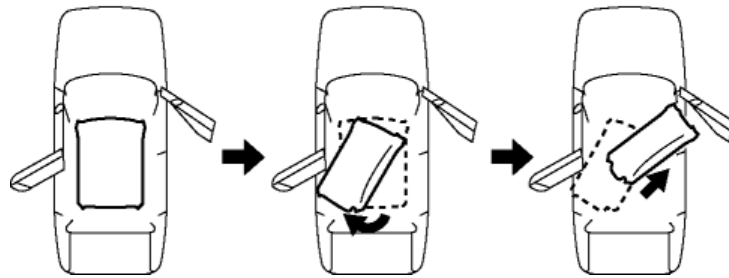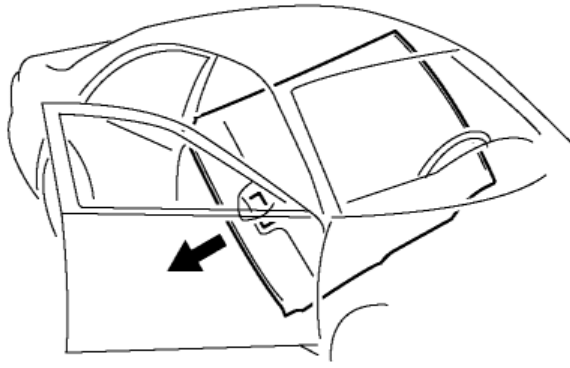

14. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)

2012 - Mazda6 - Body and Accessories



HEADLINER REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Partially peel back the seaming welt.
3. Remove the rain sensor cover. (Vehicles with auto light/wiper system) (See [RAIN SENSOR REMOVAL/ INSTALLATION](#))
4. Disconnect the rain sensor connector. (Vehicles auto light/wiper system)
5. Remove the following parts:
 - a. Sunroof seaming welt (vehicles with sunroof system)
 - b. A-pillar trims (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
 - c. Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - d. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - e. B-pillar lower trims (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.](#))
 - f. Front seat belt upper anchor installation bolts (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
 - g. B-pillar upper trims (See [B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION.](#))
 - h. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
 - i. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
 - j. C-pillar trims (See [C-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
6. Disconnect the auto-dimming mirror connector. (vehicles with auto-dimming mirror)
7. Remove the sunvisors. (See [SUNVISOR REMOVAL/ INSTALLATION](#))
8. Remove the map light. (See [MAP LIGHT REMOVAL/ INSTALLATION](#))
9. Remove the assist handle. (See [ASSIST HANDLE REMOVAL/ INSTALLATION](#))
10. Disconnect the roof harness connector, remove the clip, and remove the connector.
11. Remove the fasteners.

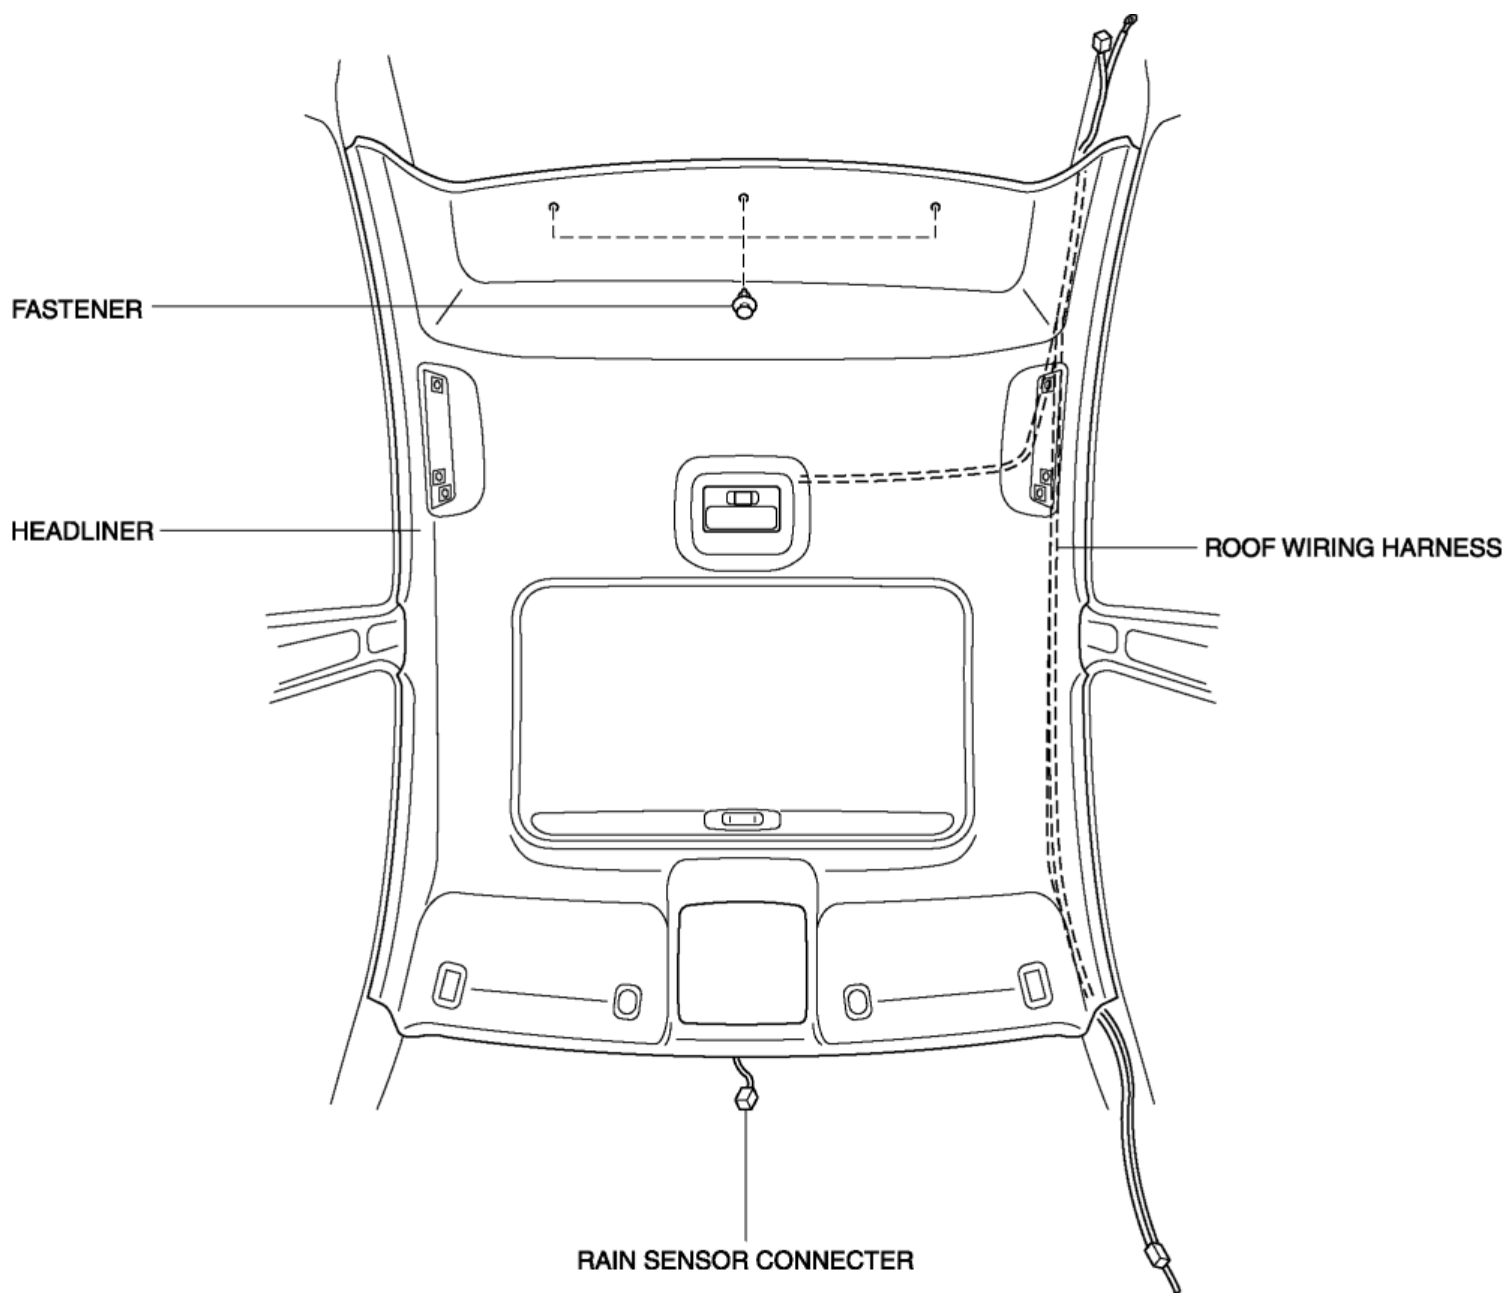

12. Remove the retainer holding the roof panel and remove the headliner.

13. Take the headliner off from the passenger-side door opening.

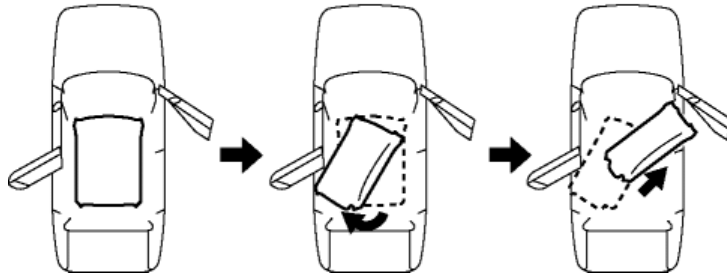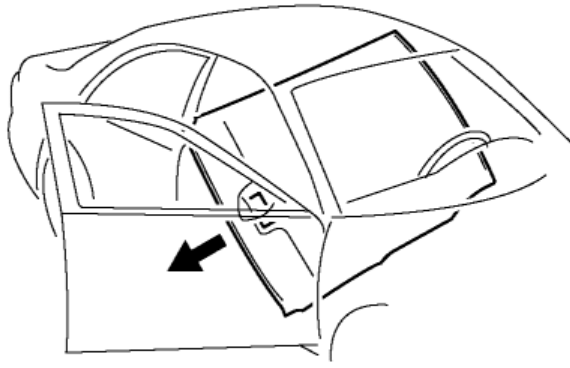

14. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)