


2012 - Mazda6 - Body and Accessories


ASSIST HANDLE REMOVAL/ INSTALLATION

Removal

1. Insert a fastener remover into the assist handle service hole and remove the assist handle cover.

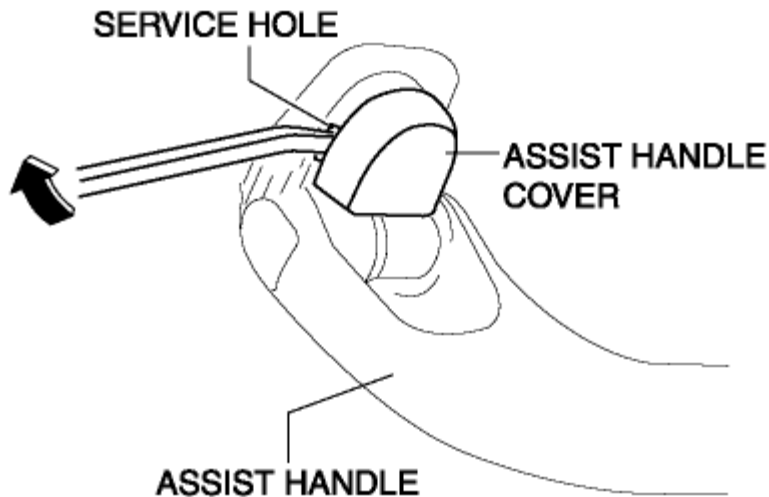

2. Insert the fastener remover in the position indicated by the arrow in the figure, push down the clip by moving the fastener remover in the direction of the arrow, and remove the assist handle from the assist handle bracket while shaking the assist handle up and down.

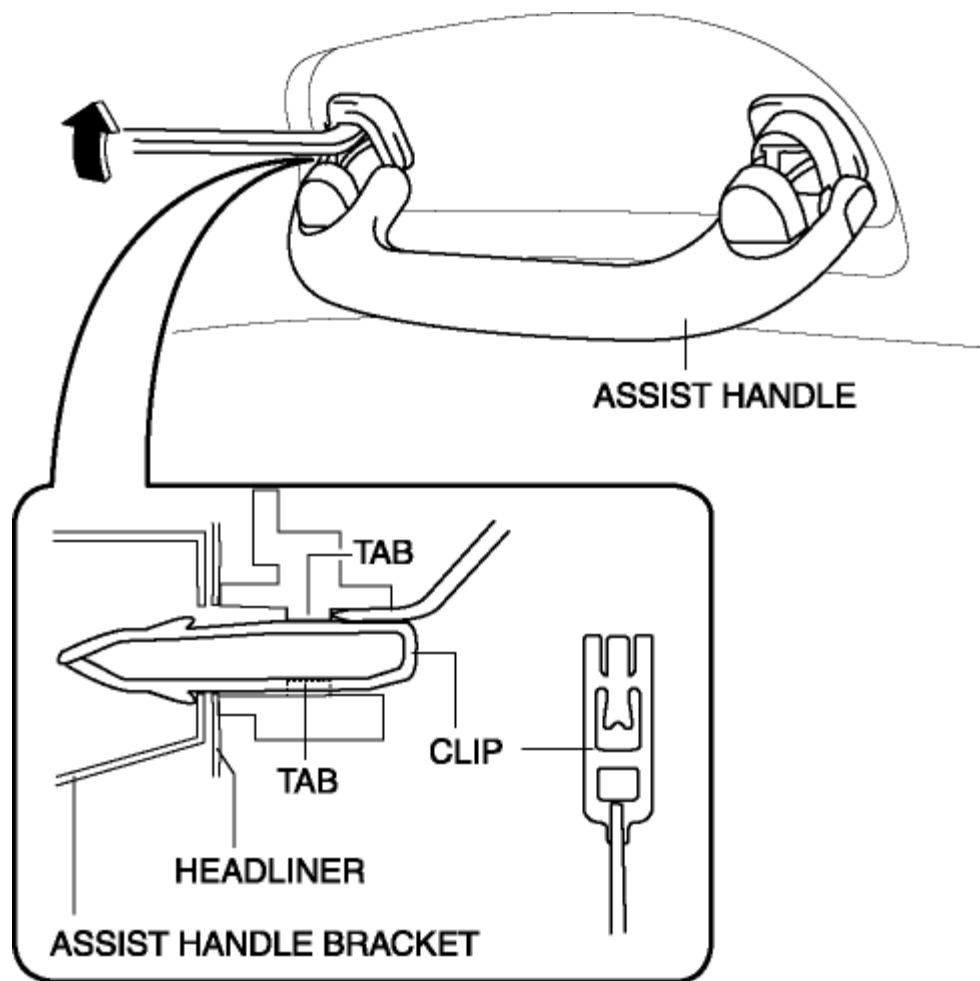


CAUTION:

- When inserting a fastener remover, be careful not to damage the tabs.

Installation

1. Insert the assist handle in the assist handle bracket.
2. Push the assist handle cover in the direction of the arrow shown in the figure to install the assist handle.

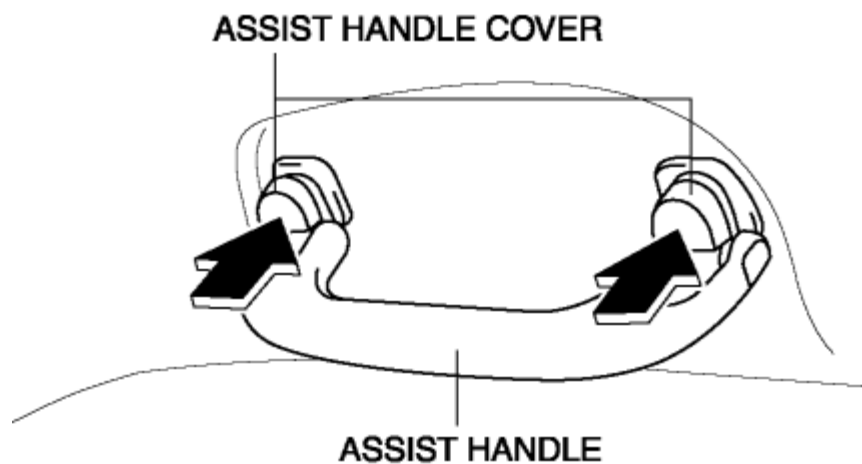


2012 - Mazda6 - Body and Accessories


ASSIST HANDLE REMOVAL/ INSTALLATION

Removal

1. Insert a fastener remover into the assist handle service hole and remove the assist handle cover.

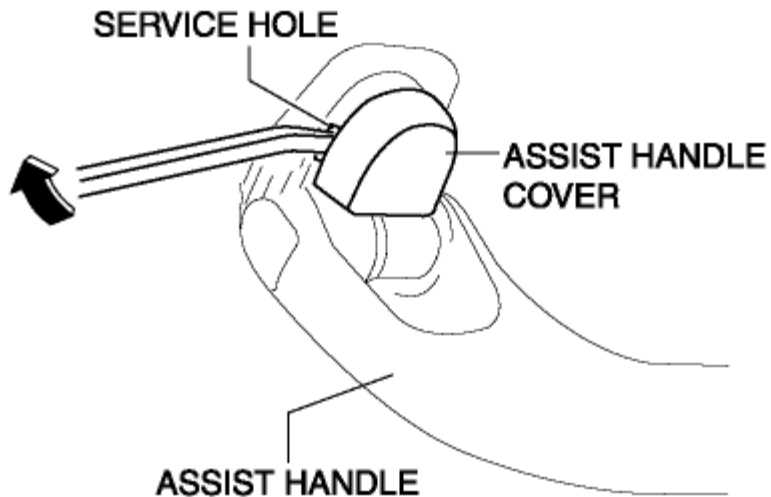

2. Insert the fastener remover in the position indicated by the arrow in the figure, push down the clip by moving the fastener remover in the direction of the arrow, and remove the assist handle from the assist handle bracket while shaking the assist handle up and down.

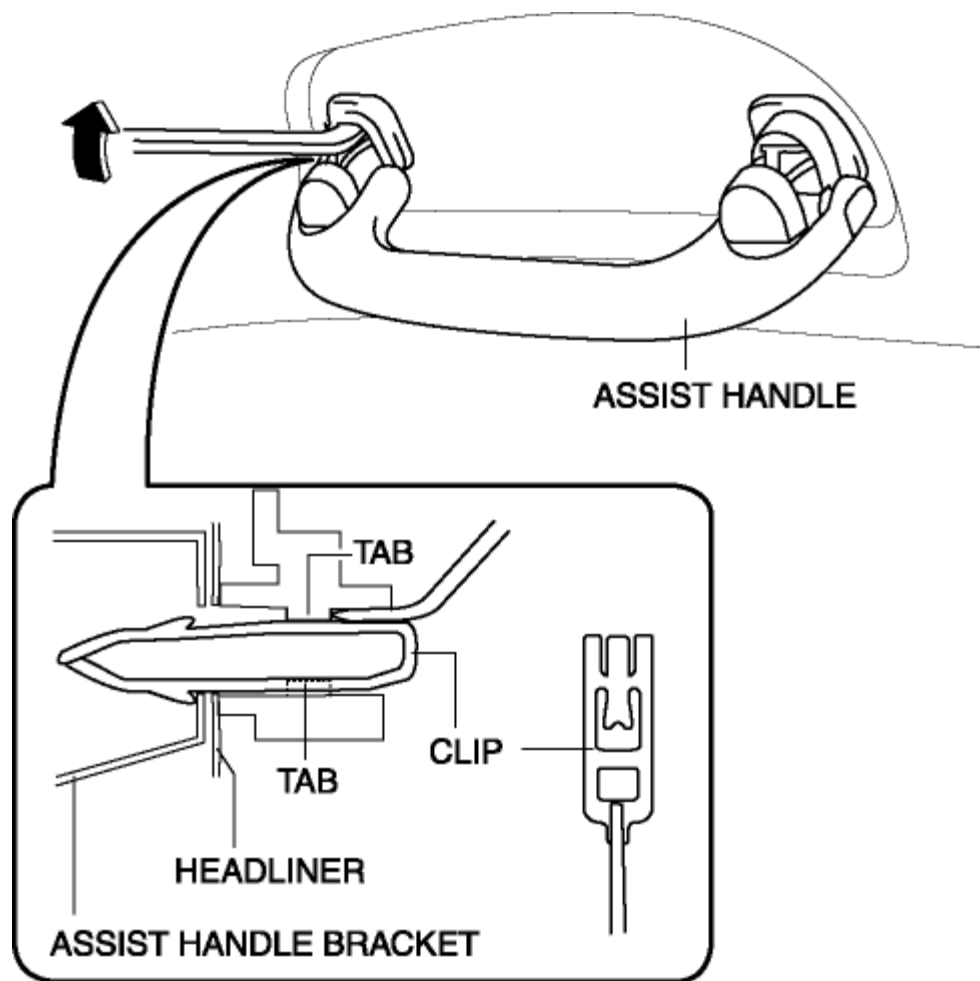

CAUTION:

- When inserting a fastener remover, be careful not to damage the tabs.

Installation

1. Insert the assist handle in the assist handle bracket.
2. Push the assist handle cover in the direction of the arrow shown in the figure to install the assist handle.

