


2012 - Mazda6 - Body and Accessories

B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION

1. Remove the front scuff plate. (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION](#))
2. Remove the rear scuff plate. (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION](#))
3. Partially peel back the seaming welt.
4. Pull the B-pillar lower trim in the direction of the arrow (1), (2), (3) shown in the figure, detach pin A, tab B, clip C, pin D, and clip E then remove the B-pillar lower trim.

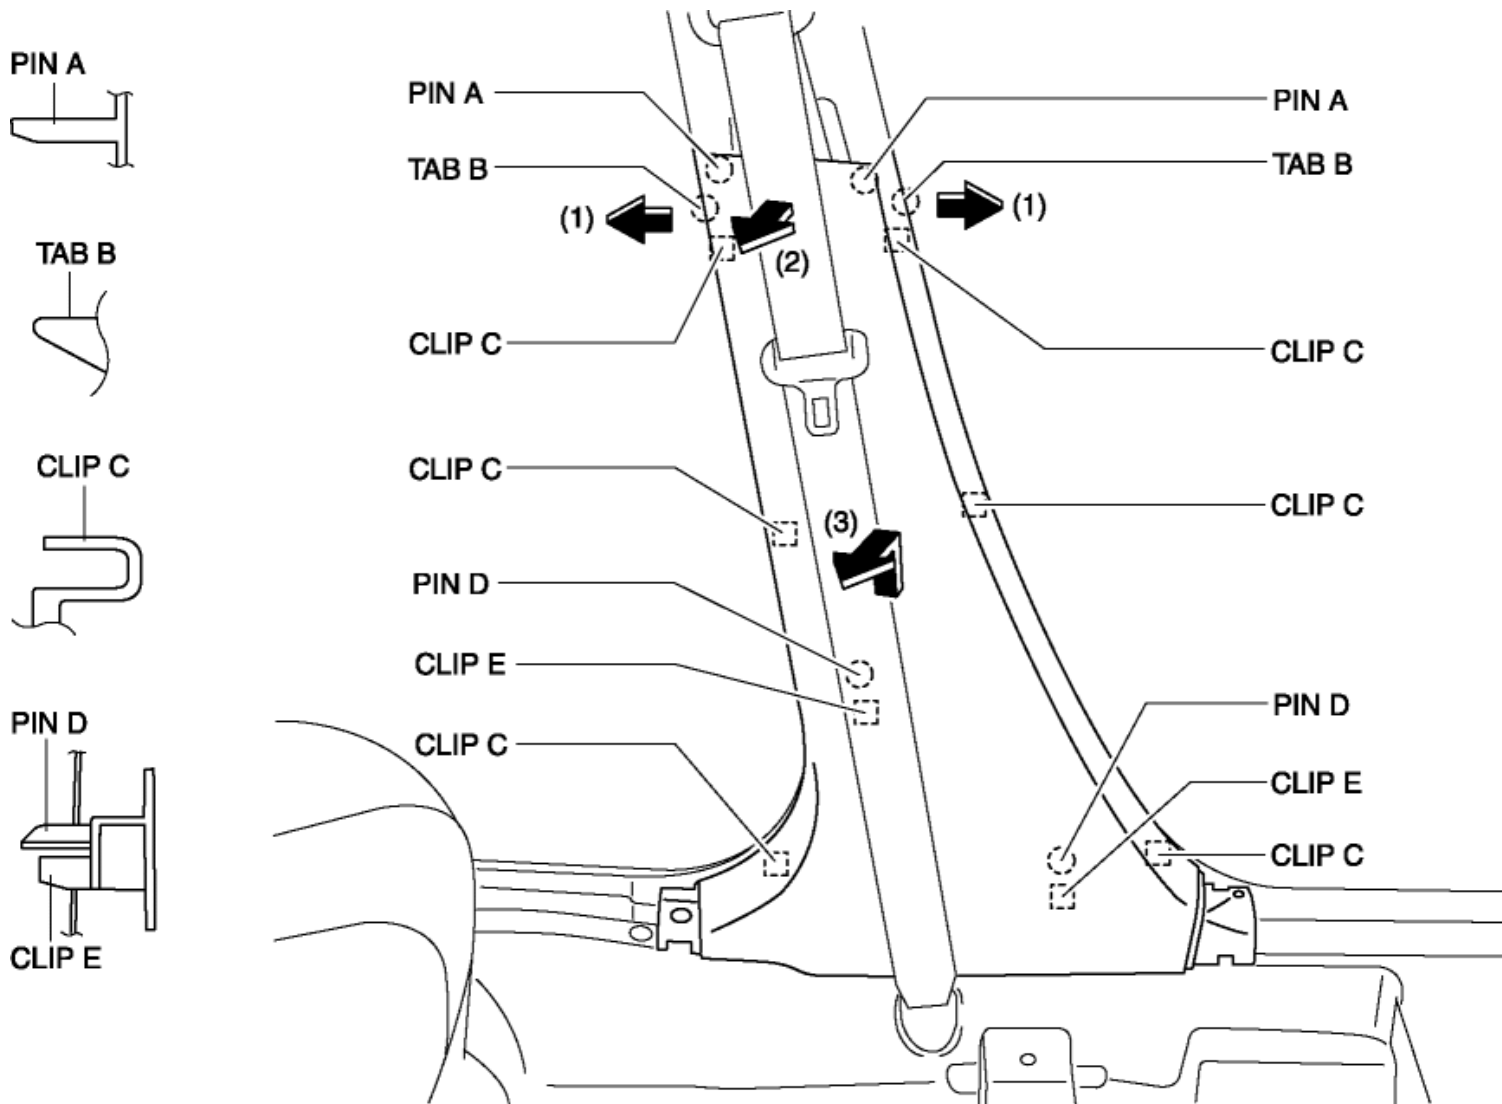


5. Remove the B-pillar lower trim.
6. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION

1. Remove the front scuff plate. (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION](#))
2. Remove the rear scuff plate. (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION](#))
3. Partially peel back the seaming welt.
4. Pull the B-pillar lower trim in the direction of the arrow (1), (2), (3) shown in the figure, detach pin A, tab B, clip C, pin D, and clip E then remove the B-pillar lower trim.

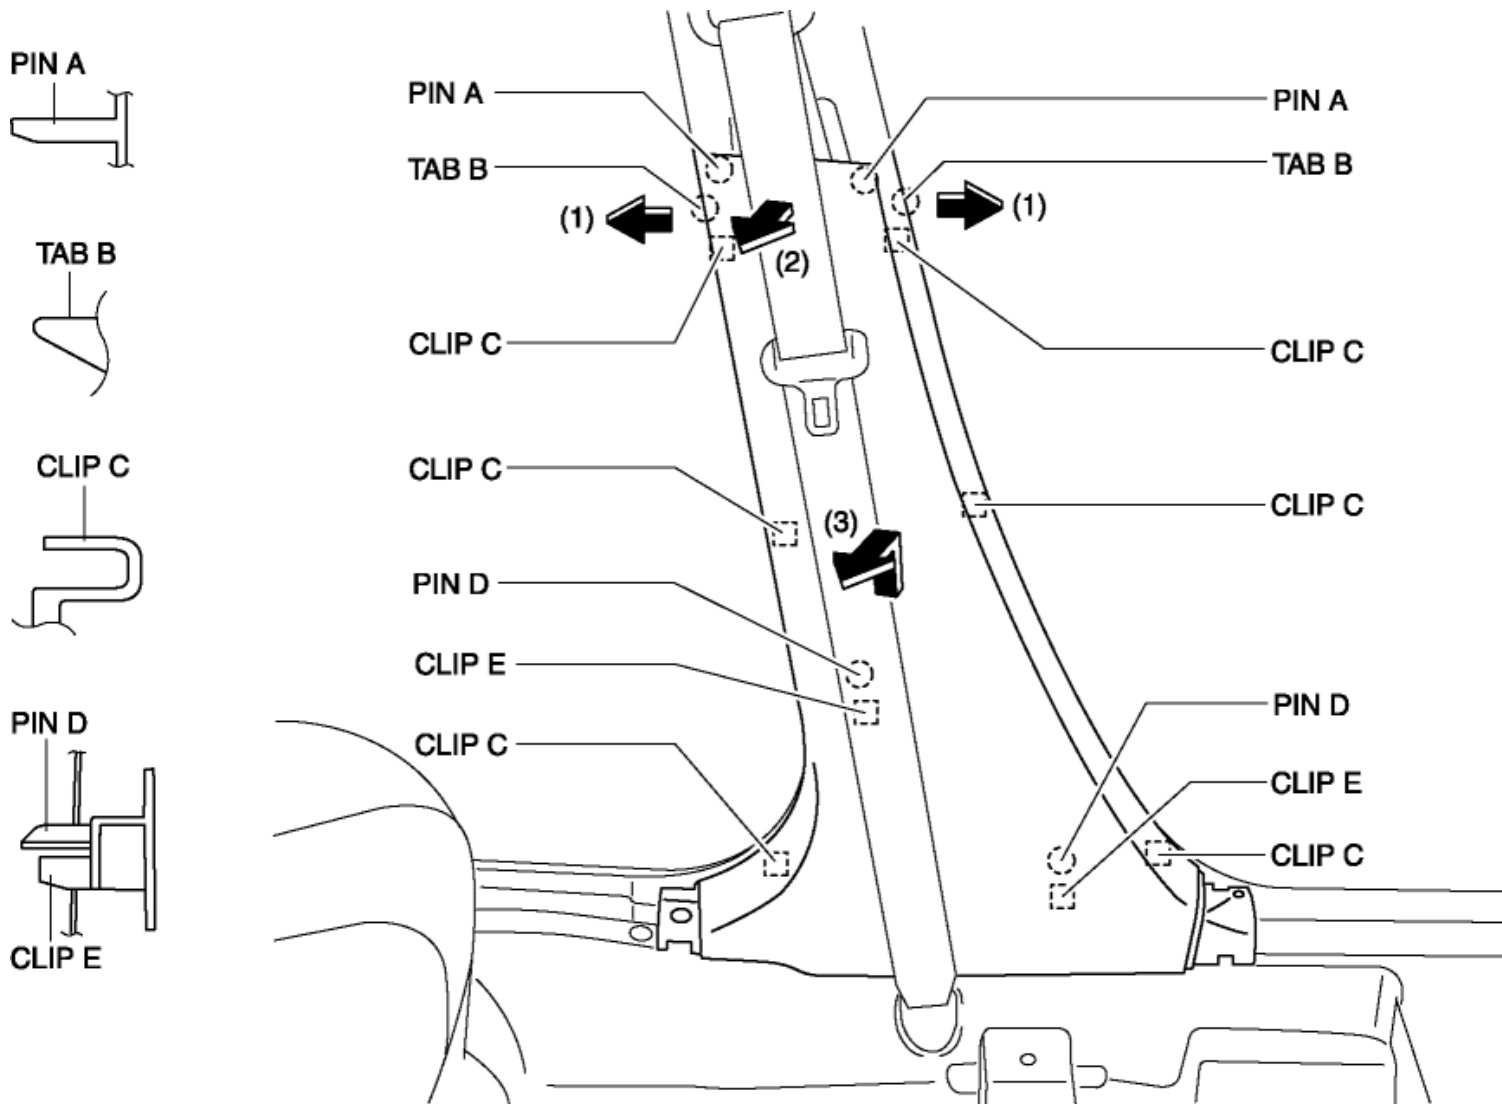

5. Remove the B-pillar lower trim.
6. Install in the reverse order of removal.