



2012 - Mazda6 - Body and Accessories

B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION

1. Remove the following parts:
 - a. Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - b. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - c. Adjuster anchor cover (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
 - d. Front seat belt upper anchor installation bolts (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
2. Partially peel back the seaming welt.
3. Remove the B-pillar lower trim. (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION](#))
4. Grasp the lower end of the B-pillar upper trim, pull it in the direction of the arrow shown in the figure, and remove clip A, pin B, and hook C.

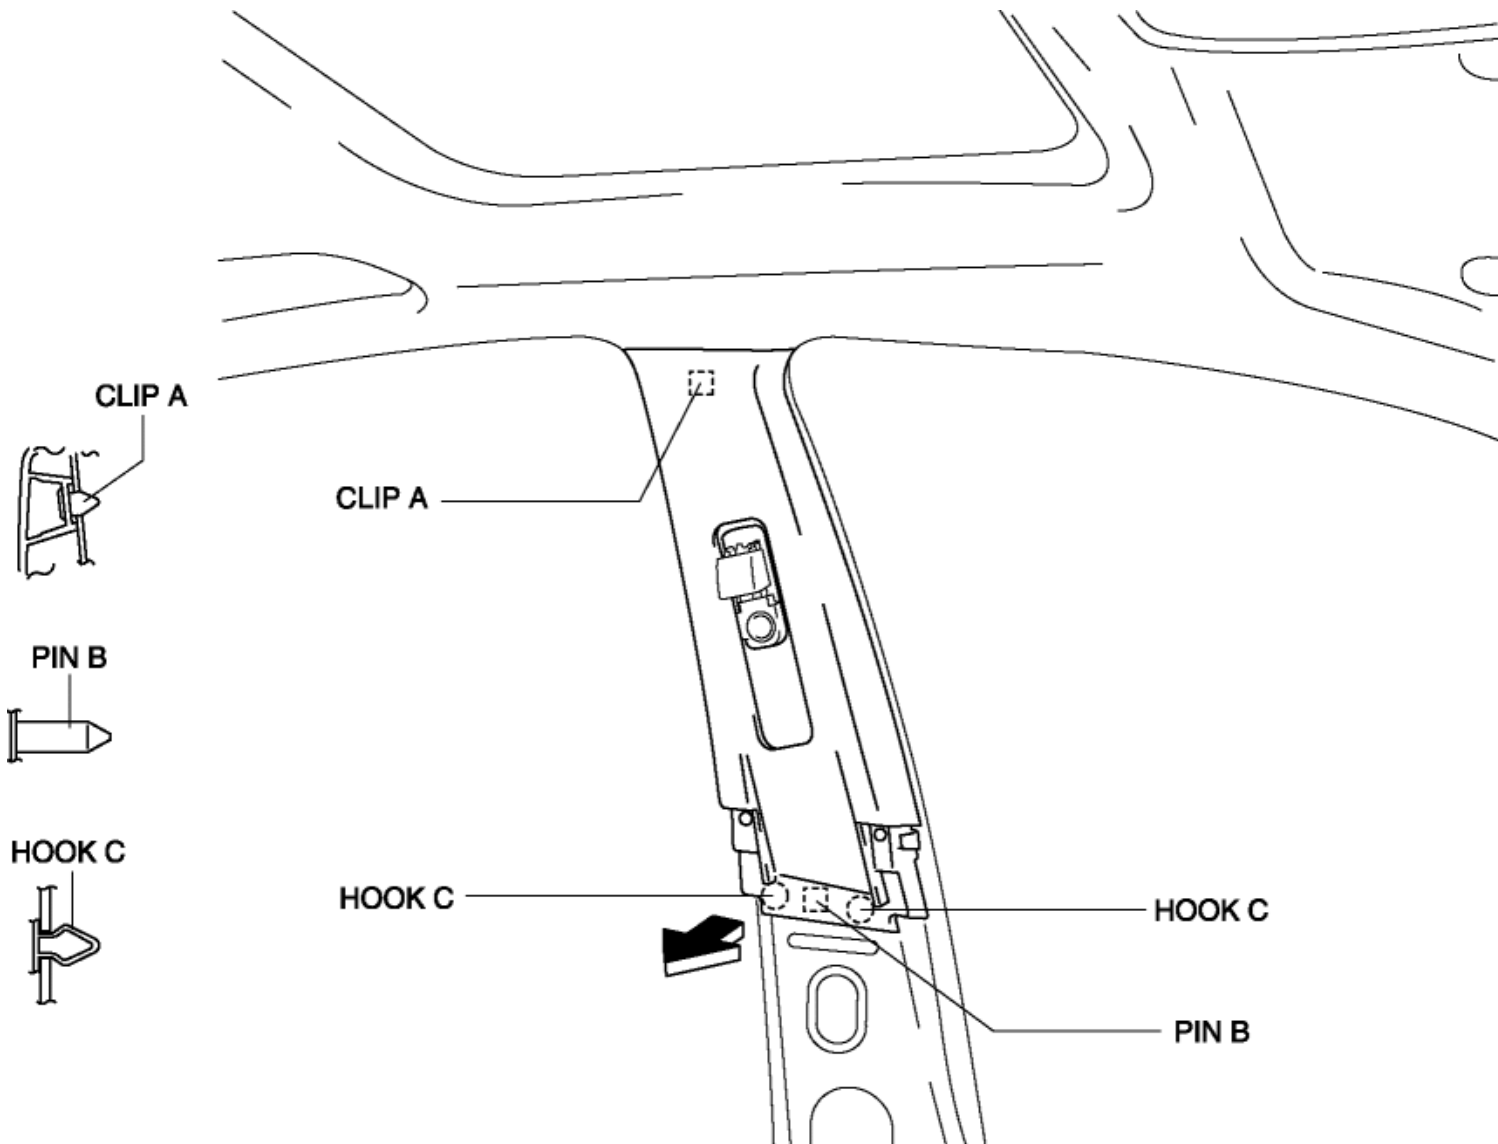

5. Remove the B-pillar upper trim in the direction of the arrow shown in the figure.

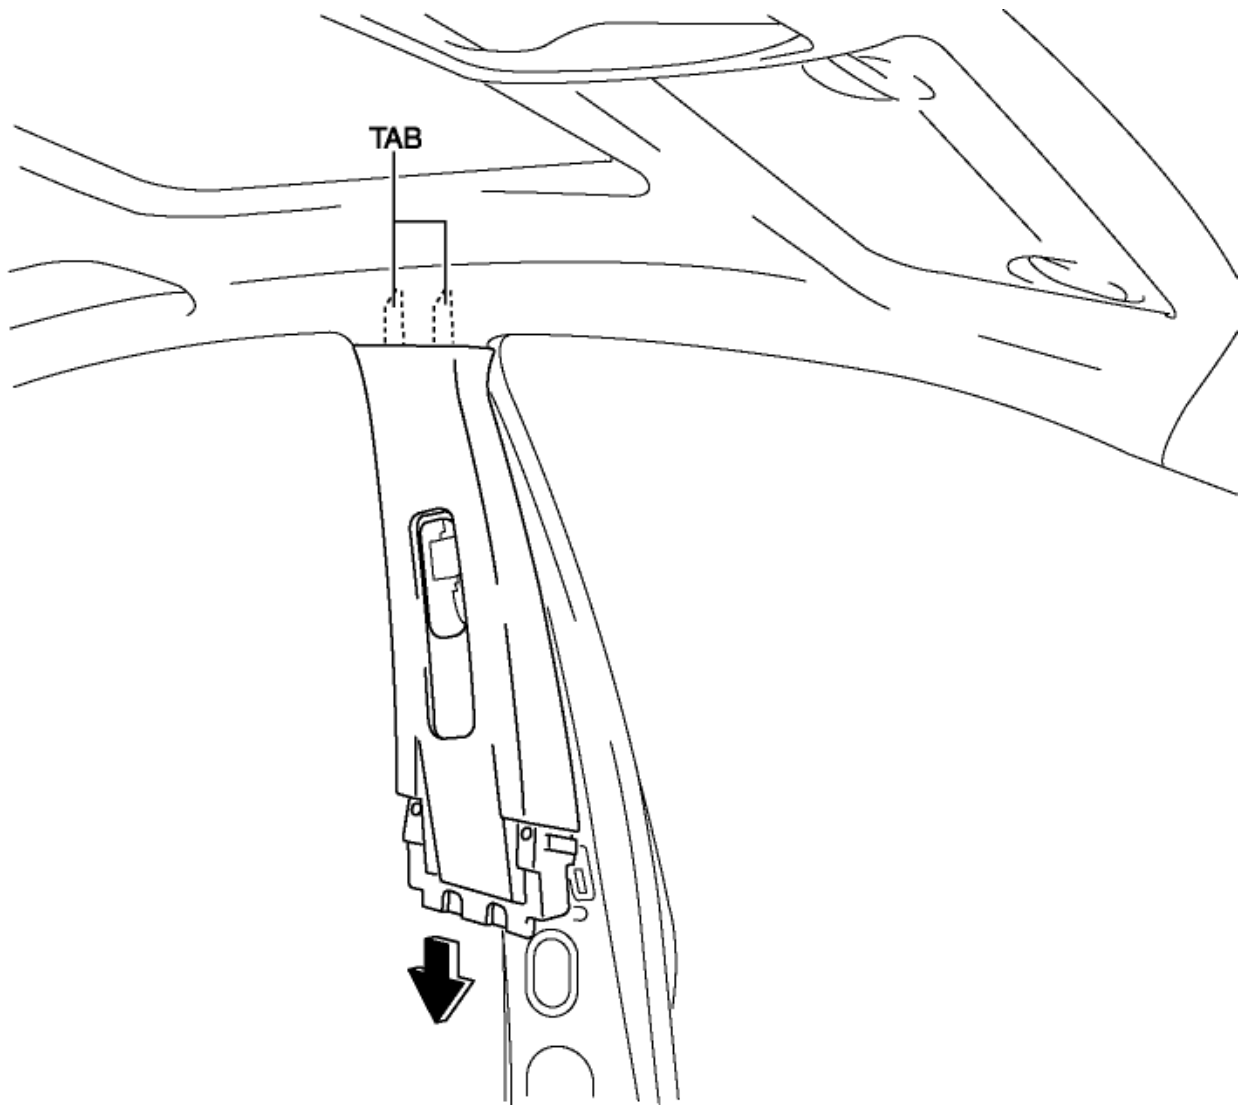

CAUTION:

- When removing the B-pillar upper trim, be careful not to damage the tabs.


6. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


2012 - Mazda6 - Body and Accessories

B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION

1. Remove the following parts:
 - a. Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - b. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - c. Adjuster anchor cover (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
 - d. Front seat belt upper anchor installation bolts (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
2. Partially peel back the seaming welt.
3. Remove the B-pillar lower trim. (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION](#))
4. Grasp the lower end of the B-pillar upper trim, pull it in the direction of the arrow shown in the figure, and remove clip A, pin B, and hook C.

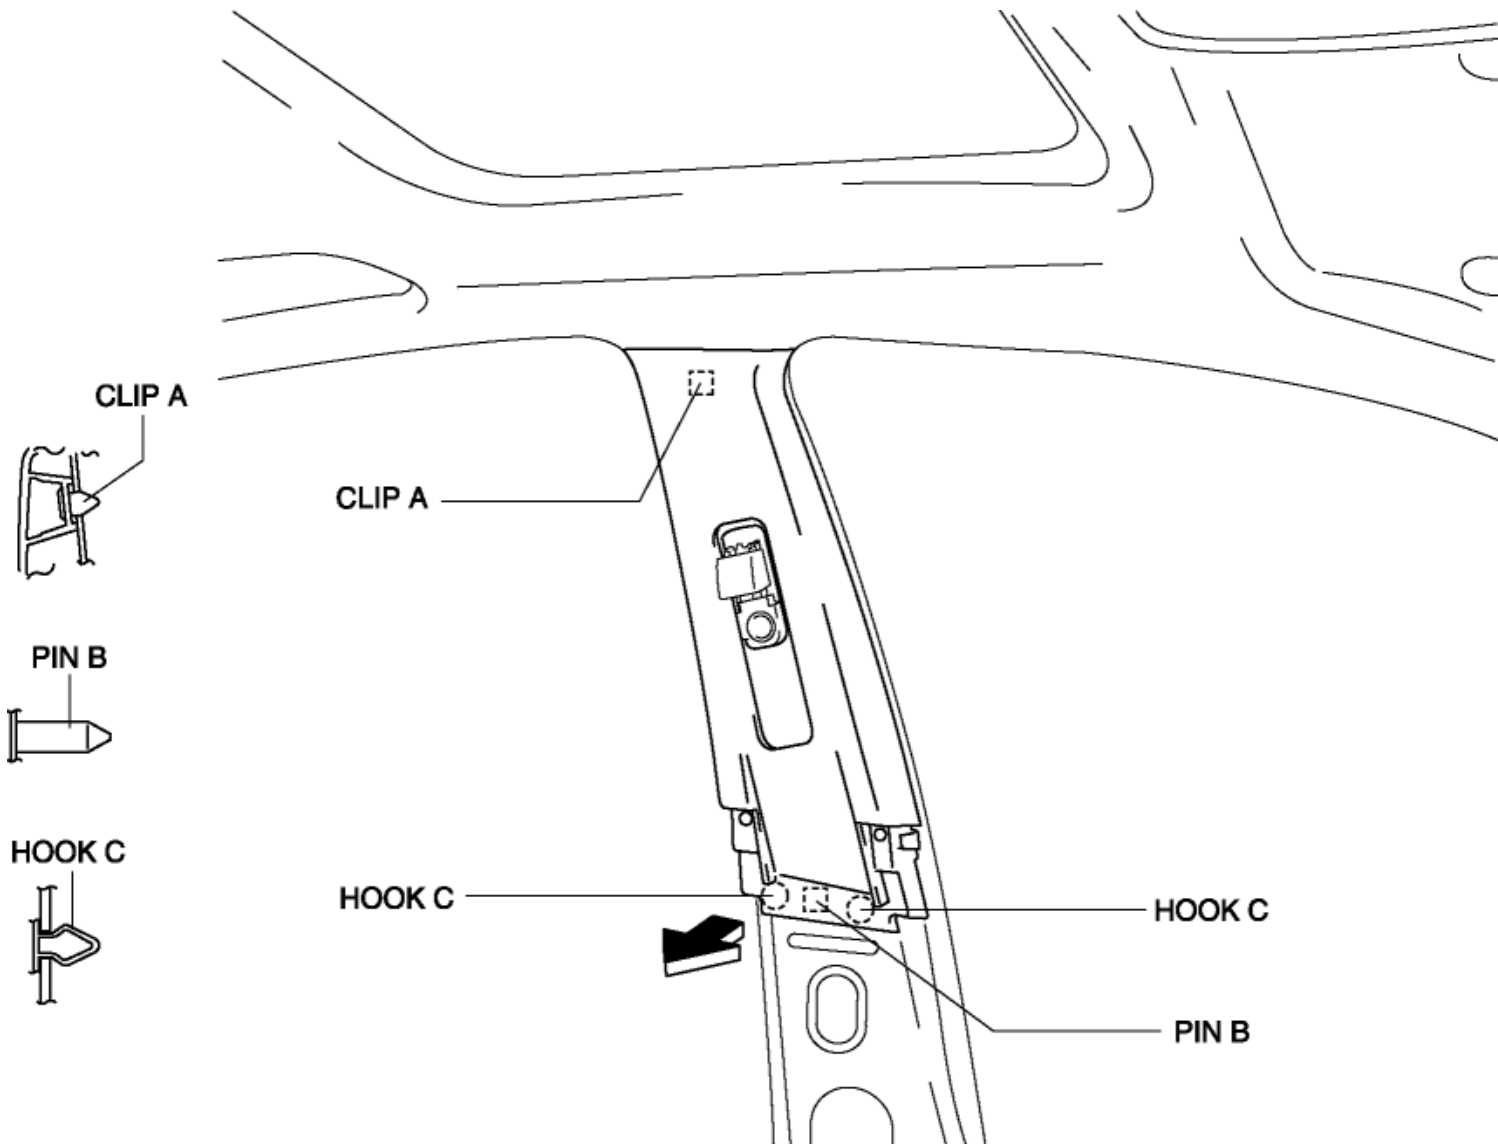

5. Remove the B-pillar upper trim in the direction of the arrow shown in the figure.

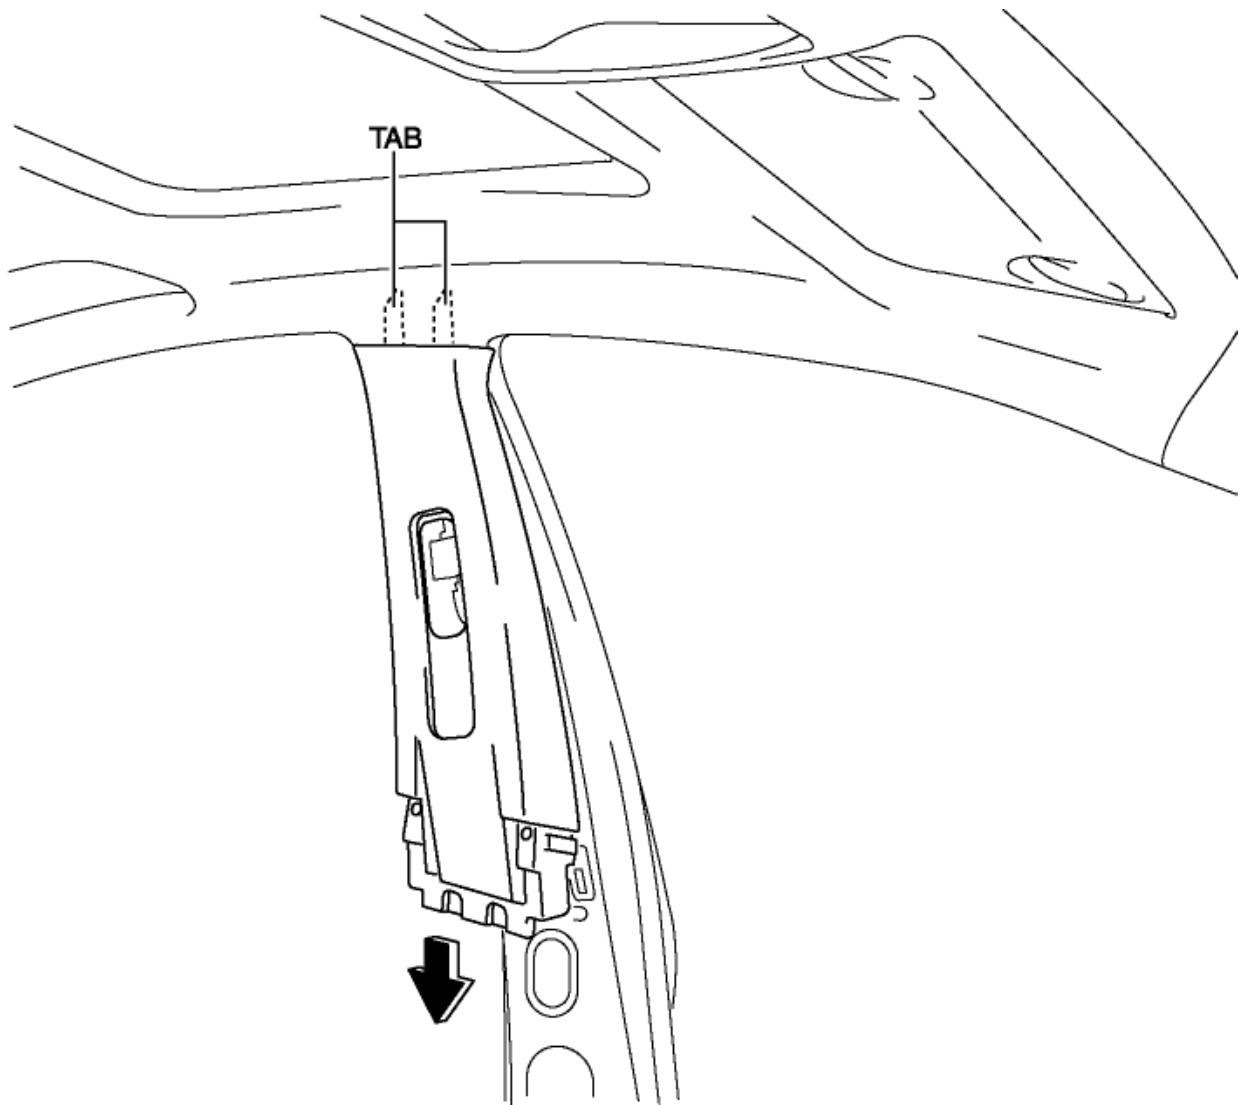

CAUTION:

- When removing the B-pillar upper trim, be careful not to damage the tabs.

6. Install in the reverse order of removal.

[< Previous](#) [Next >](#)