



2012 - Mazda6 - Body and Accessories

C-PILLAR TRIM REMOVAL/ INSTALLATION

1. Remove the following parts:
 - a. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
 - b. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
2. Partially peel back the seaming welt.
3. Pull the C-pillar trim in the direction of the arrow (1), (2), (3) shown in the figure, then detaching clip A and B.

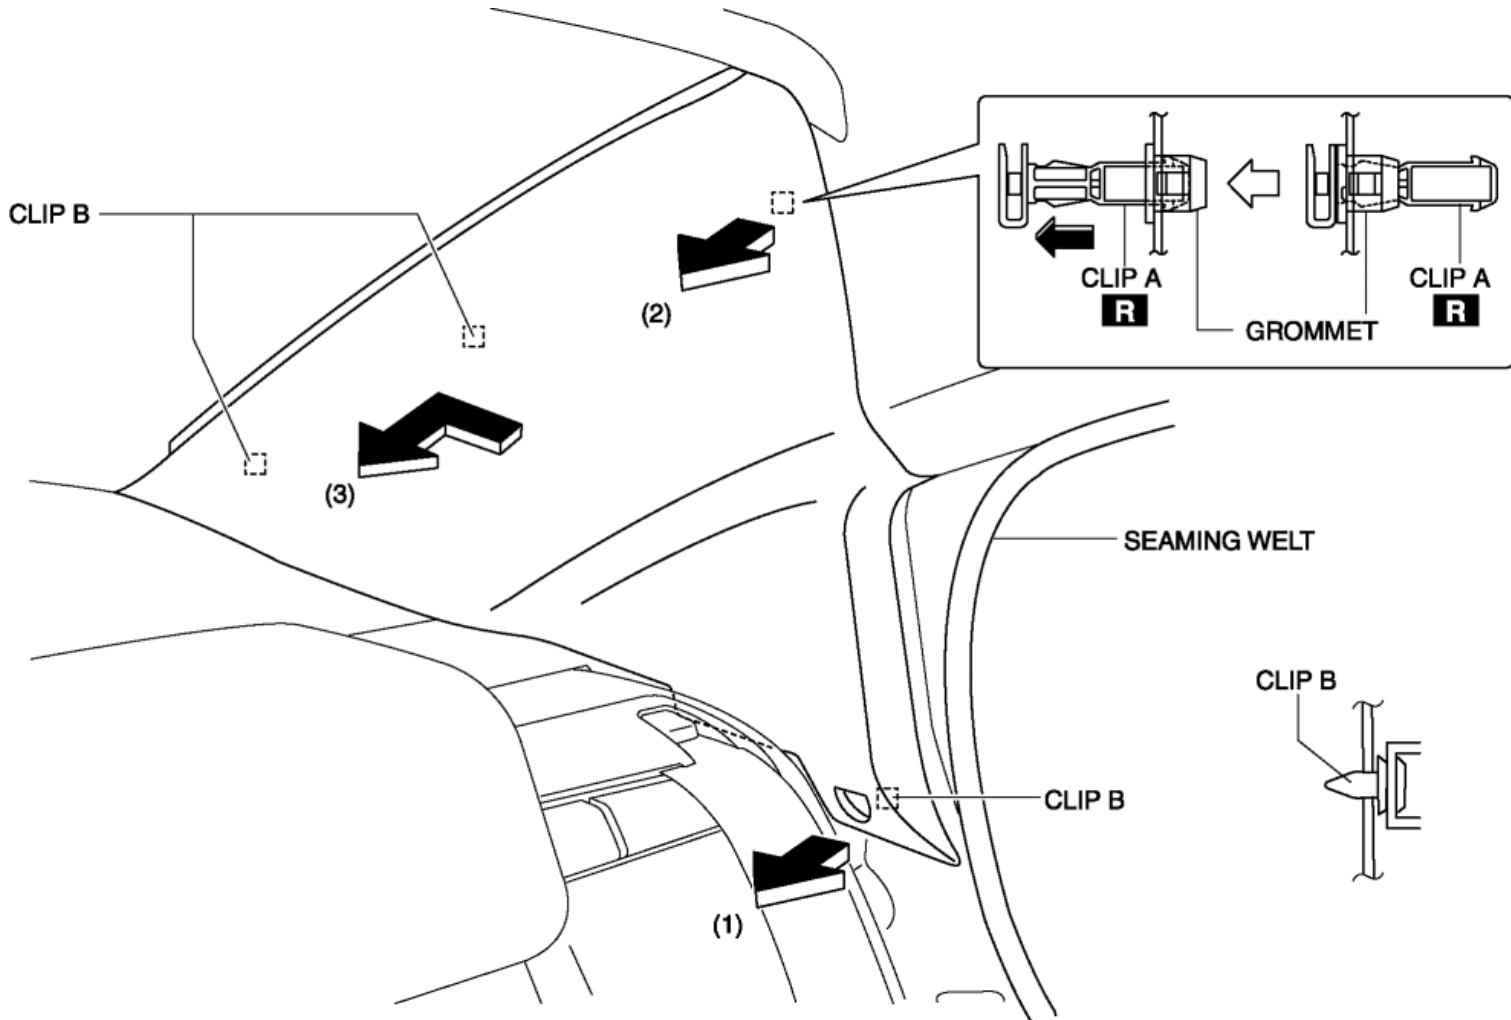

4. Remove the C-pillar trim in the direction of the arrow shown in the figure while remove the tabs C and D.

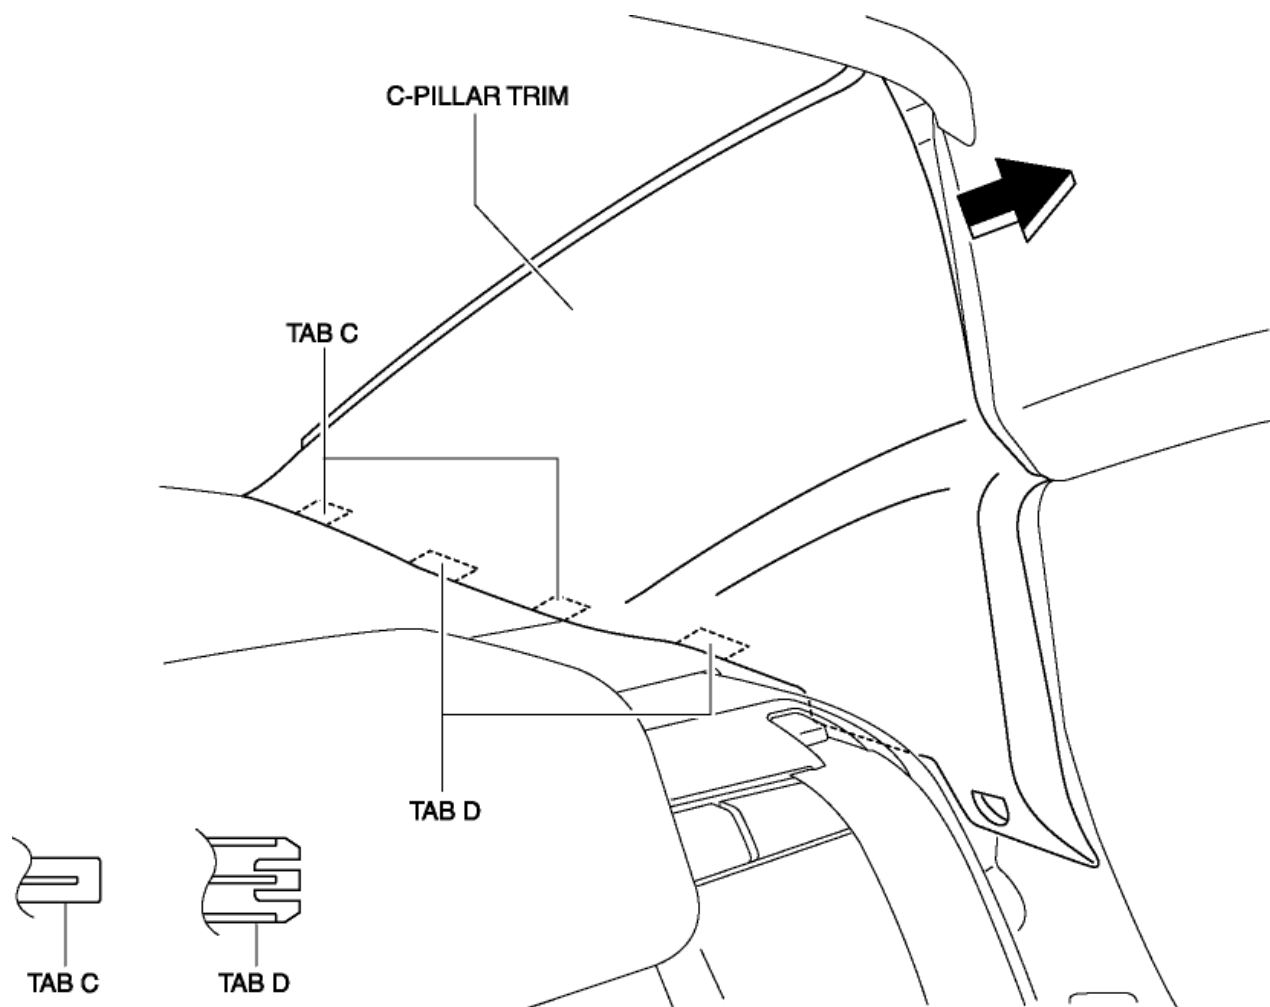

CAUTION:


- When removing the C-pillar trim, be careful not to damage the tabs C and D.
5. When installing the C-pillar, Install the new clip A to the C-pillar trim in advance.
 6. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


2012 - Mazda6 - Body and Accessories

C-PILLAR TRIM REMOVAL/ INSTALLATION

1. Remove the following parts:
 - a. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
 - b. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
2. Partially peel back the seaming welt.
3. Pull the C-pillar trim in the direction of the arrow (1), (2), (3) shown in the figure, then detaching clip A and B.

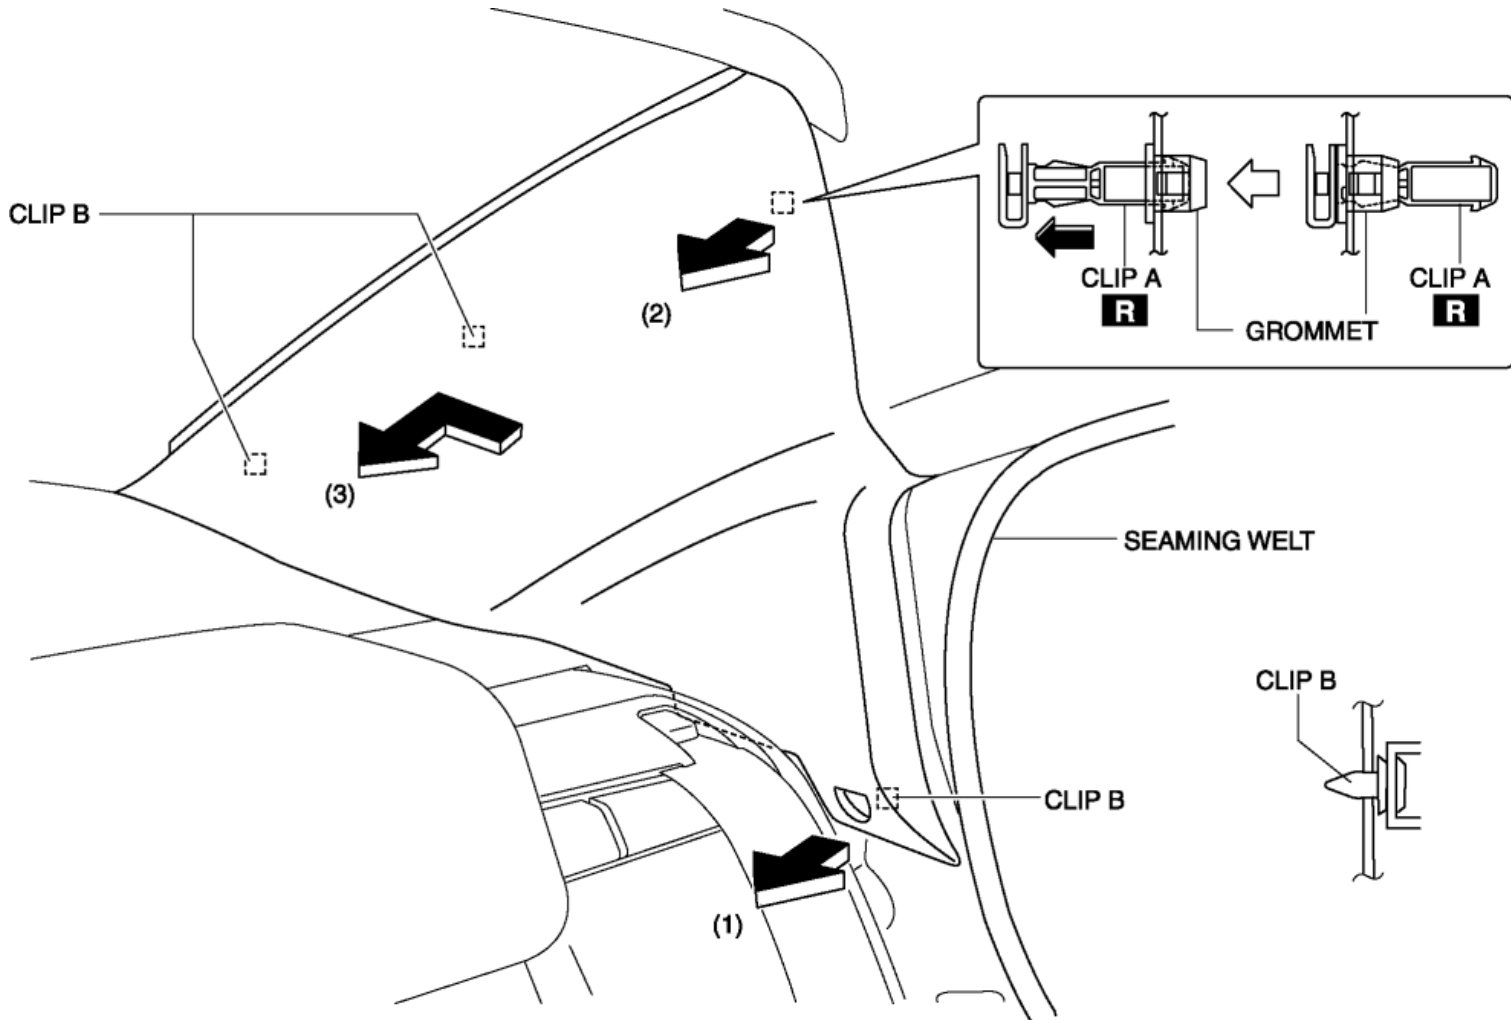

4. Remove the C-pillar trim in the direction of the arrow shown in the figure while remove the tabs C and D.

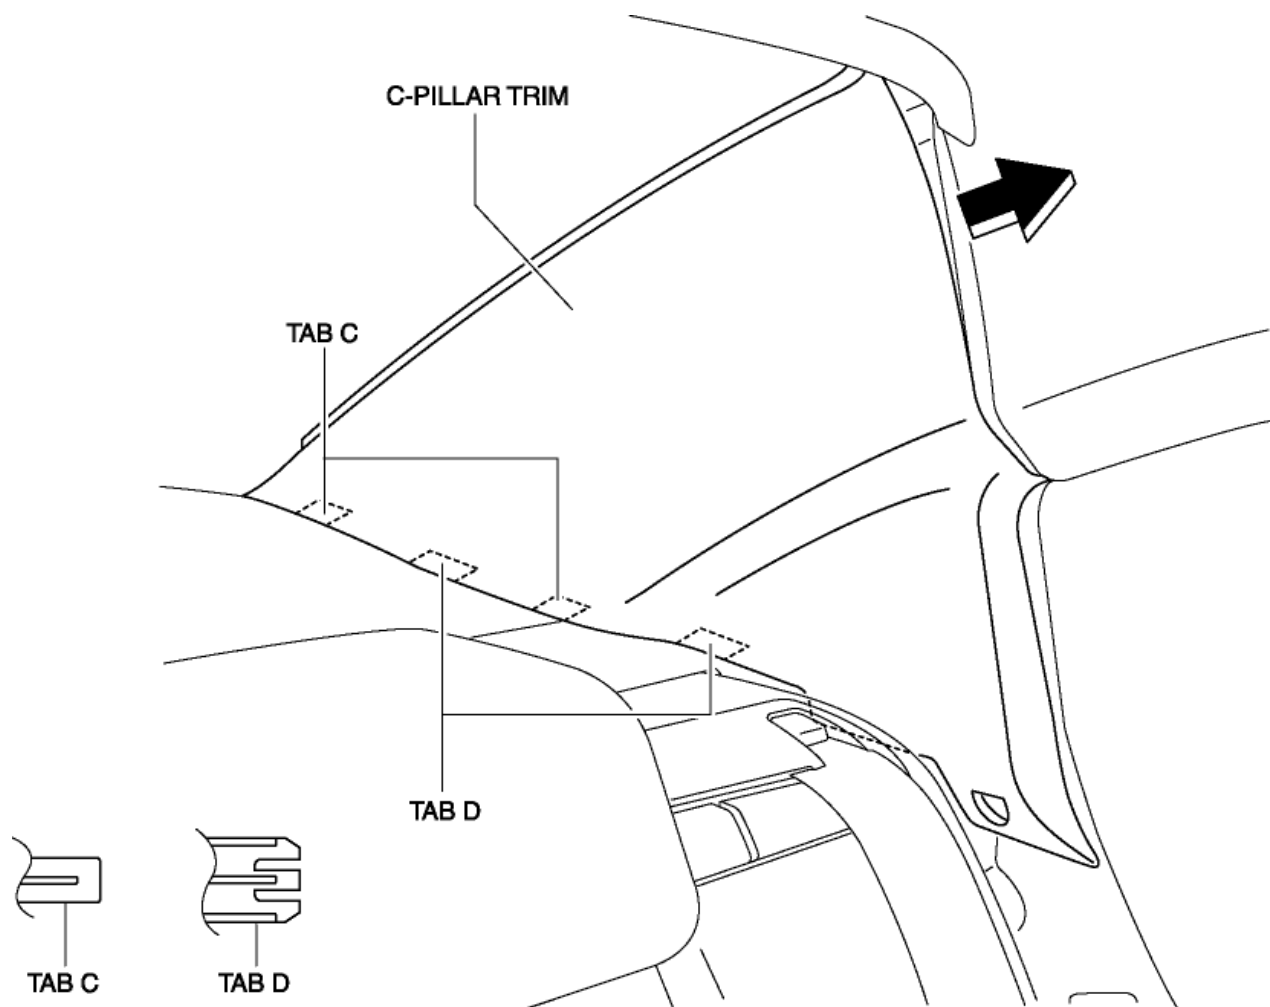

CAUTION:

- When removing the C-pillar trim, be careful not to damage the tabs C and D.
5. When installing the C-pillar, Install the new clip A to the C-pillar trim in advance.
 6. Install in the reverse order of removal.

[< Previous](#) [Next >](#)