


2012 - Mazda6 - Body and Accessories

FRONT SIDE TRIM REMOVAL/ INSTALLATION

1. Remove the front scuff plate. (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
2. Partially peel back the seaming welt.
3. Remove the cap nut.

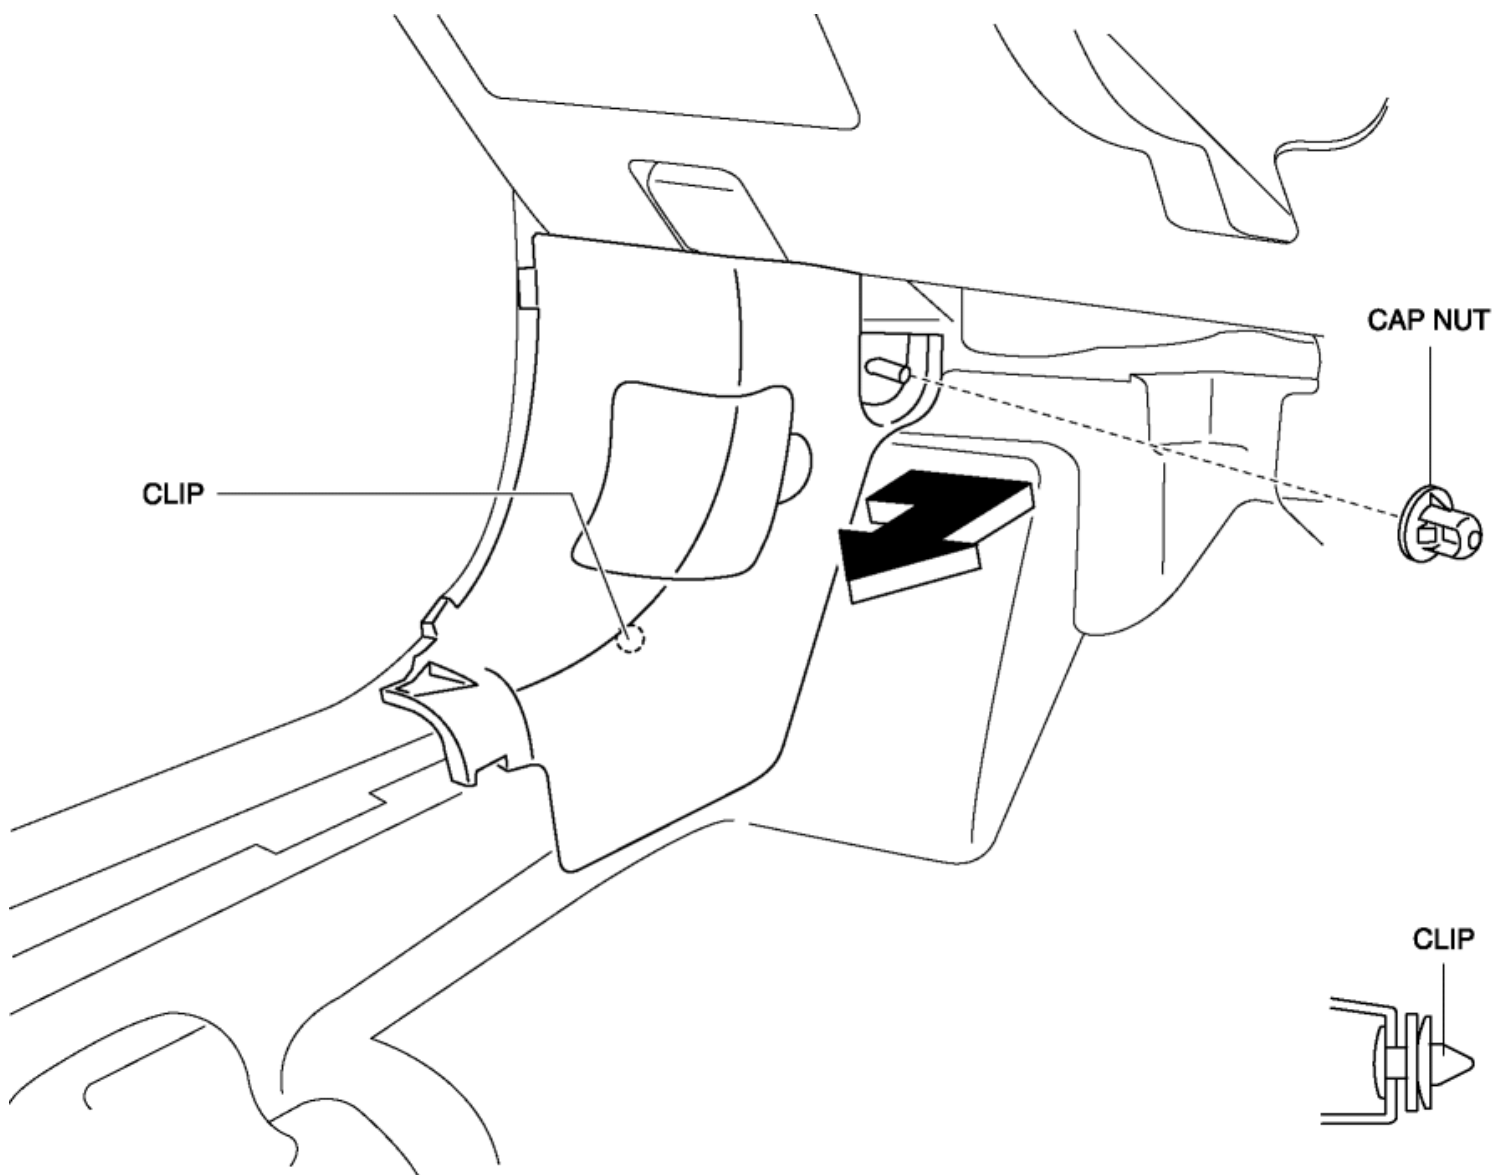


4. Pull the front side trim in the direction of the arrow shown in the figure and remove it while detaching clip.
5. Remove the front side trim.
6. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

FRONT SIDE TRIM REMOVAL/ INSTALLATION

1. Remove the front scuff plate. (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION](#).)
2. Partially peel back the seaming welt.
3. Remove the cap nut.

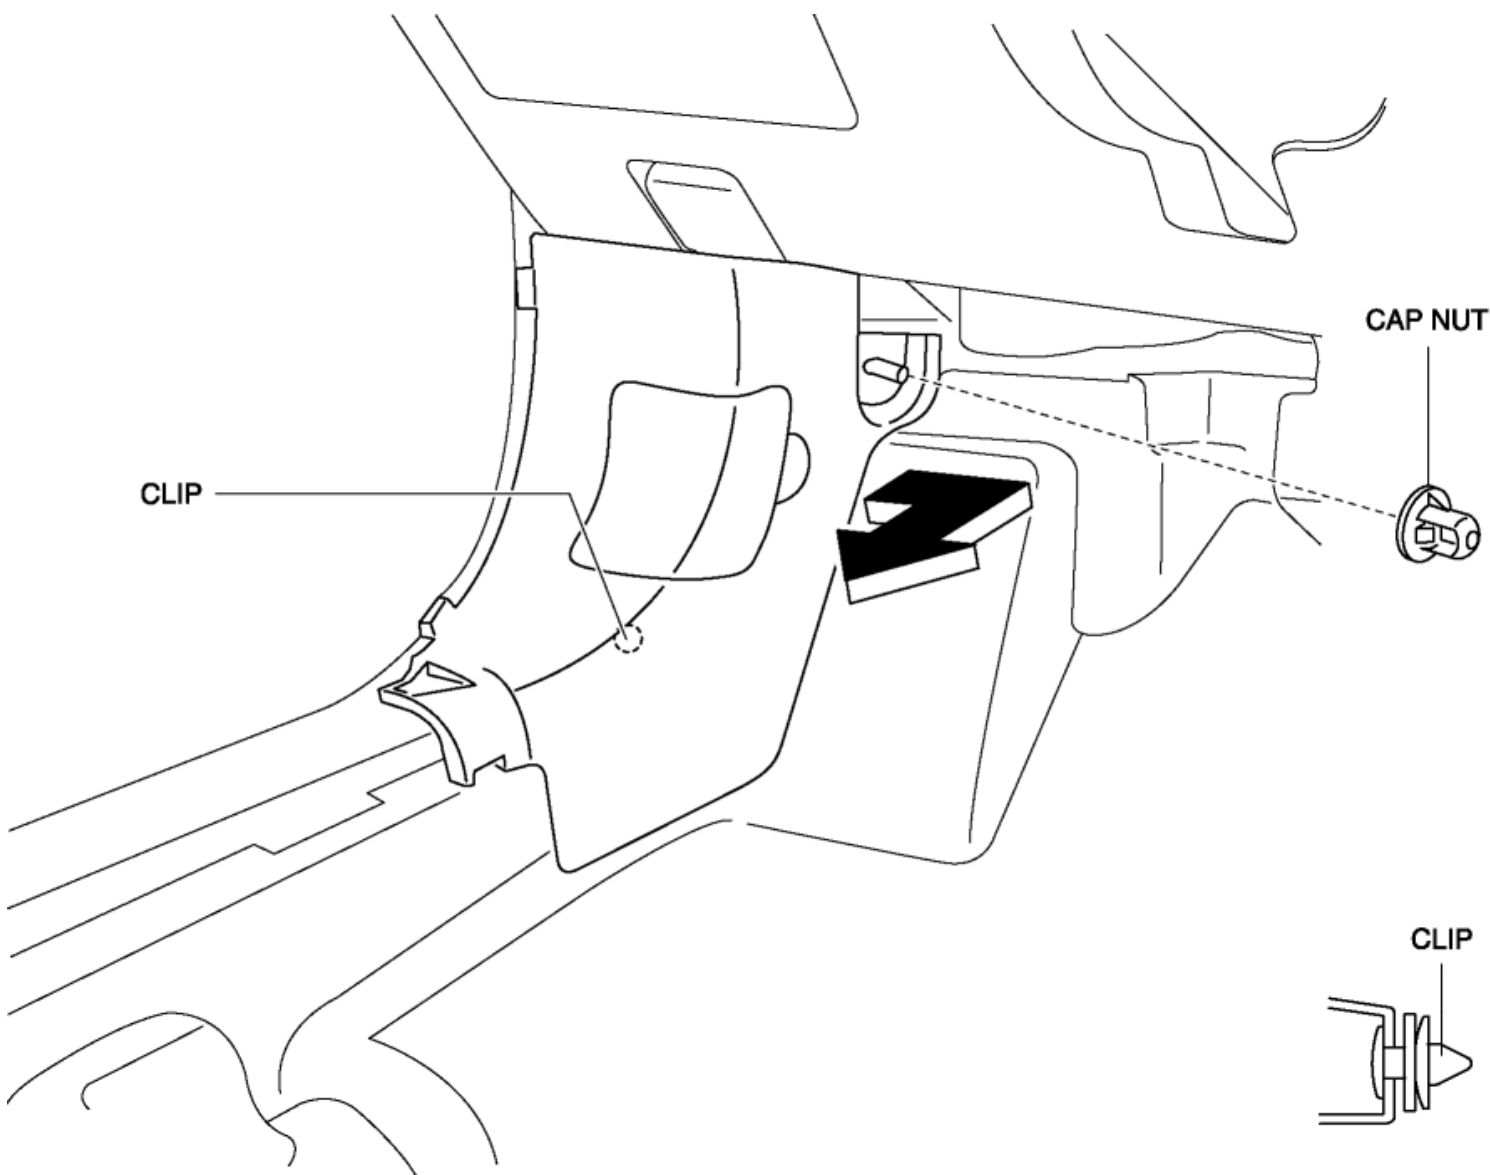

4. Pull the front side trim in the direction of the arrow shown in the figure and remove it while detaching clip.
5. Remove the front side trim.
6. Install in the reverse order of removal.