



2012 - Mazda6 - Body and Accessories

REAR DOOR TRIM REMOVAL/ INSTALLATION


1. Disconnect the negative battery cable.
2. Pull the cover of inner handle and remove it while detaching tabs.

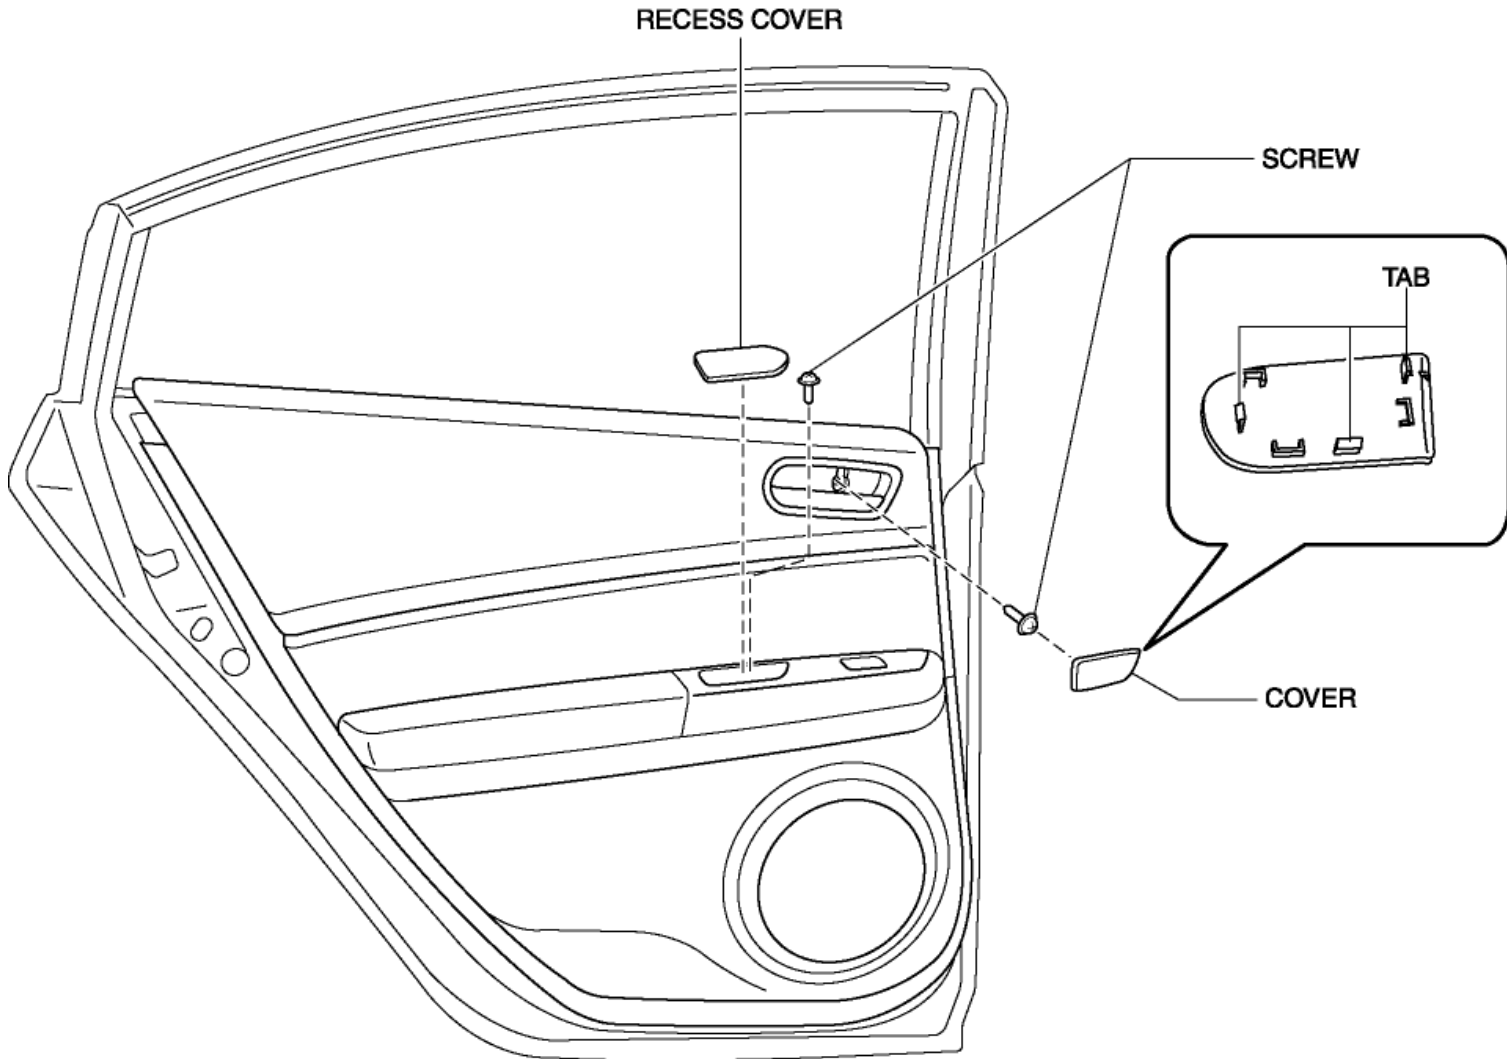




3. Remove the recess cover.
4. Remove the screws.
5. Pull in the direction of the arrow shown in the figure and remove clips from the door inner panel using a fastener remover.

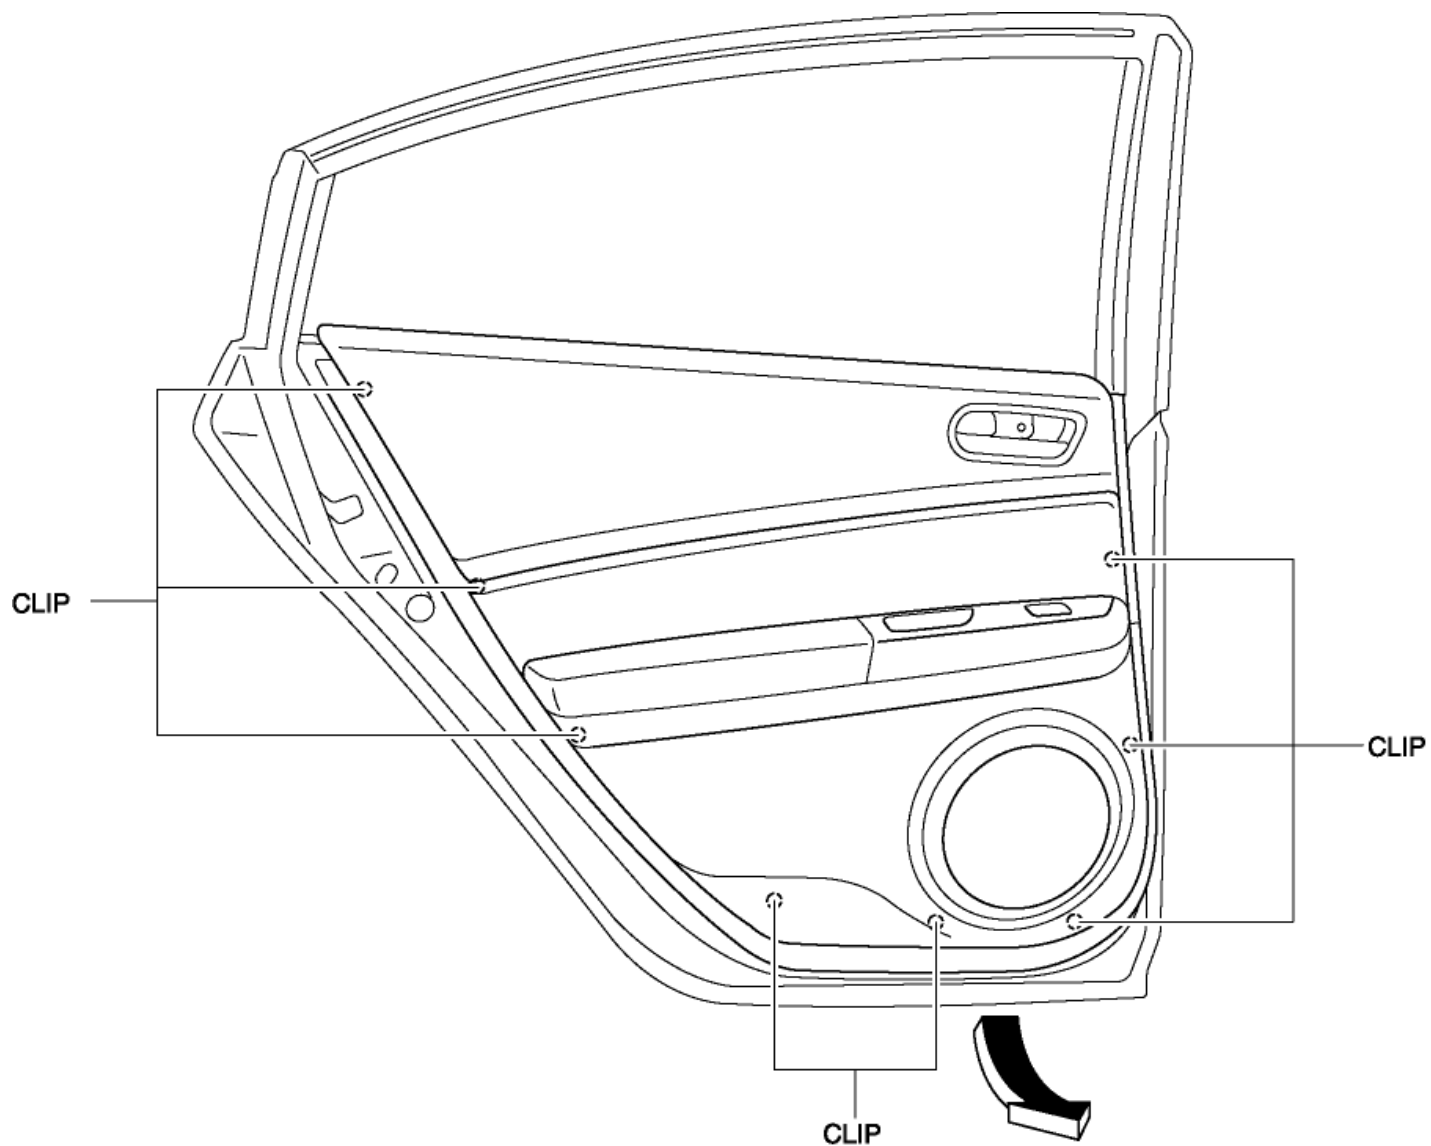


6. Remove the rear door trim in the direction of the arrow shown in the figure.

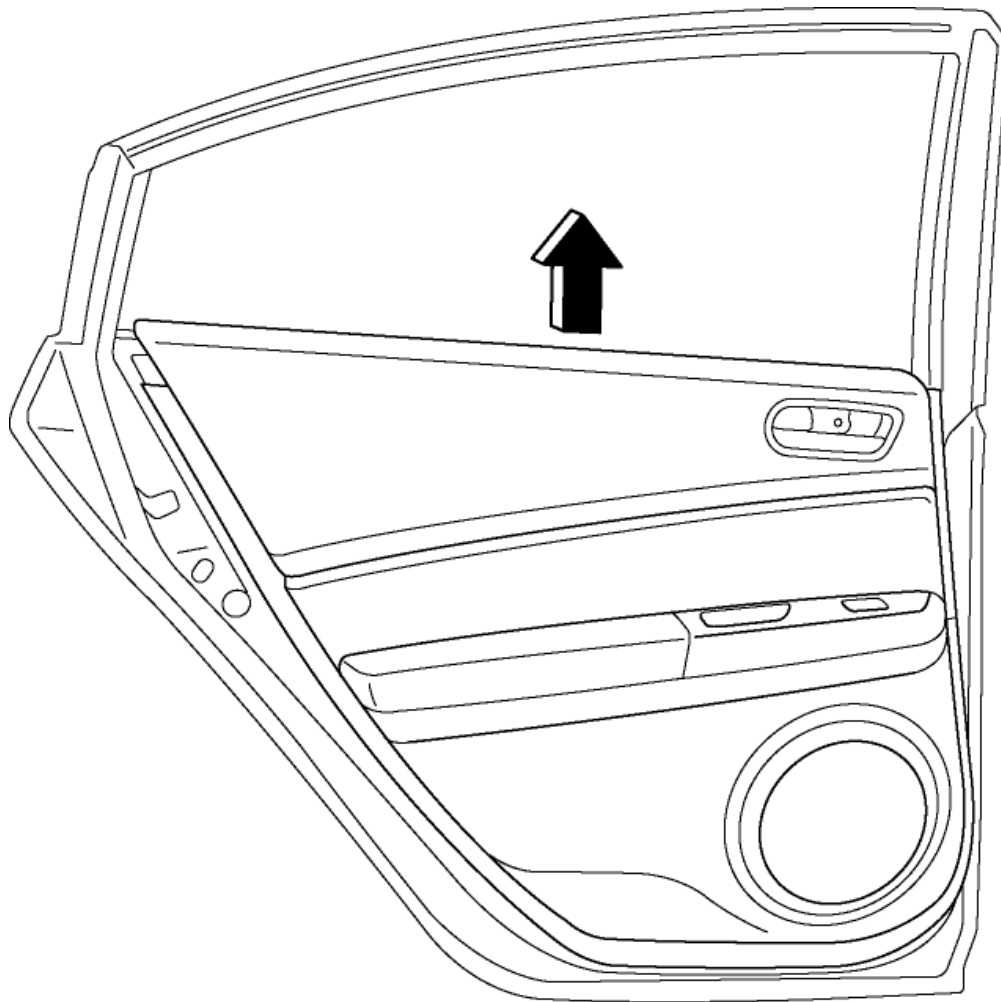

7. Remove the inner handle and move the rear door trim in the direction of the arrow shown in the figure.

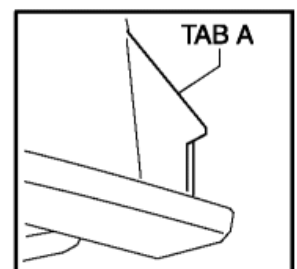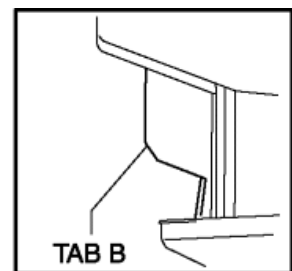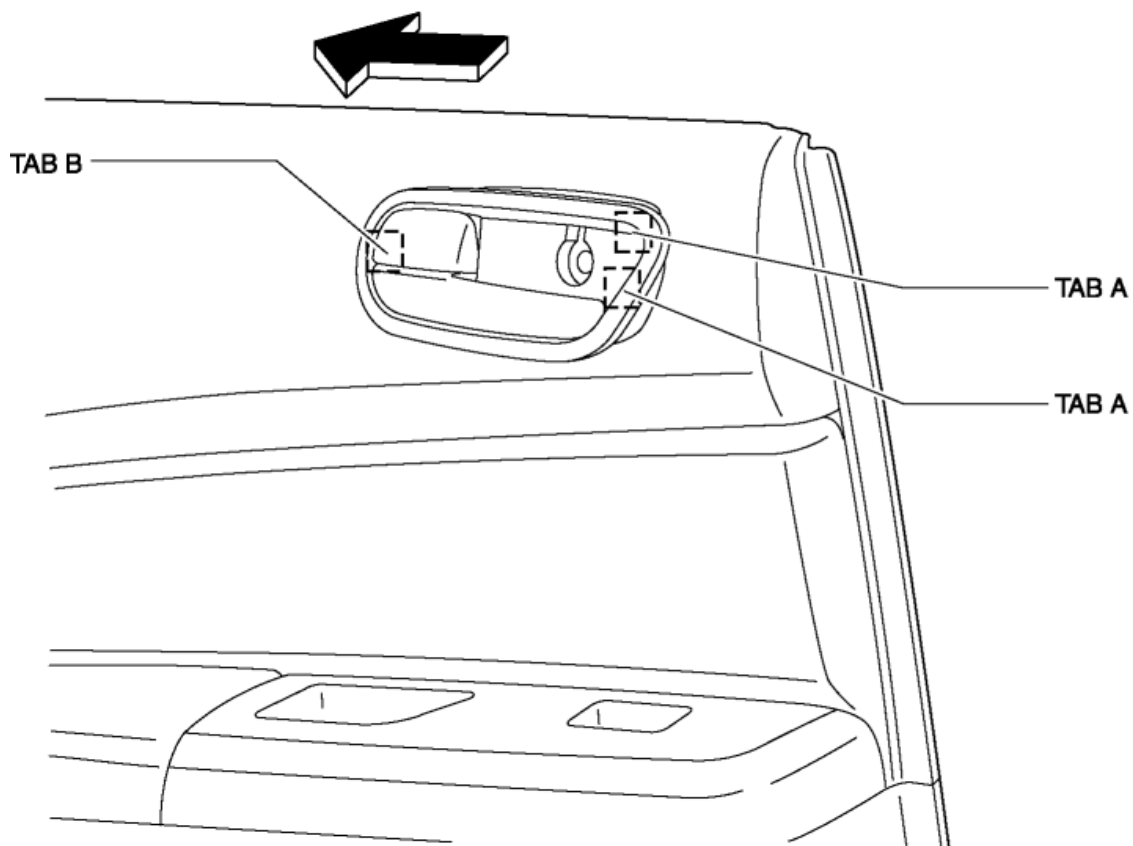

8. Turn the inner handle 90° in the direction of the arrow and remove it from the rear door trim.

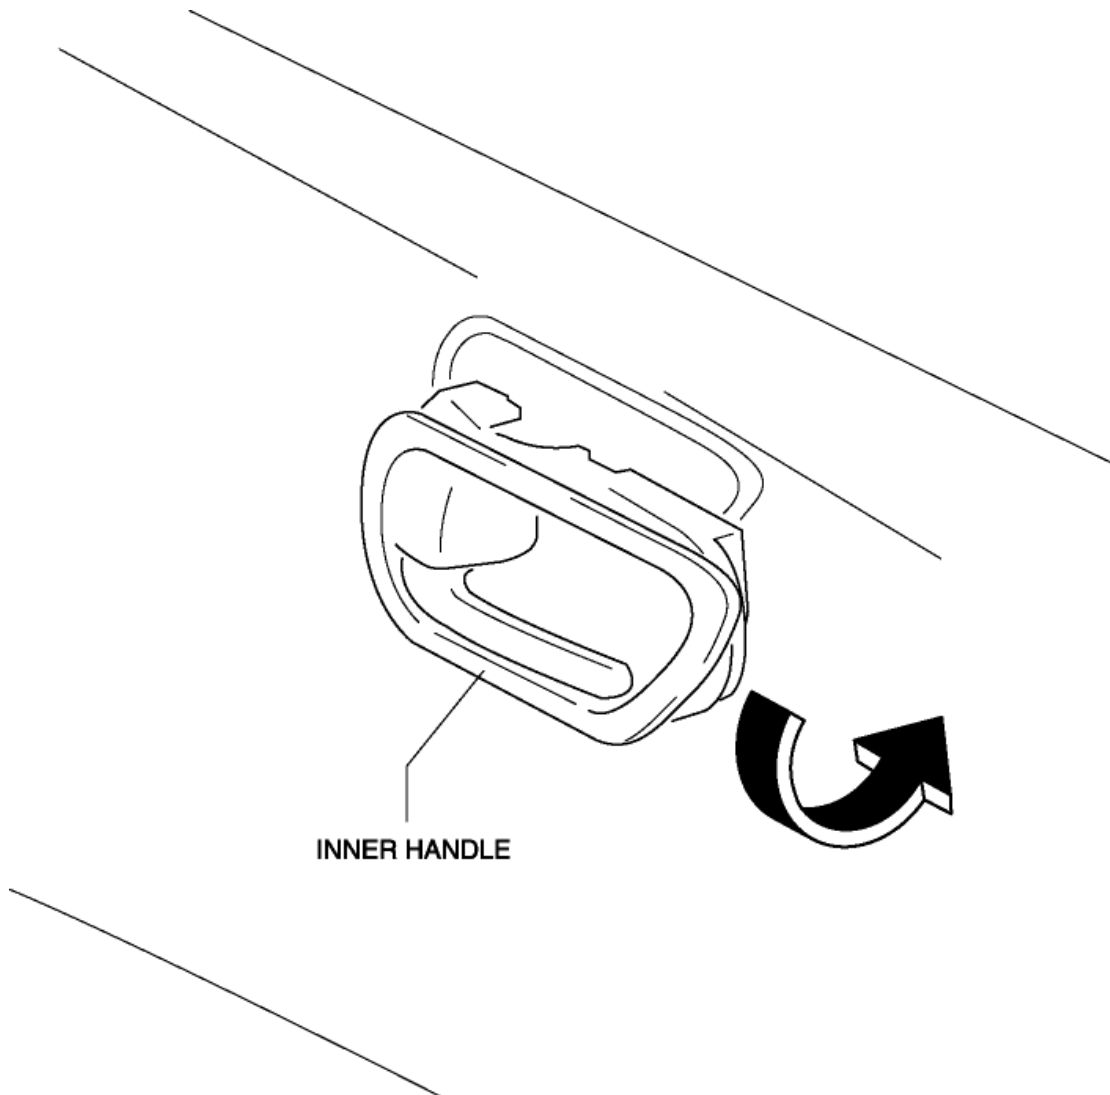

9. Disconnect the power window subswitch connector.

10. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)


2012 - Mazda6 - Body and Accessories

REAR DOOR TRIM REMOVAL/ INSTALLATION


1. Disconnect the negative battery cable.
2. Pull the cover of inner handle and remove it while detaching tabs.

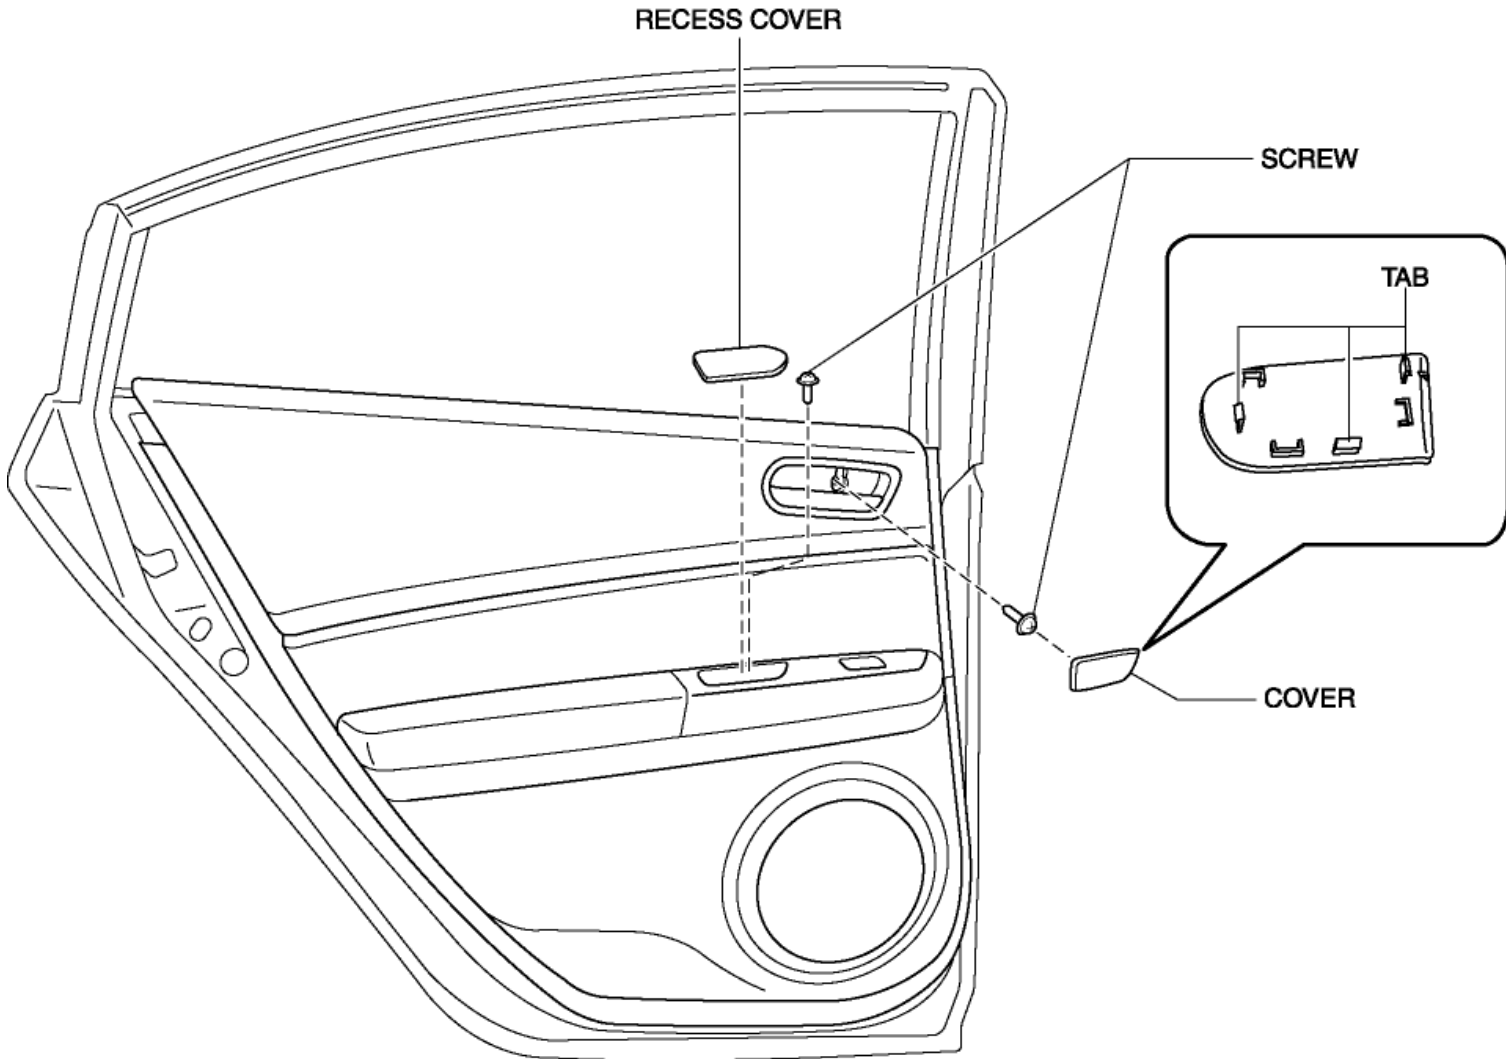




3. Remove the recess cover.
4. Remove the screws.
5. Pull in the direction of the arrow shown in the figure and remove clips from the door inner panel using a fastener remover.

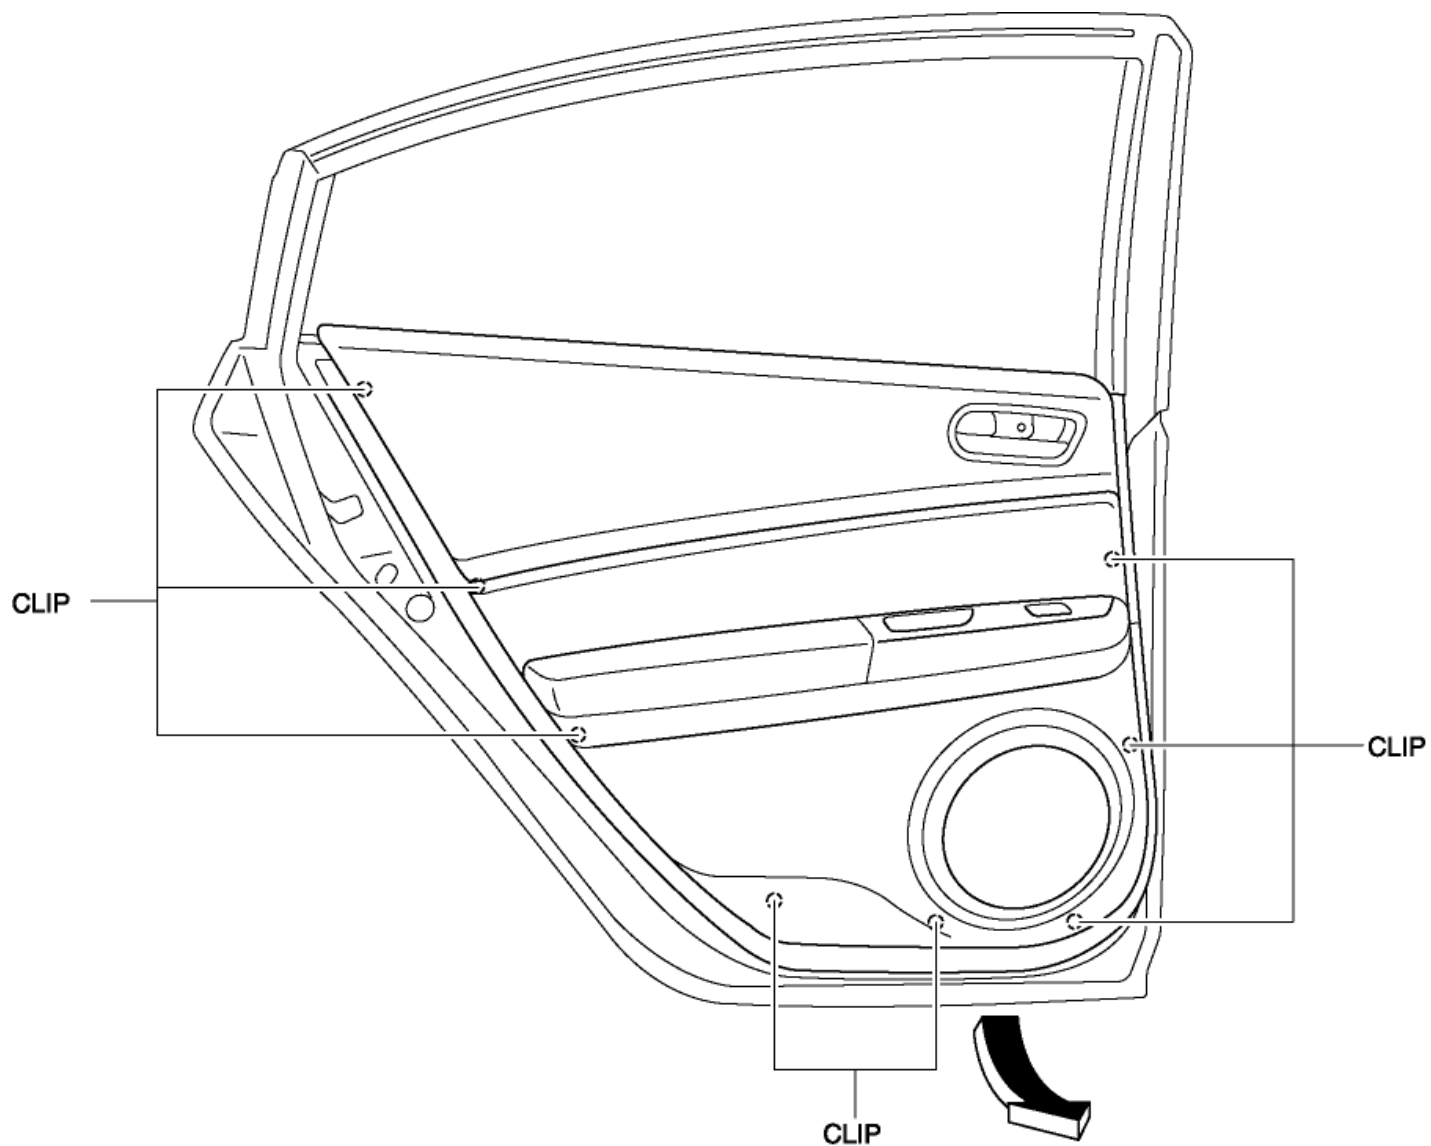


6. Remove the rear door trim in the direction of the arrow shown in the figure.

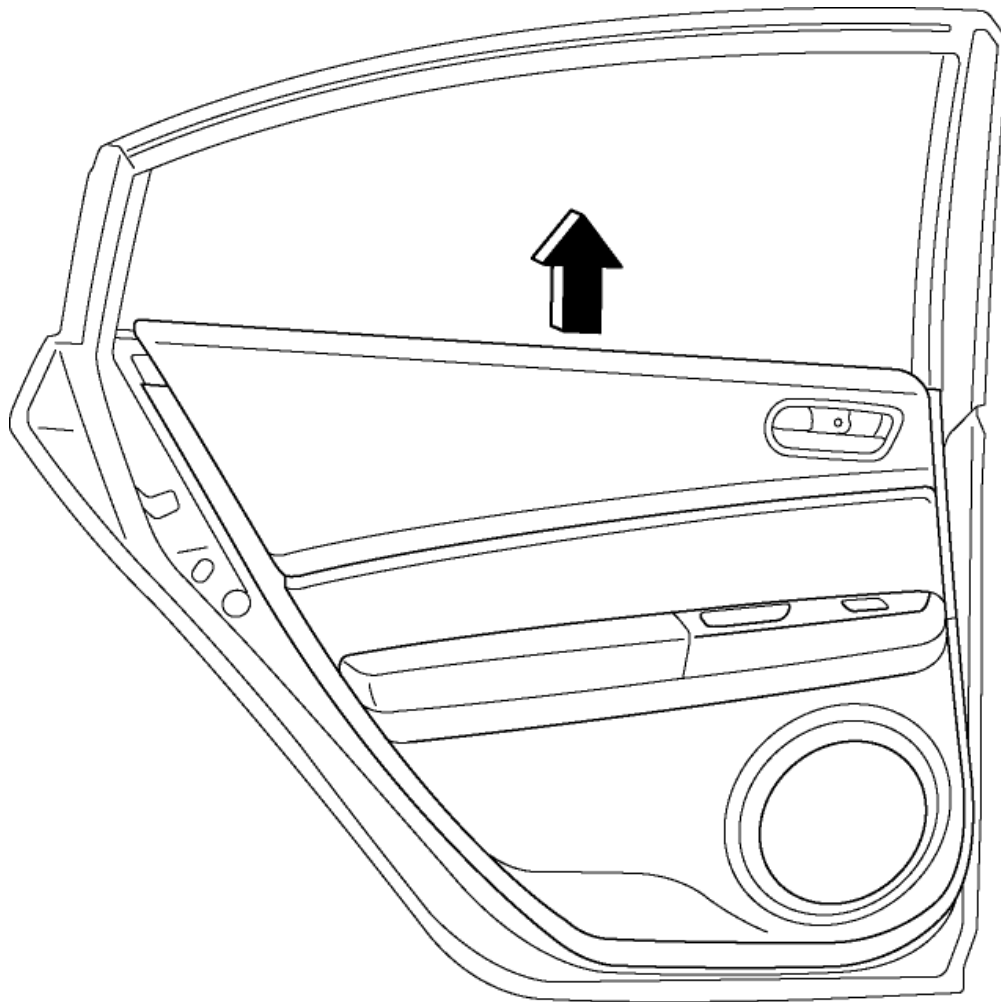

7. Remove the inner handle and move the rear door trim in the direction of the arrow shown in the figure.

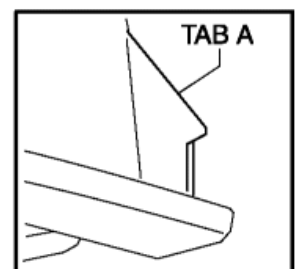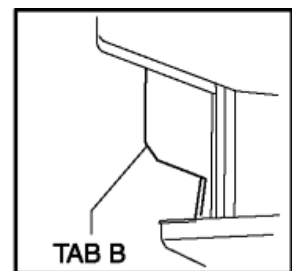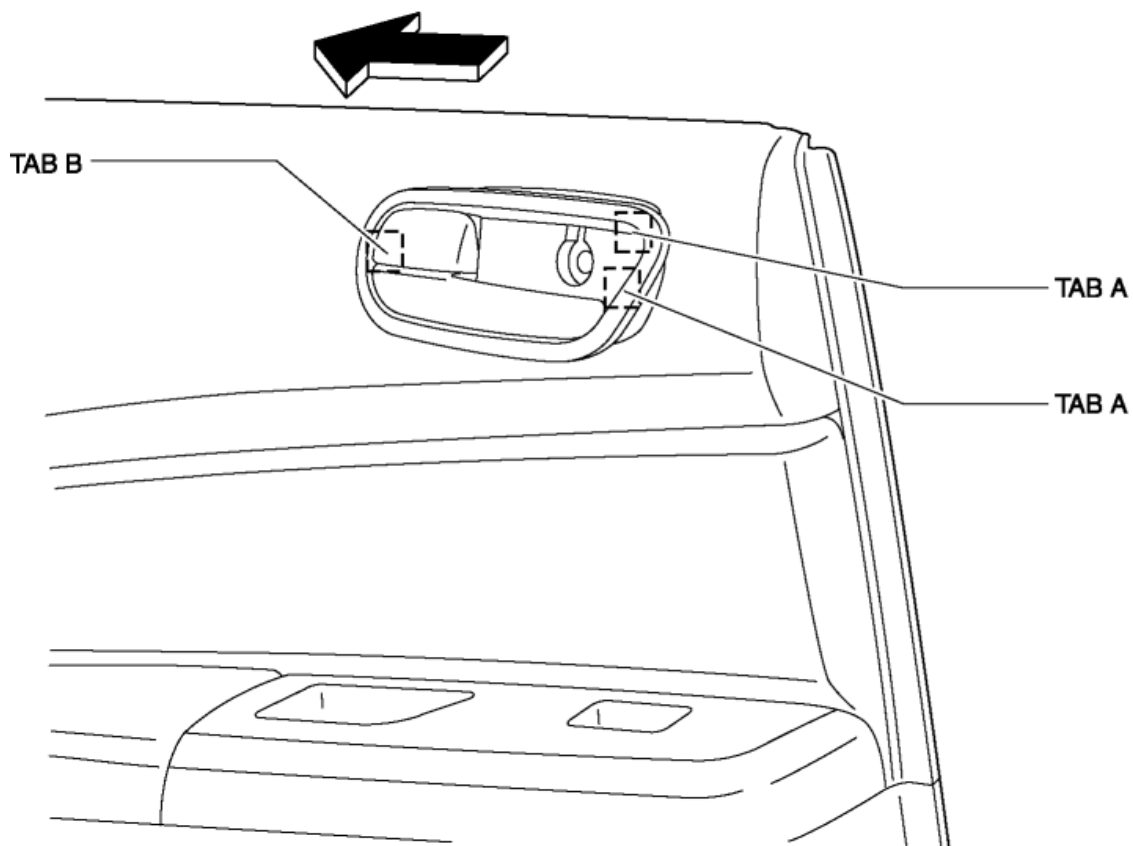

8. Turn the inner handle 90° in the direction of the arrow and remove it from the rear door trim.

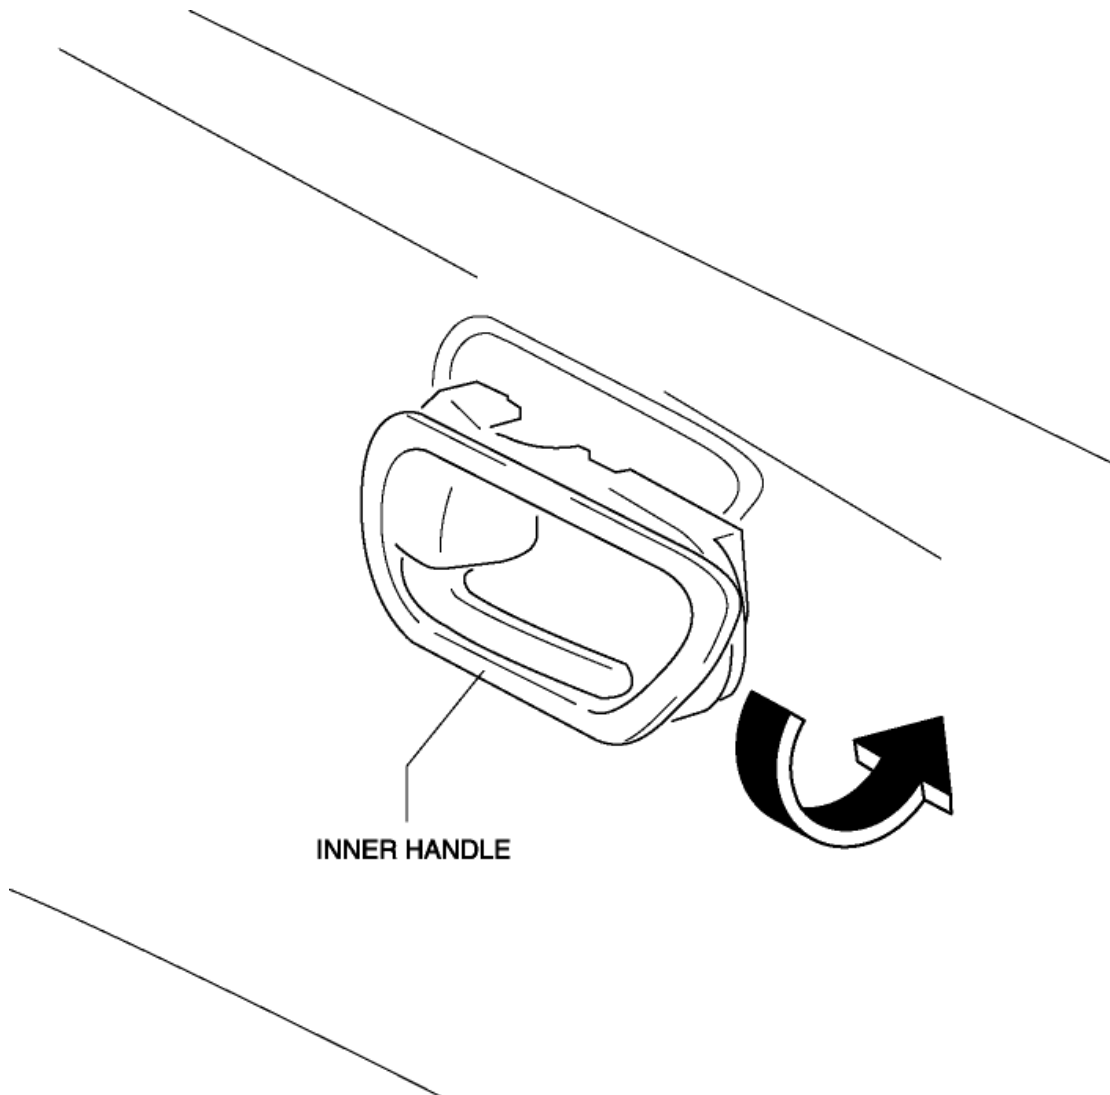

9. Disconnect the power window subswitch connector.

10. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)