


2012 - Mazda6 - Body and Accessories

FLOOR COVERING REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Front seats (See [FRONT SEAT REMOVAL/ INSTALLATION.](#))
 - b. Audio amplifier (Vehicles with Bose® system) (See [AUDIO AMPLIFIER REMOVAL/ INSTALLATION.](#))
 - c. Front scuff plates (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - d. Rear scuff plates (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - e. Front side trims (See [FRONT SIDE TRIM REMOVAL/ INSTALLATION.](#))
 - f. Steering shaft cover (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#) .)(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#) .)
 - g. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - h. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - i. Shift lever knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM LOCATION INDEX.](#))
 - j. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - k. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - l. Rear console (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
 - m. B-pillar lower trims (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.](#))
 - n. Fuel-filler lid opener bezel (See [FUEL-FILLER LID OPENER BEZEL REMOVAL/ INSTALLATION.](#))
 - o. Front seat belt lower anchor installation bolts (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
 - p. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
 - q. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
3. Remove the fasteners A and B.

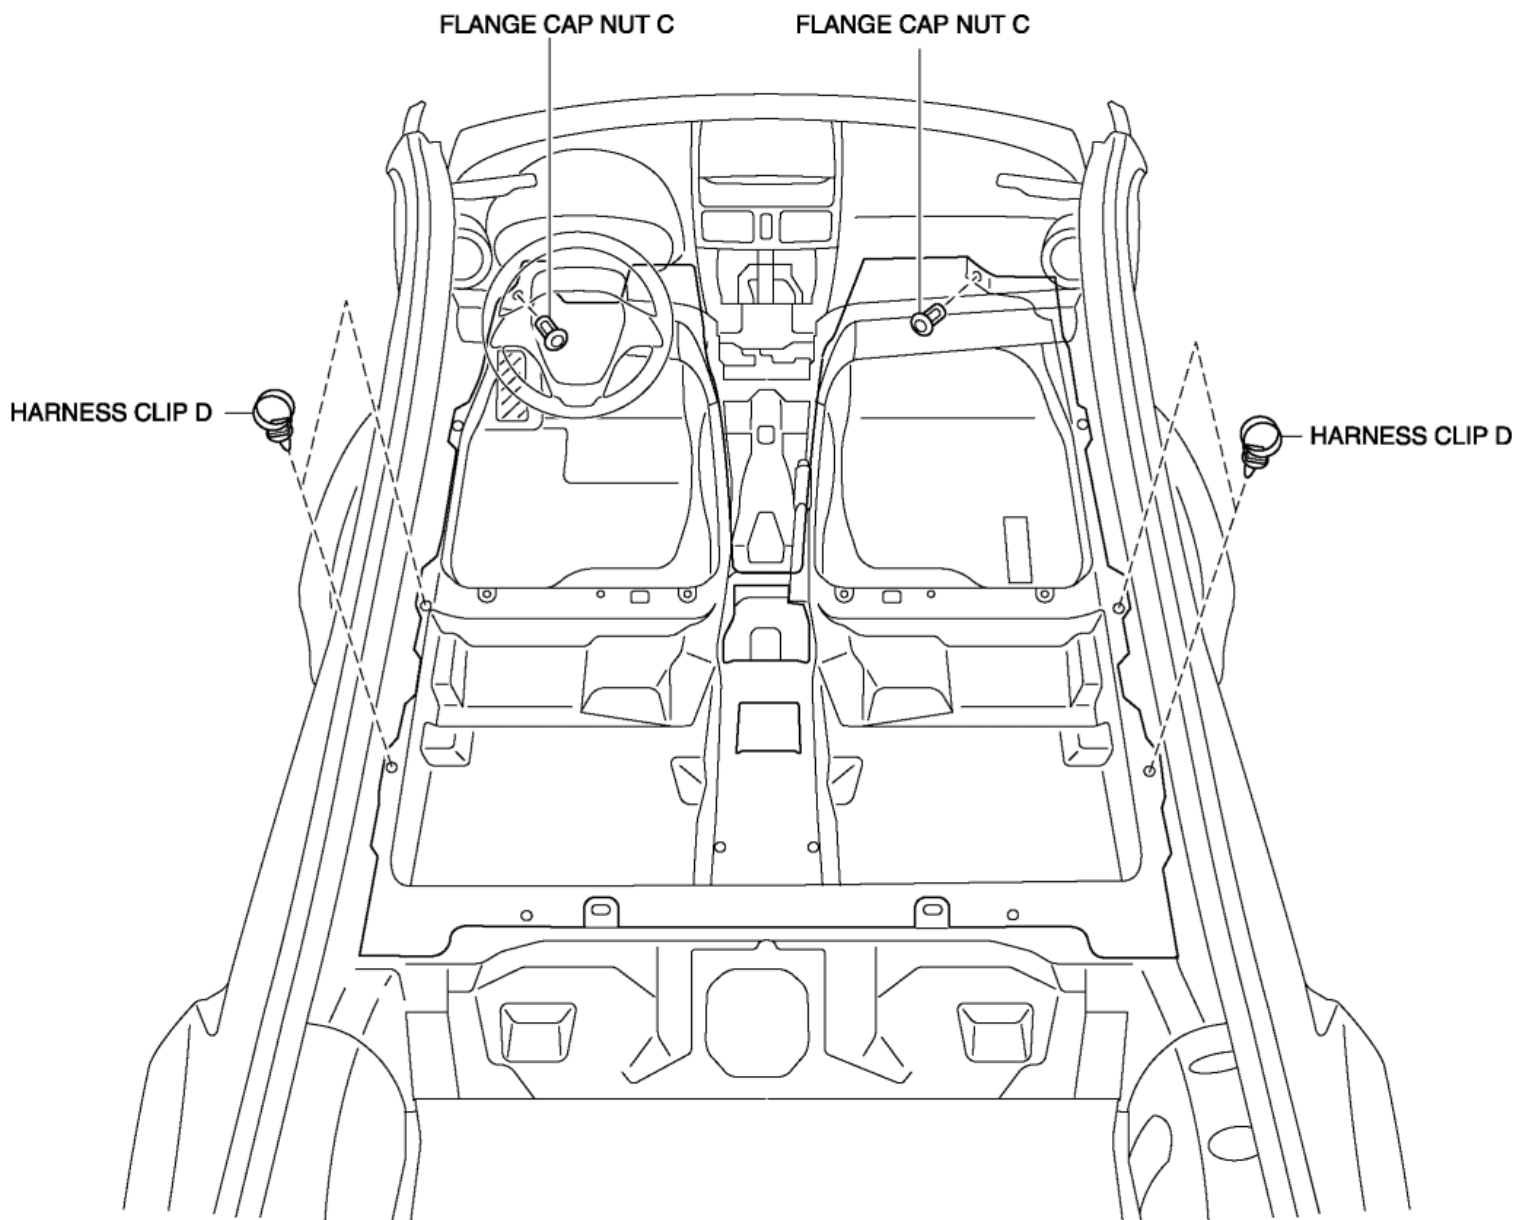


5. Take the floor covering off from the front passenger-side door opening.
6. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

2012 - Mazda6 - Body and Accessories

FLOOR COVERING REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Front seats (See [FRONT SEAT REMOVAL/ INSTALLATION.](#))
 - b. Audio amplifier (Vehicles with Bose® system) (See [AUDIO AMPLIFIER REMOVAL/ INSTALLATION.](#))
 - c. Front scuff plates (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - d. Rear scuff plates (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - e. Front side trims (See [FRONT SIDE TRIM REMOVAL/ INSTALLATION.](#))
 - f. Steering shaft cover (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#) .)(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#) .)
 - g. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - h. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - i. Shift lever knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM LOCATION INDEX.](#))
 - j. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - k. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - l. Rear console (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
 - m. B-pillar lower trims (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.](#))
 - n. Fuel-filler lid opener bezel (See [FUEL-FILLER LID OPENER BEZEL REMOVAL/ INSTALLATION.](#))
 - o. Front seat belt lower anchor installation bolts (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
 - p. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
 - q. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
3. Remove the fasteners A and B.

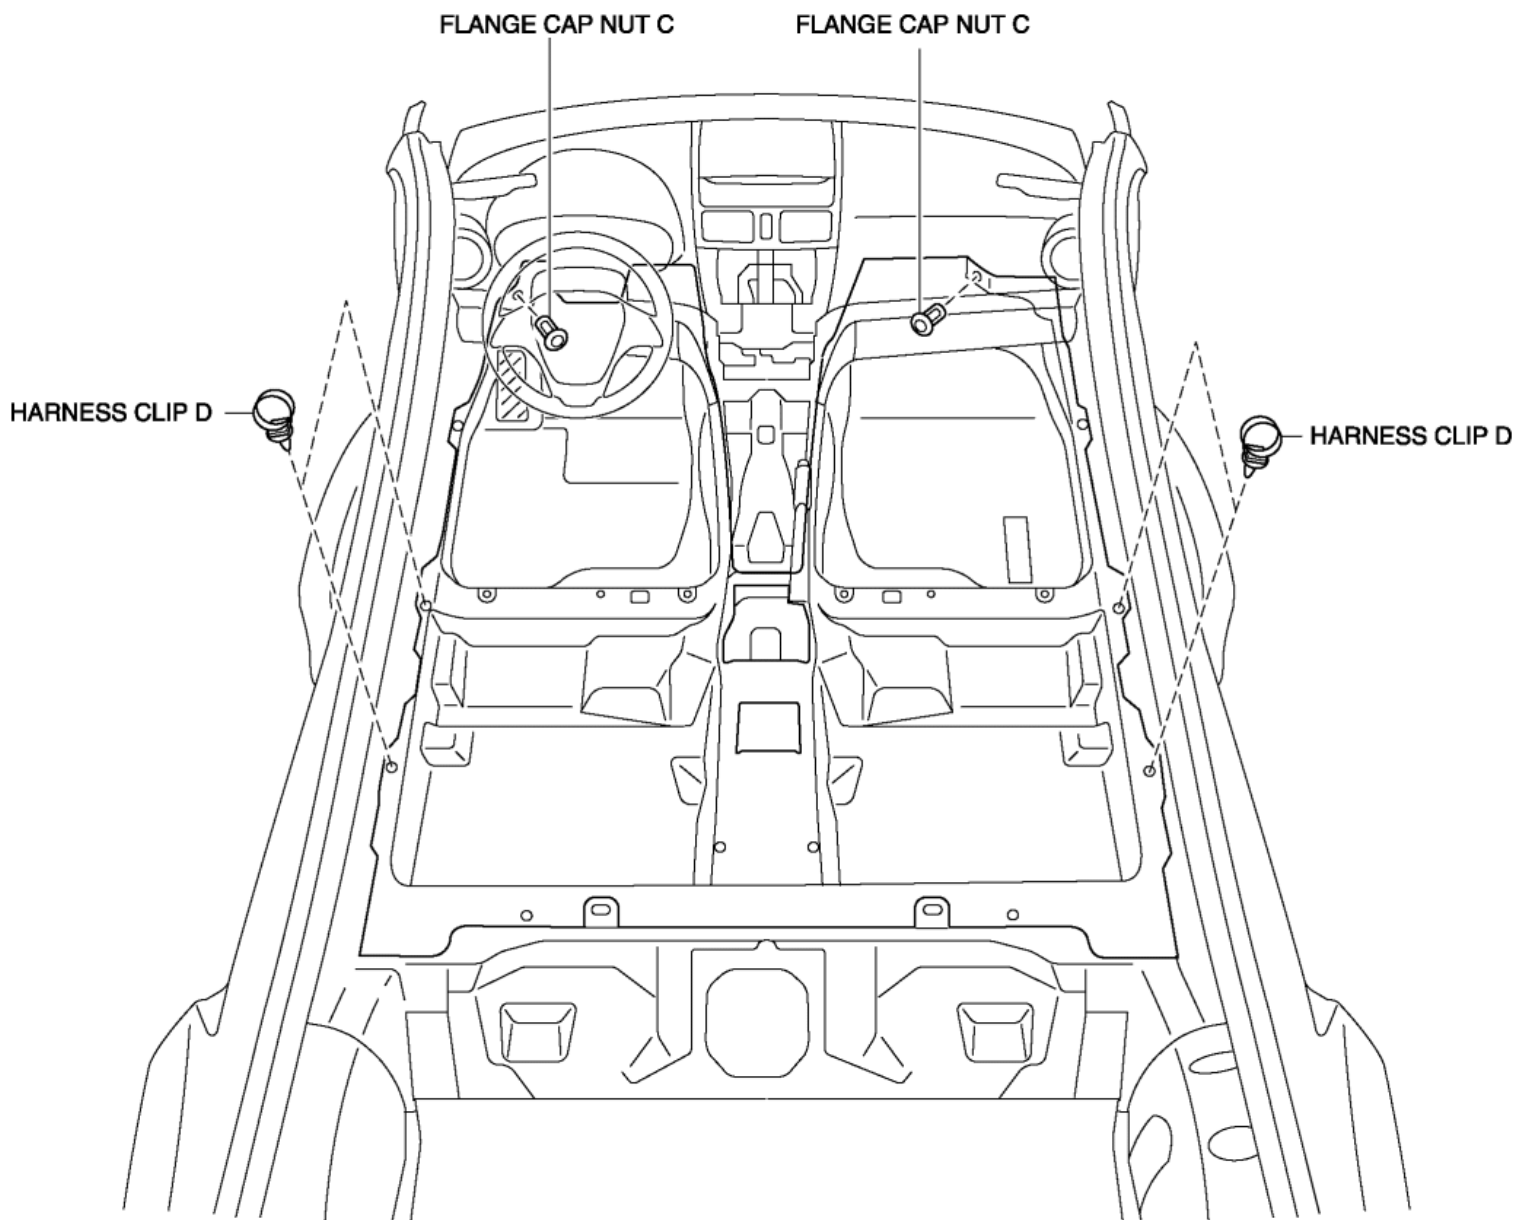

5. Take the floor covering off from the front passenger-side door opening.
6. Install in the reverse order of removal.

[< Previous](#) [Next >](#)