


2012 - Mazda6 - Body and Accessories

TRUNK SIDE TRIM REMOVAL/ INSTALLATION

1. Remove the trunk end trim. (See [TRUNK END TRIM REMOVAL/ INSTALLATION.](#))
2. Remove the rear seat cushion. (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
3. Remove the rear side seat back. (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))

Left Side


1. Remove the fasteners and hook, then remove the trunk side trim. (See [Hook Removal Note.](#))

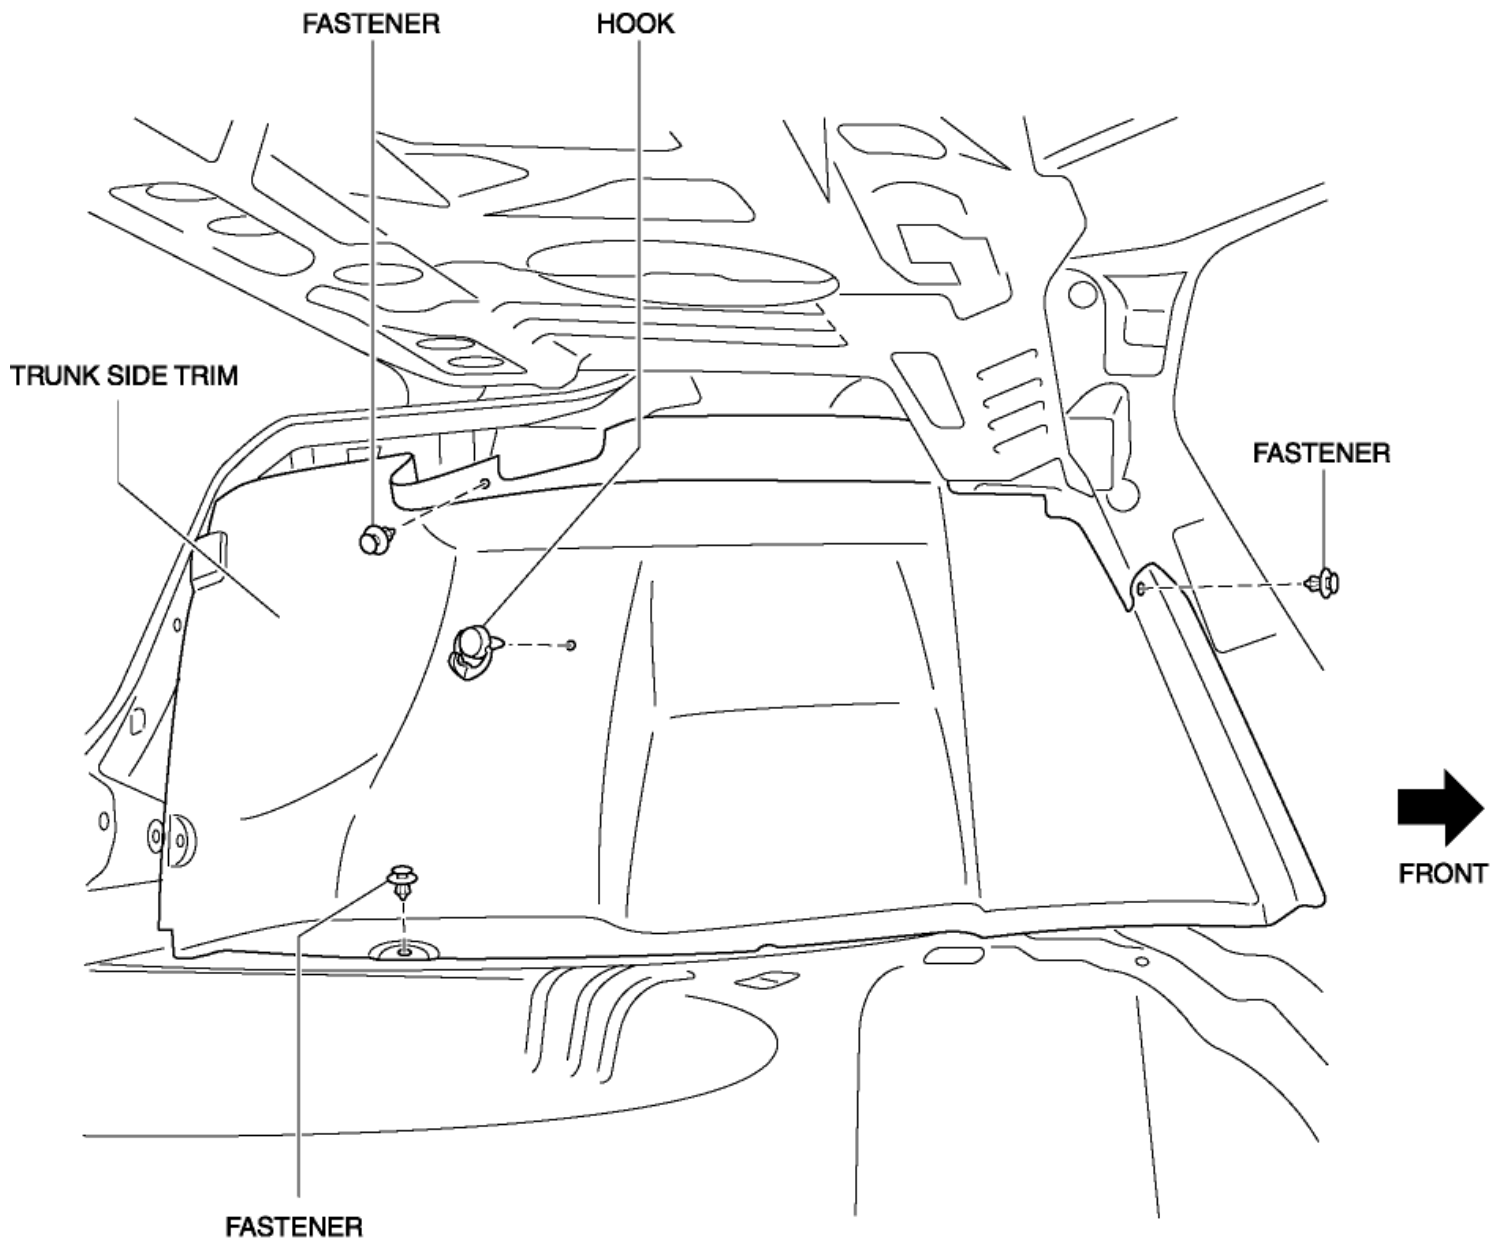

2. Install in the reverse order of removal.

Right Side


1. Remove the fasteners and hook, then remove the trunk side trim. (See [Hook Removal Note](#).)

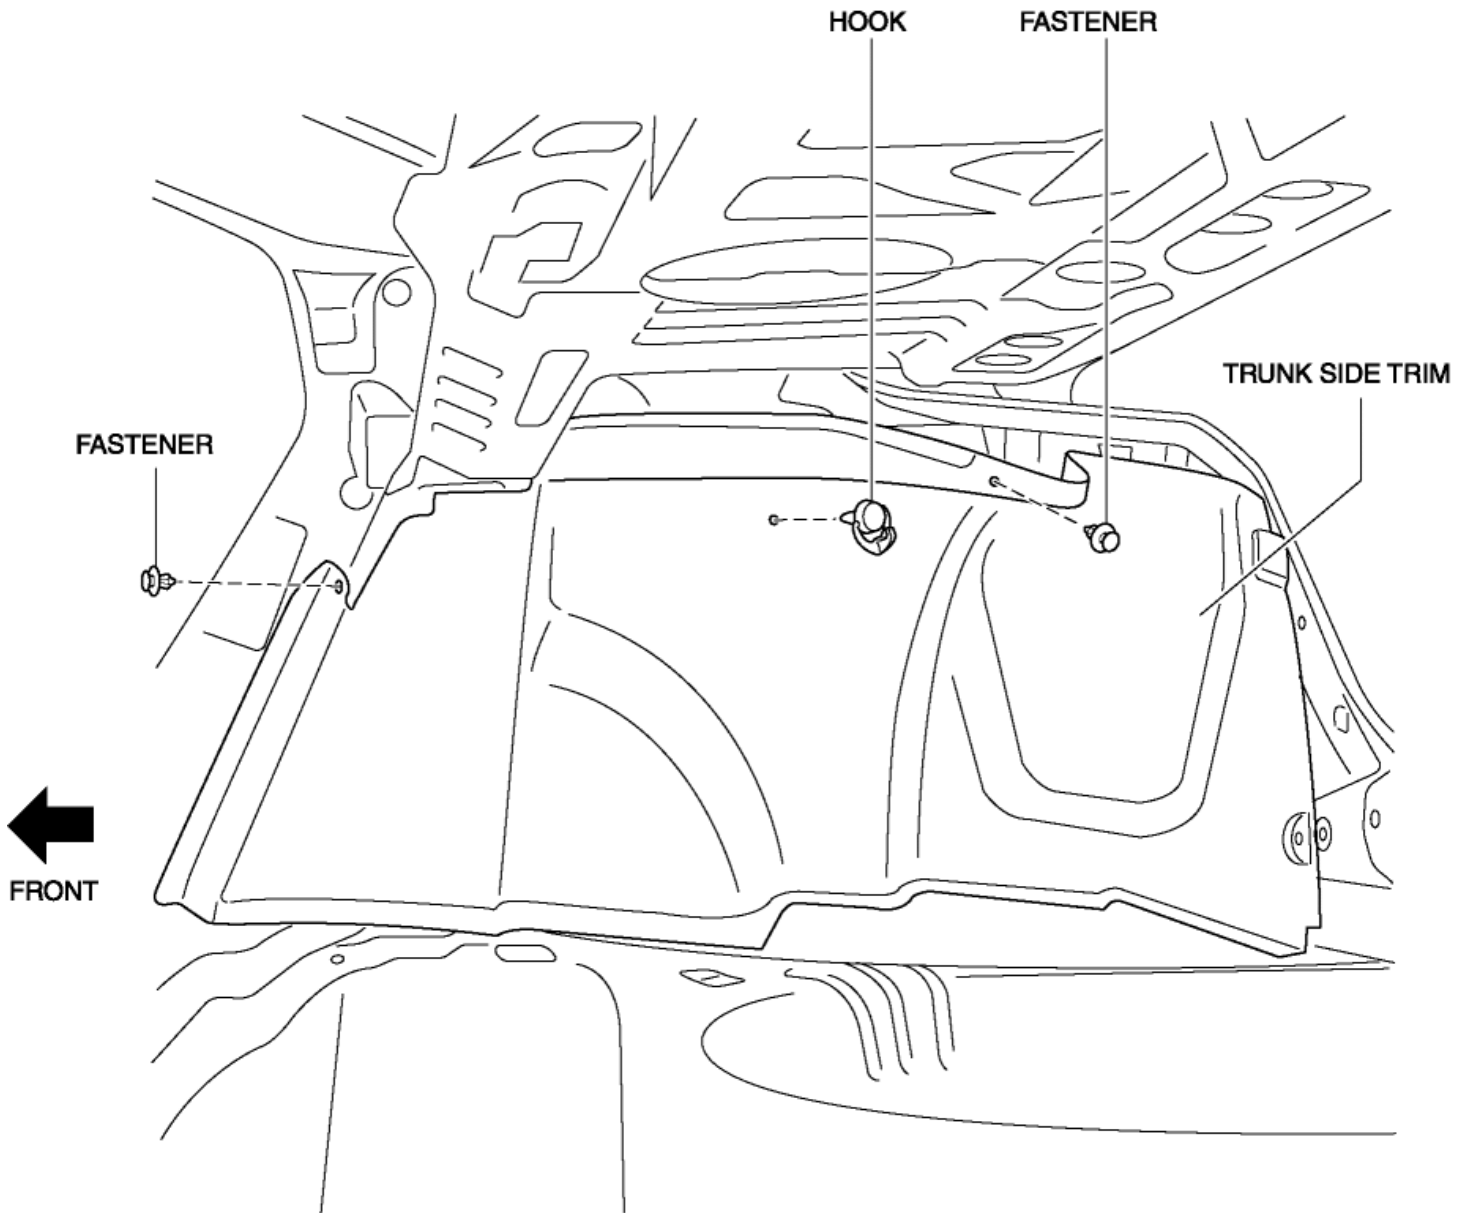

2. Install in the reverse order of removal.

Hook Removal Note

1. Remove hook by inserting a small flathead screwdriver into the service hole as shown in the figure.

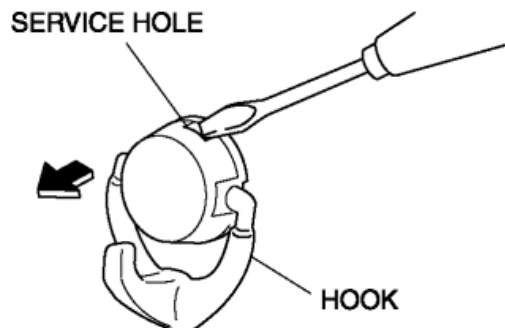


2012 - Mazda6 - Body and Accessories

TRUNK SIDE TRIM REMOVAL/ INSTALLATION

1. Remove the trunk end trim. (See [TRUNK END TRIM REMOVAL/ INSTALLATION.](#))
2. Remove the rear seat cushion. (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
3. Remove the rear side seat back. (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))

Left Side


1. Remove the fasteners and hook, then remove the trunk side trim. (See [Hook Removal Note.](#))

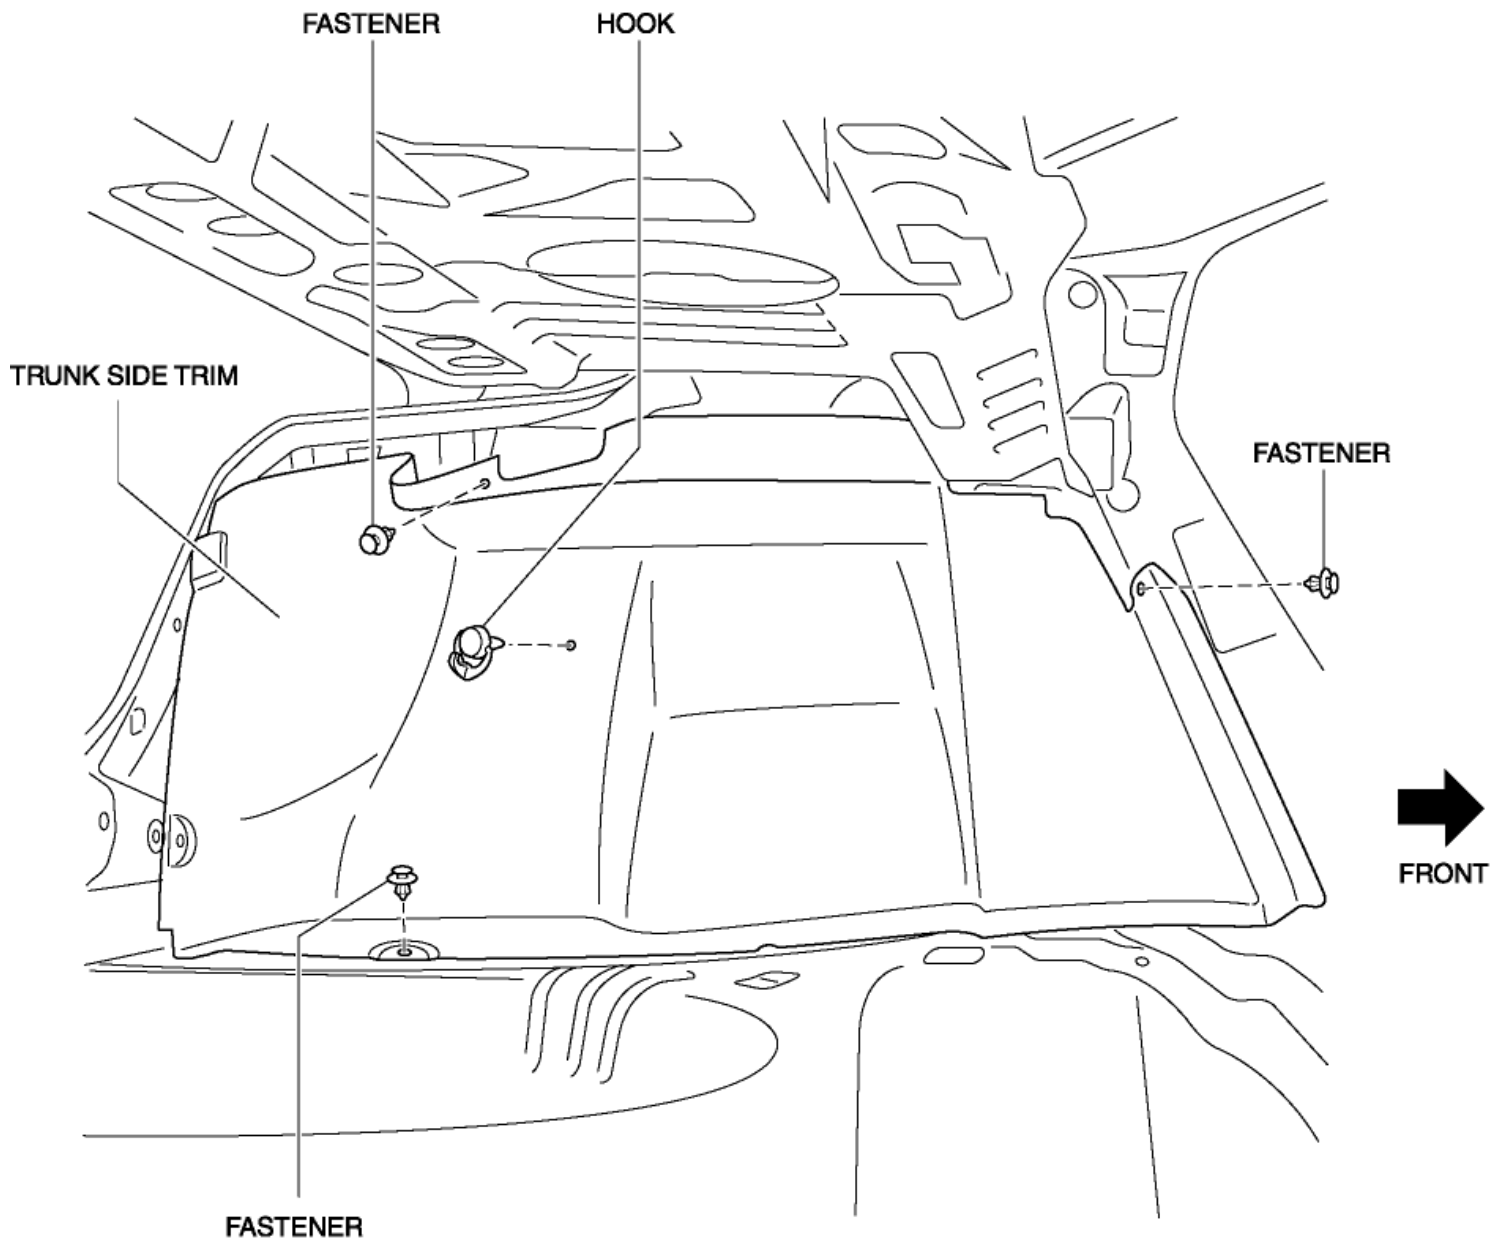

2. Install in the reverse order of removal.

Right Side

1. Remove the fasteners and hook, then remove the trunk side trim. (See [Hook Removal Note](#).)

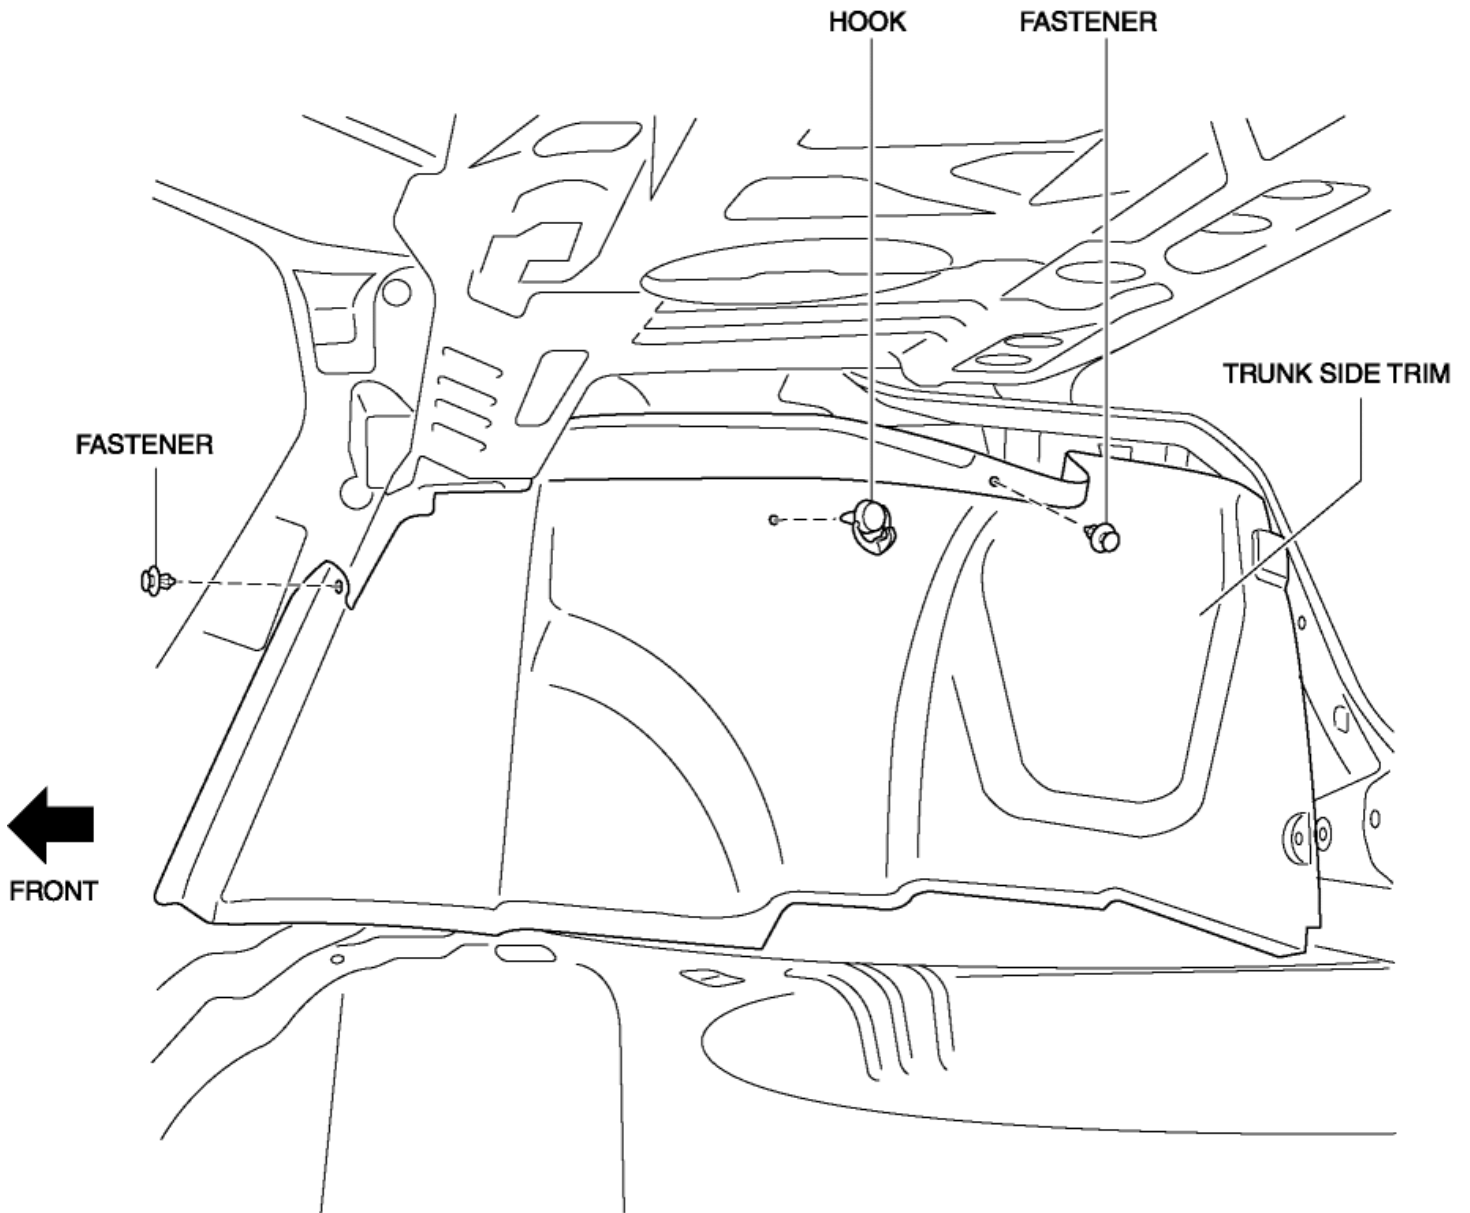

2. Install in the reverse order of removal.

Hook Removal Note

1. Remove hook by inserting a small flathead screwdriver into the service hole as shown in the figure.

