


2012 - Mazda6 - Body and Accessories

VENTILATOR GRILLE REMOVAL/ INSTALLATION

Center

1. Disconnect the negative battery cable.
2. Remove the center panel upper. (See [CENTER PANEL UPPER REMOVAL/ INSTALLATION](#))
3. Remove the screw.


CENTER PANEL UPPER

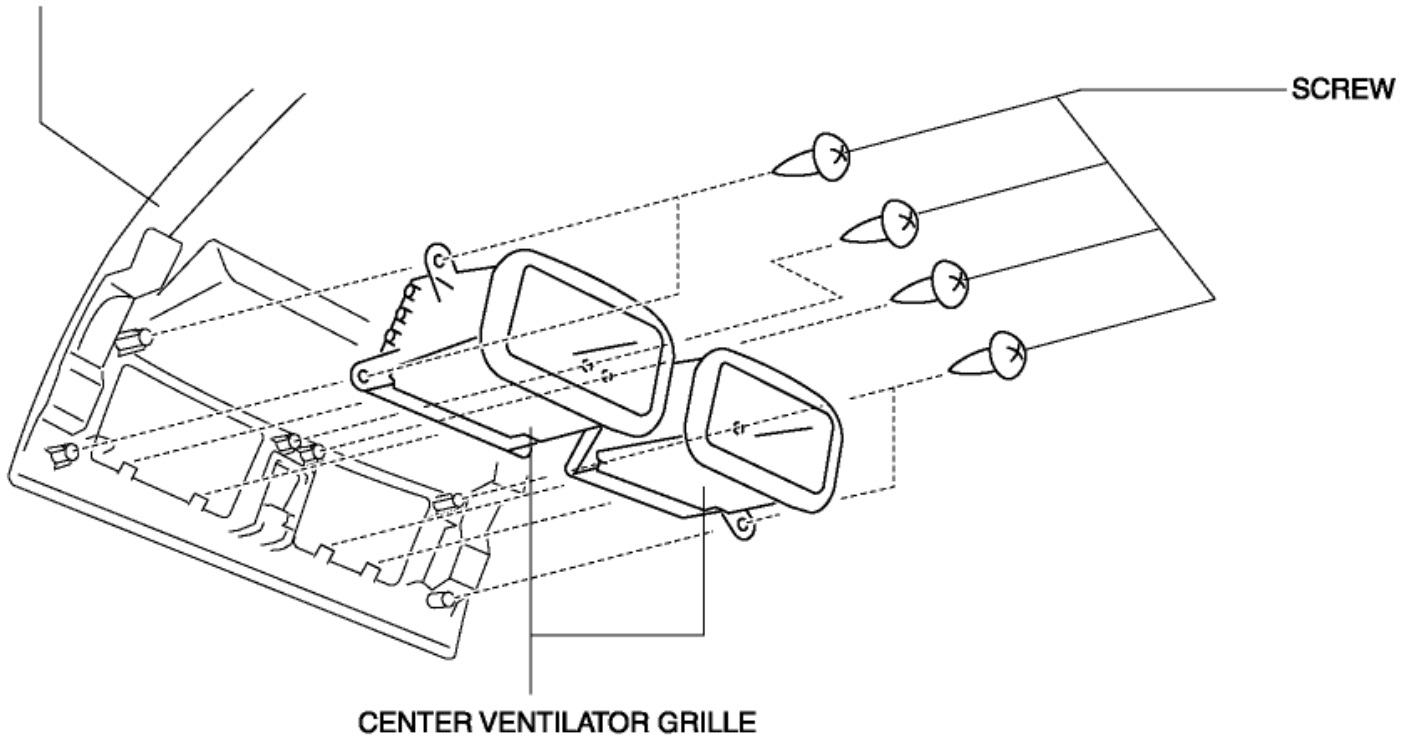

4. Remove the center ventilator grille from the center panel upper.
5. Install in the reverse order of removal.

Side


1. Pull out the fin of the side ventilator grill with turning it while disconnecting the tab of the ventilator grill cover.

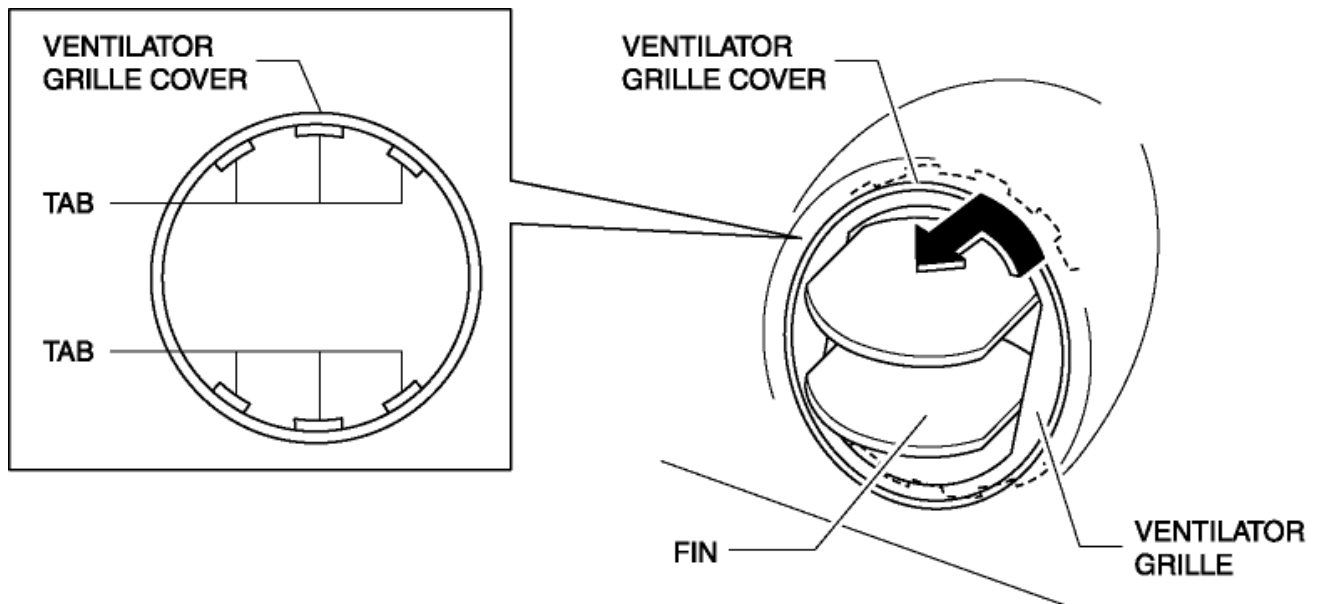

2. Install in the reverse order of removal.

Rear (Vehicles With Rear Ventilator Grille)

1. Disconnect the negative battery cable.
2. Remove the rear console panel. (See [REAR CONSOLE REMOVAL/ INSTALLATION](#).)
3. Remove the tabs A

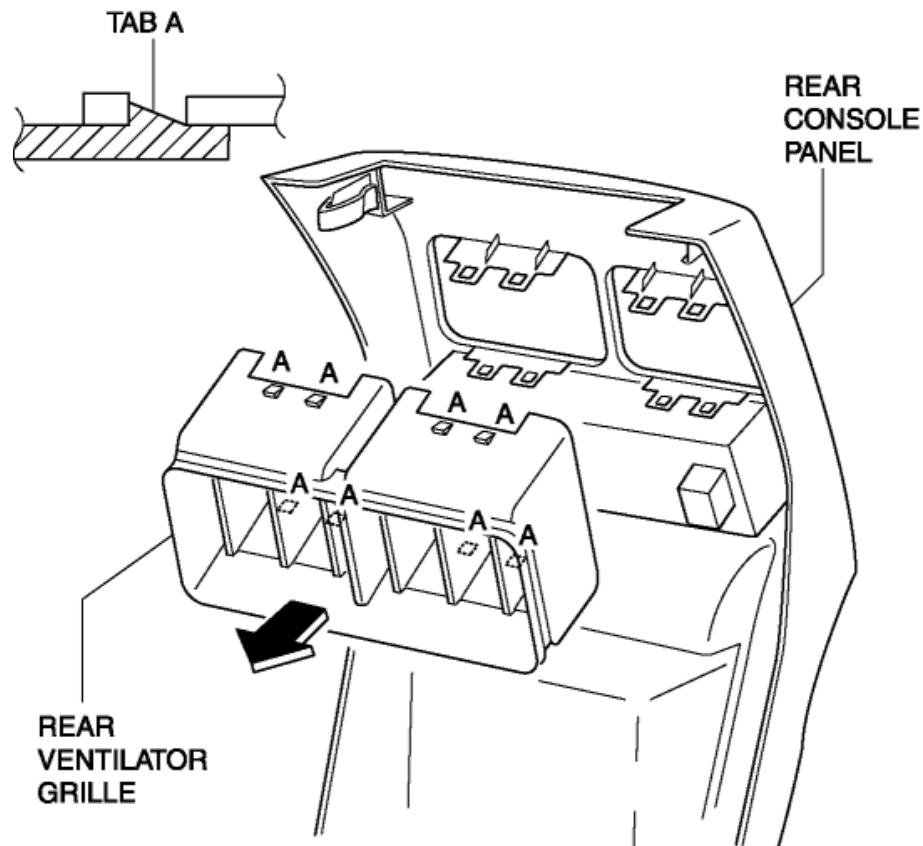

4. Remove the rear ventilator grille.
5. Install in the reverse order of removal.


2012 - Mazda6 - Body and Accessories

VENTILATOR GRILLE REMOVAL/ INSTALLATION

Center

1. Disconnect the negative battery cable.
2. Remove the center panel upper. (See [CENTER PANEL UPPER REMOVAL/ INSTALLATION](#))
3. Remove the screw.


CENTER PANEL UPPER

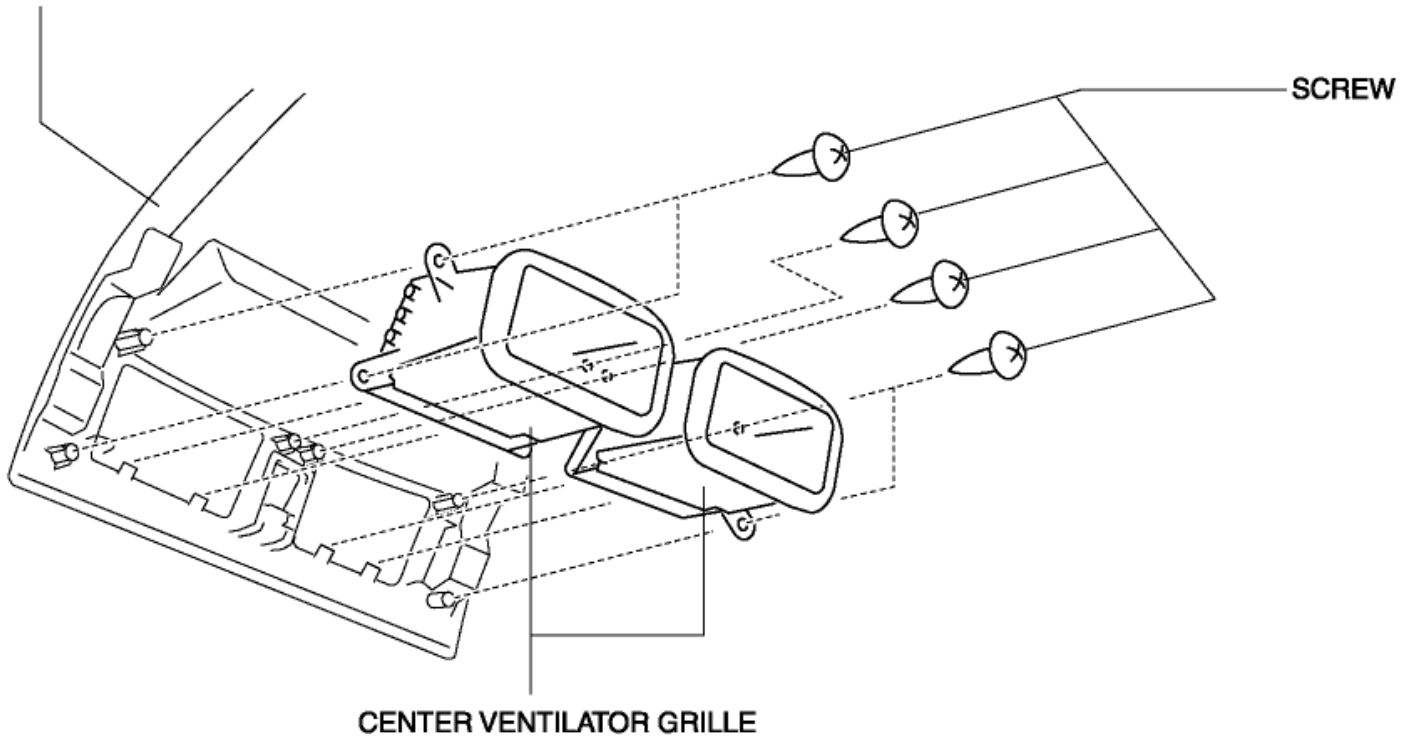

4. Remove the center ventilator grille from the center panel upper.
5. Install in the reverse order of removal.

Side


1. Pull out the fin of the side ventilator grill with turning it while disconnecting the tab of the ventilator grill cover.

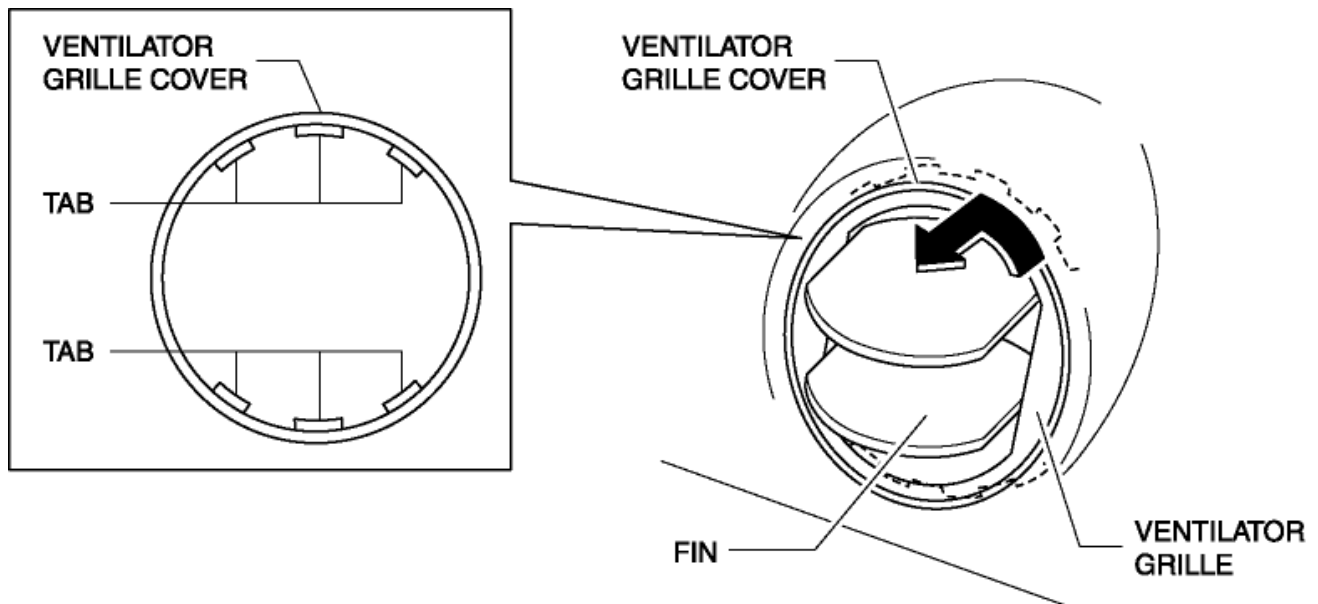

2. Install in the reverse order of removal.

Rear (Vehicles With Rear Ventilator Grille)

1. Disconnect the negative battery cable.
2. Remove the rear console panel. (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
3. Remove the tabs A

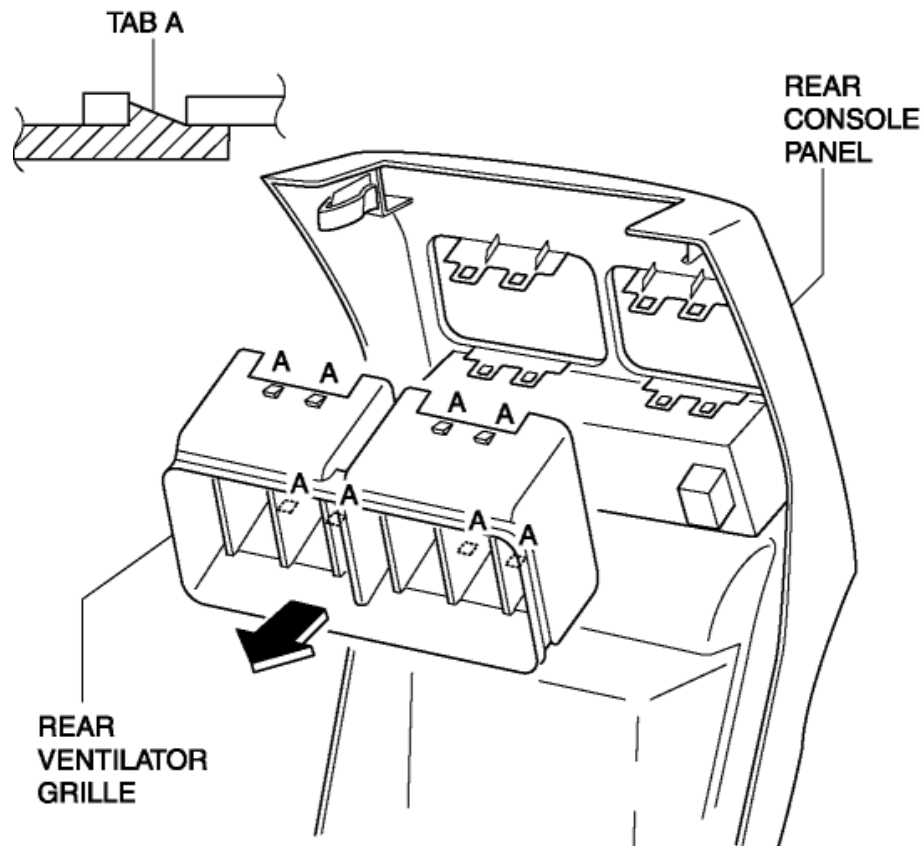

4. Remove the rear ventilator grille.
5. Install in the reverse order of removal.

