



2012 - Mazda6 - Body and Accessories

SHIFT PANEL REMOVAL/ INSTALLATION

1. Remove the shift knob. (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION](#))
2. Pull the shift panel in the direction of the arrow shown in the figure and remove it while detaching the hooks.

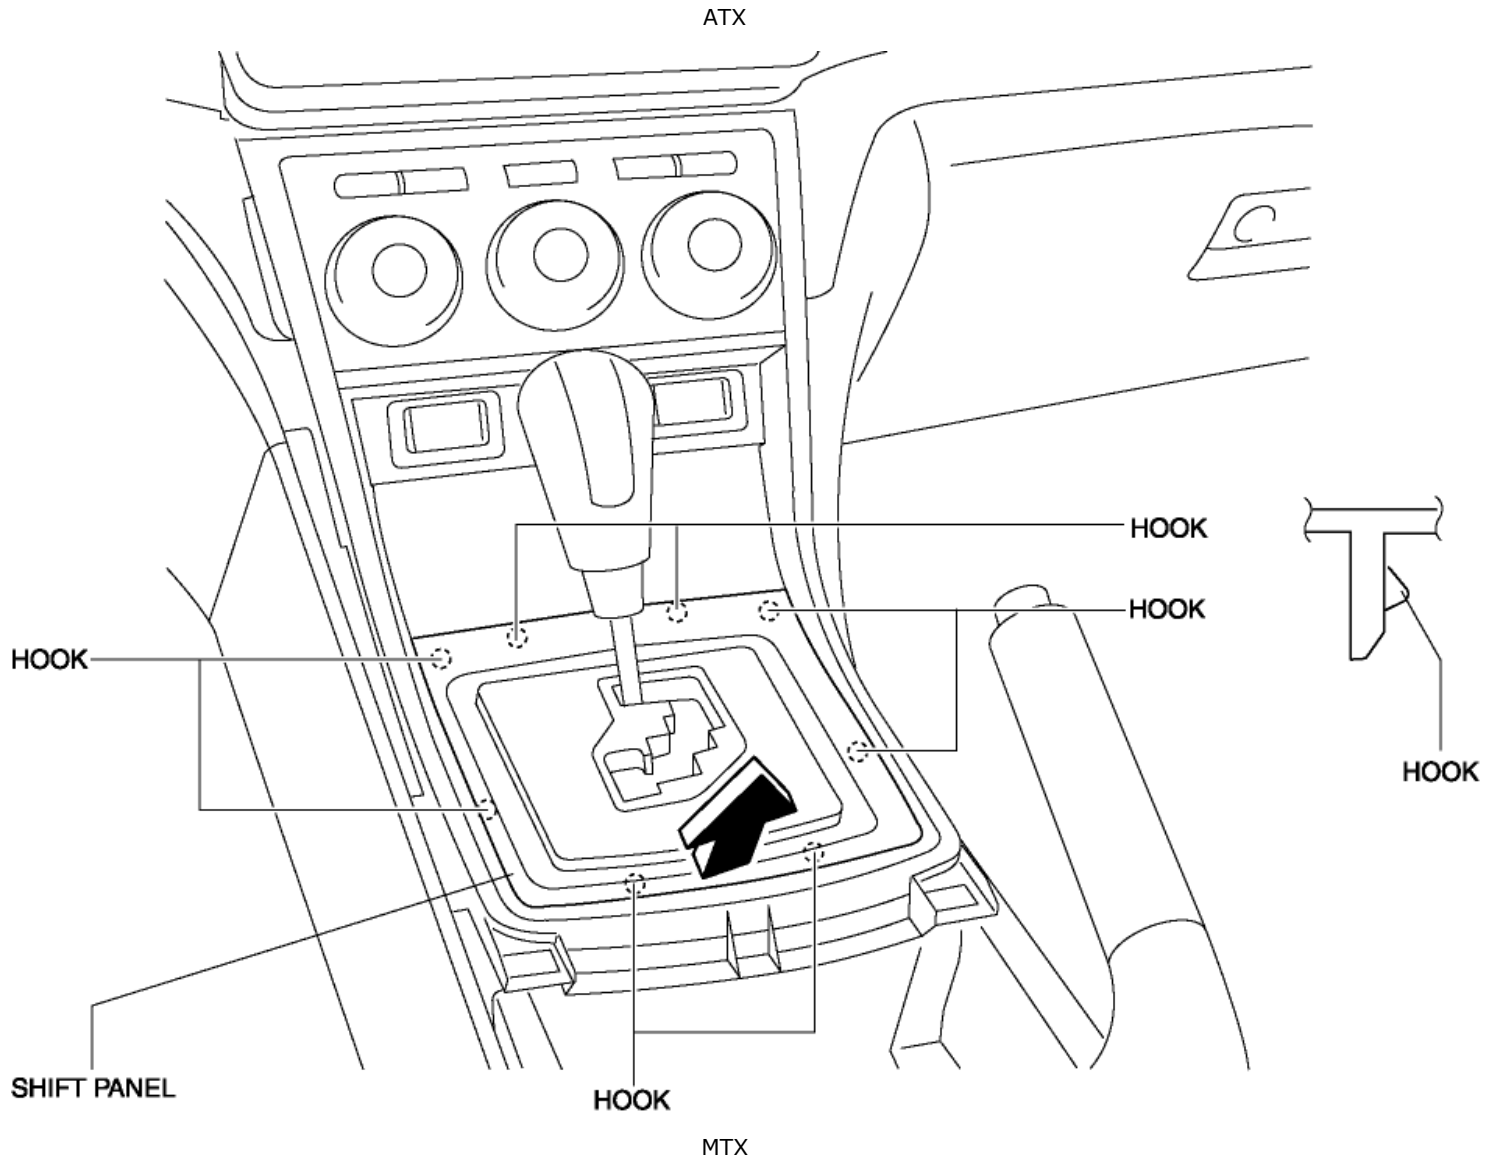

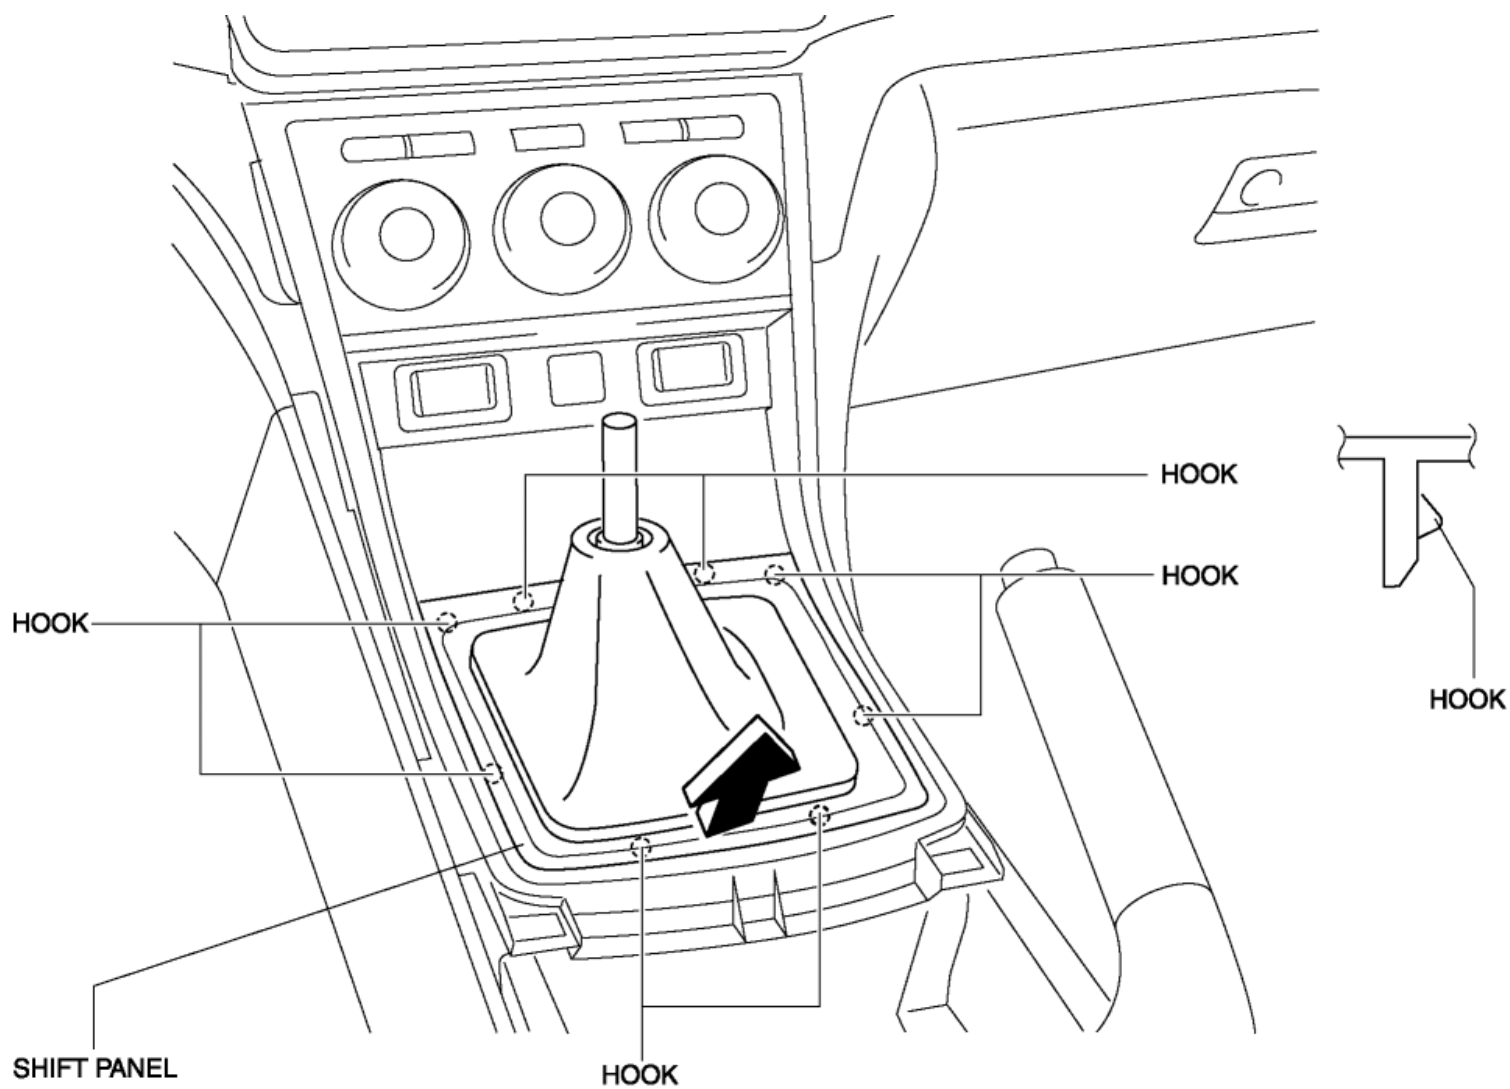

3. Remove the shift panel.
4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


© 2012 Mazda North American Operations, U.S.A.


[Back to Top](#)

2012 - Mazda6 - Body and Accessories

SHIFT PANEL REMOVAL/ INSTALLATION

1. Remove the shift knob. (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION](#))
2. Pull the shift panel in the direction of the arrow shown in the figure and remove it while detaching the hooks.

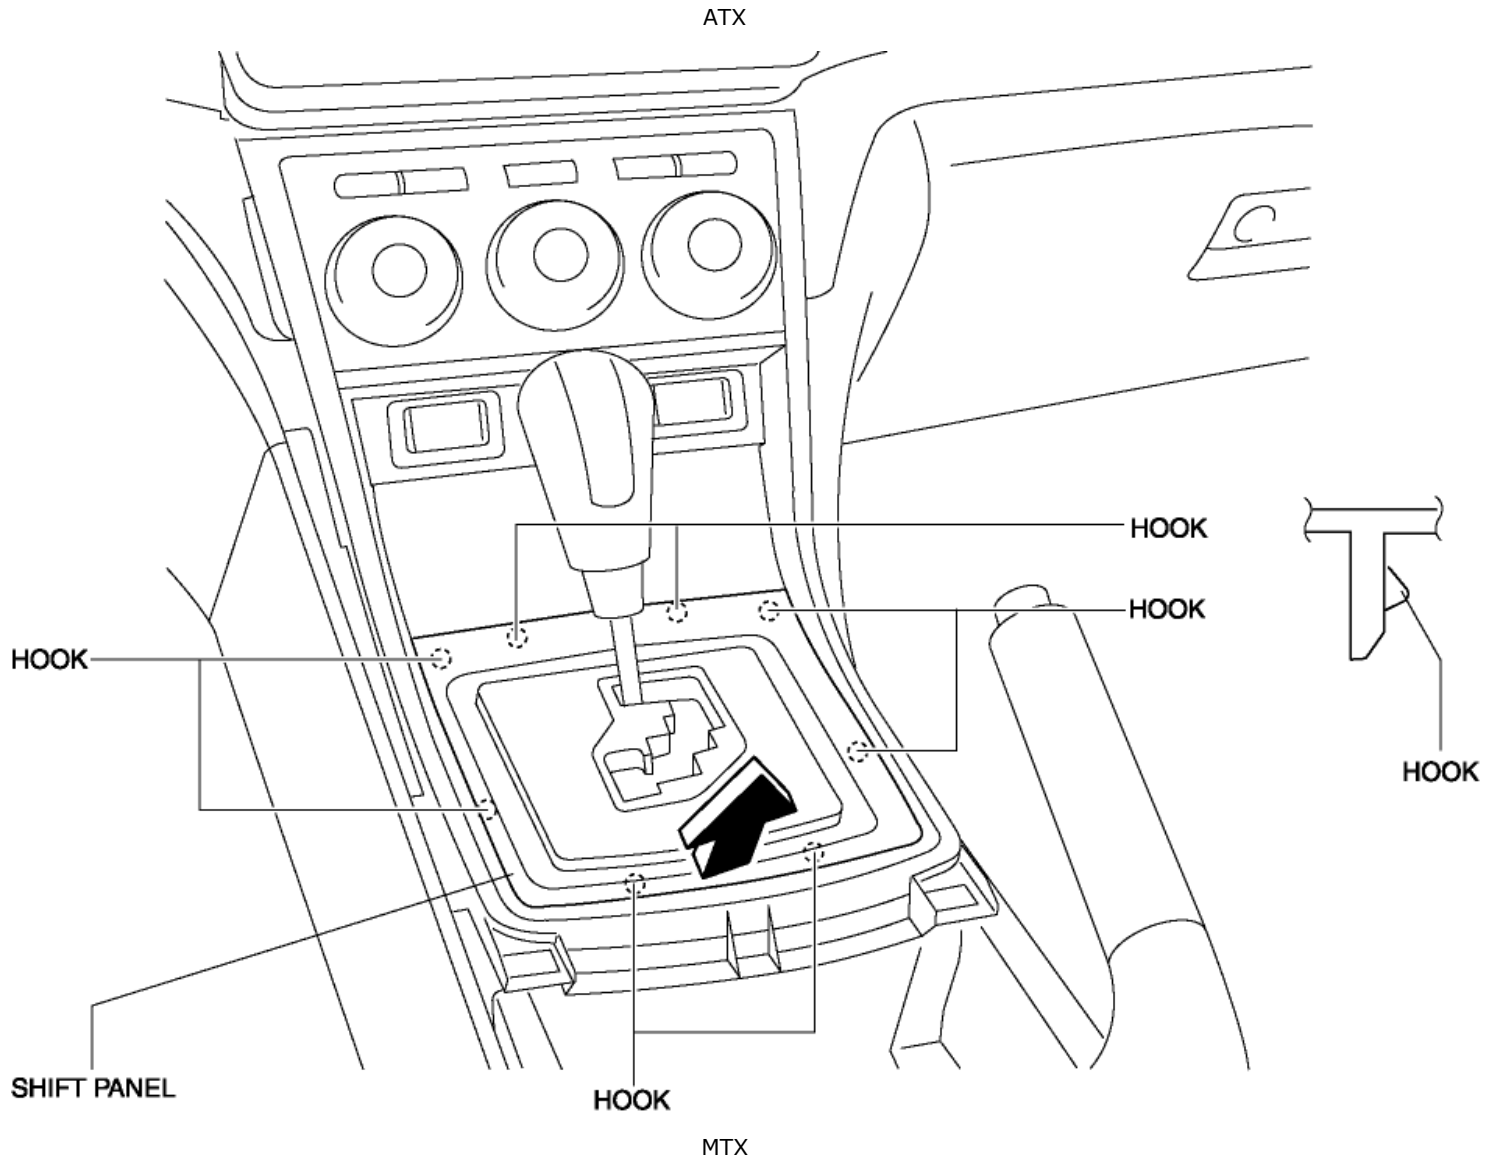

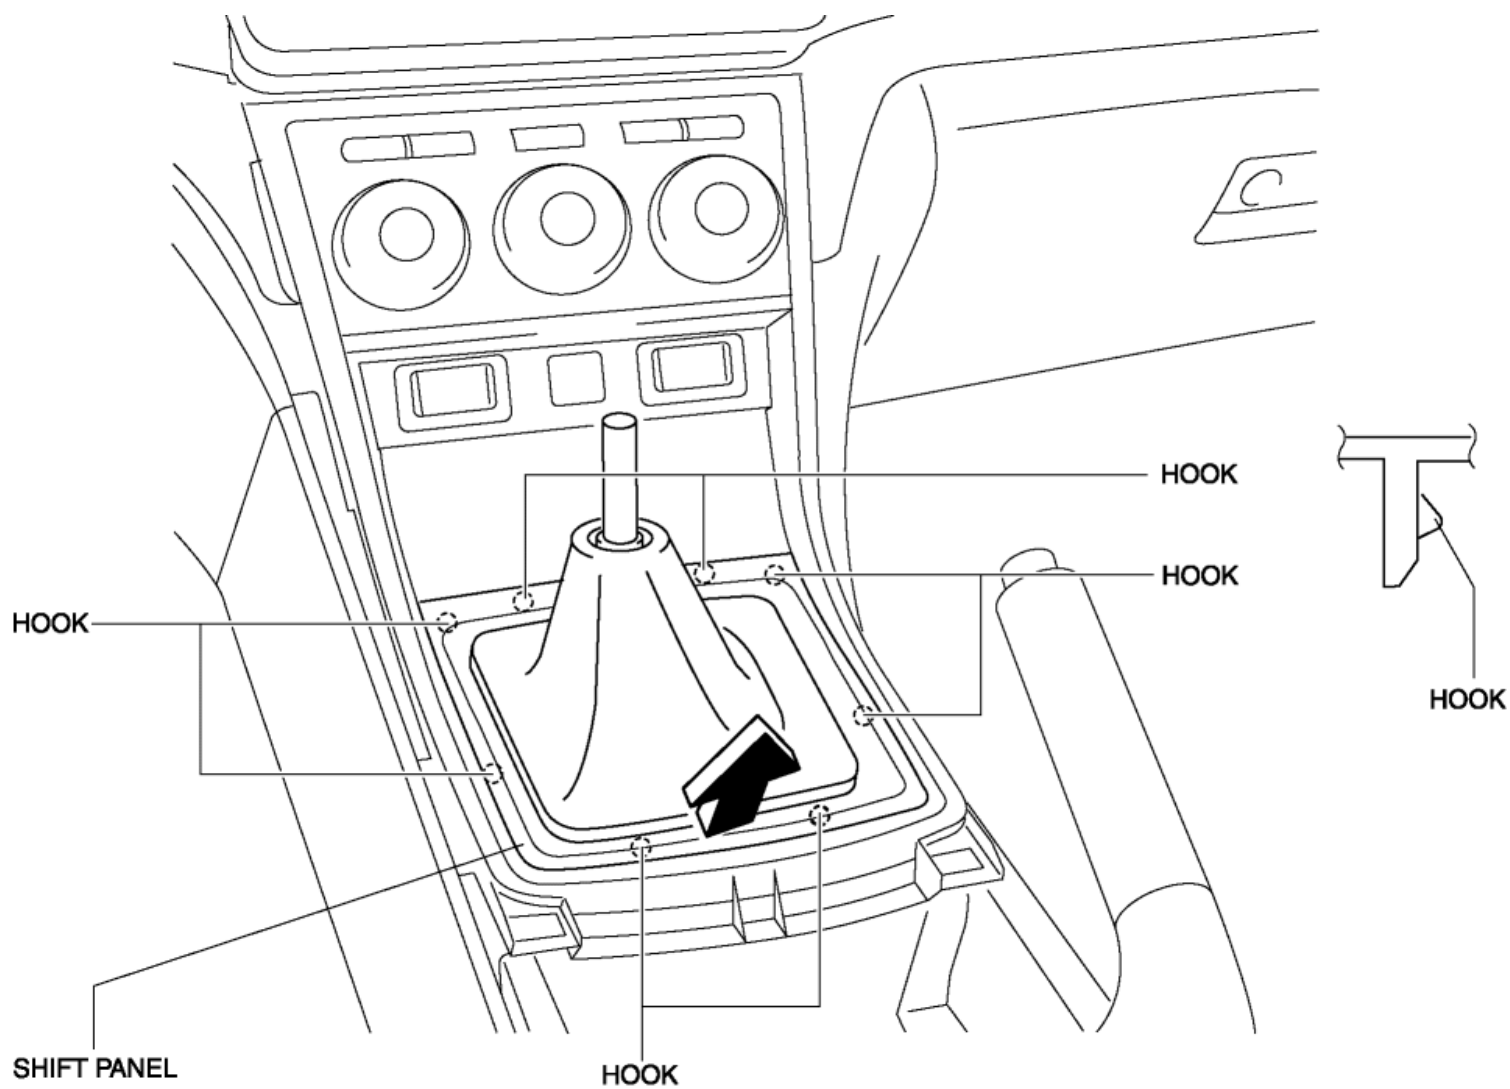

3. Remove the shift panel.

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)