



2012 - Mazda6 - Body and Accessories

FUEL-FILLER LID OPENER BEZEL REMOVAL/ INSTALLATION

1. Remove the screw.

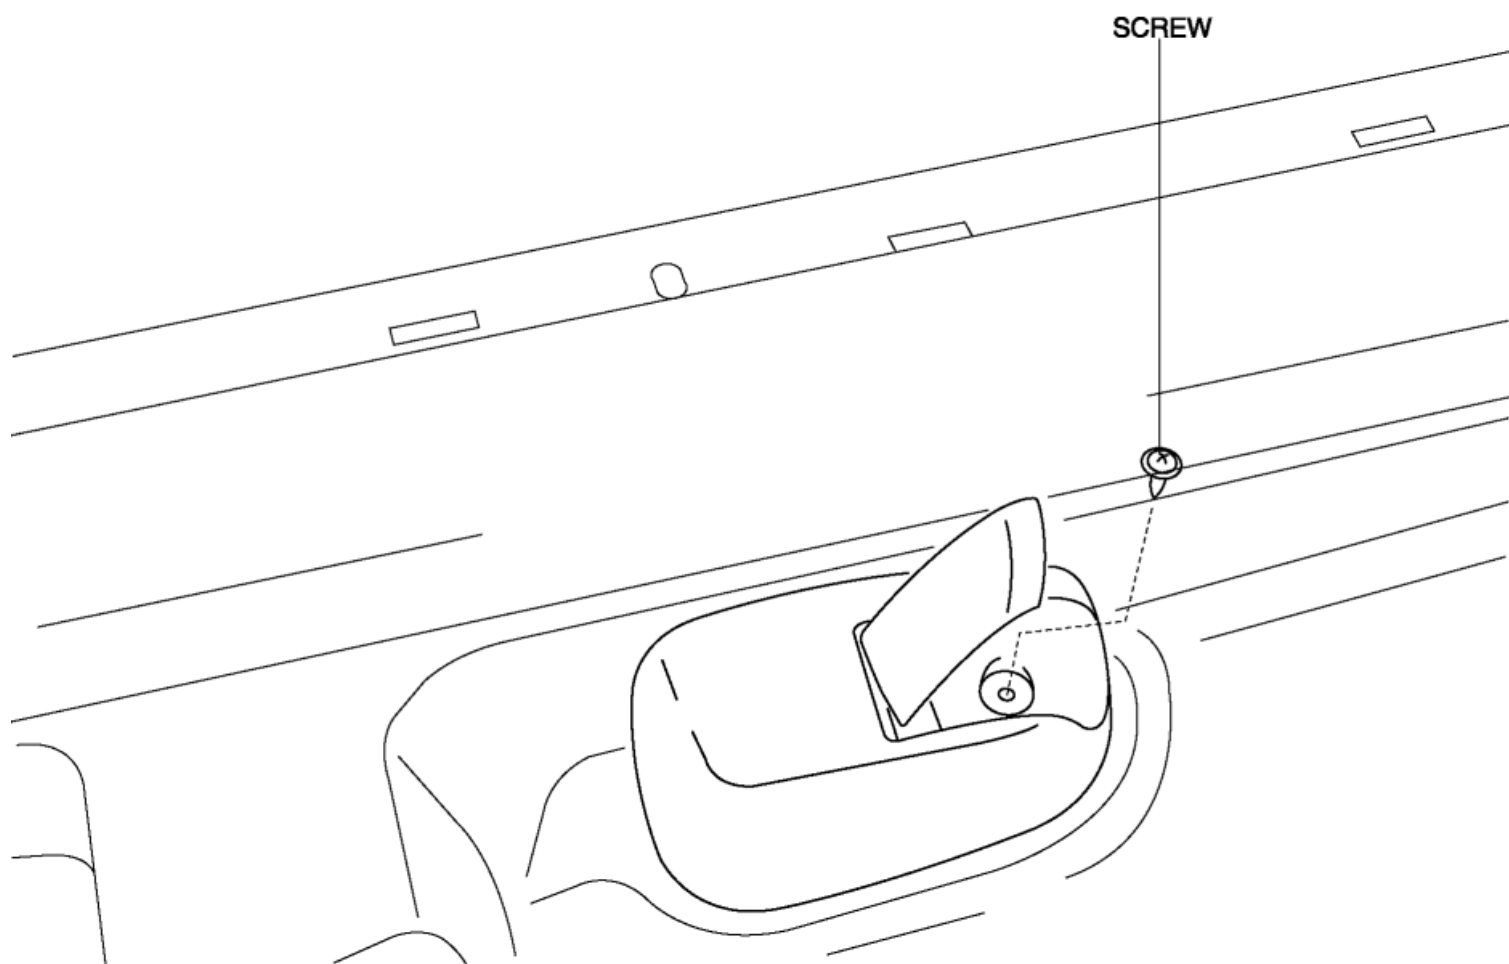

2. Move the fuel-filler lid opener bezel in the direction of the arrow shown in the figure.

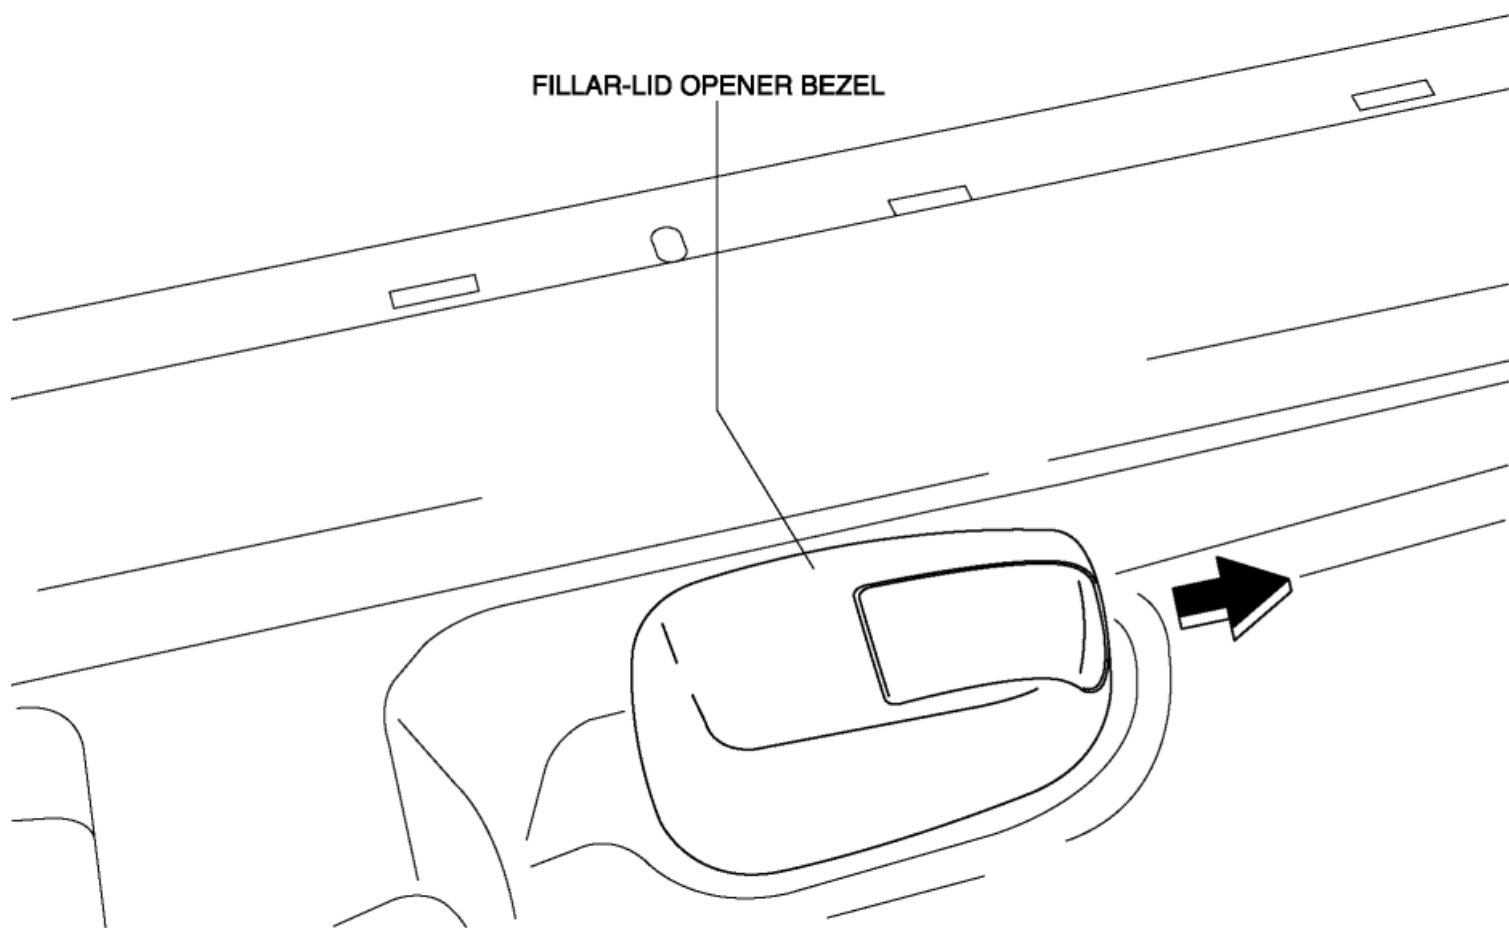

3. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)


2012 - Mazda6 - Body and Accessories

FUEL-FILLER LID OPENER BEZEL REMOVAL/ INSTALLATION

1. Remove the screw.

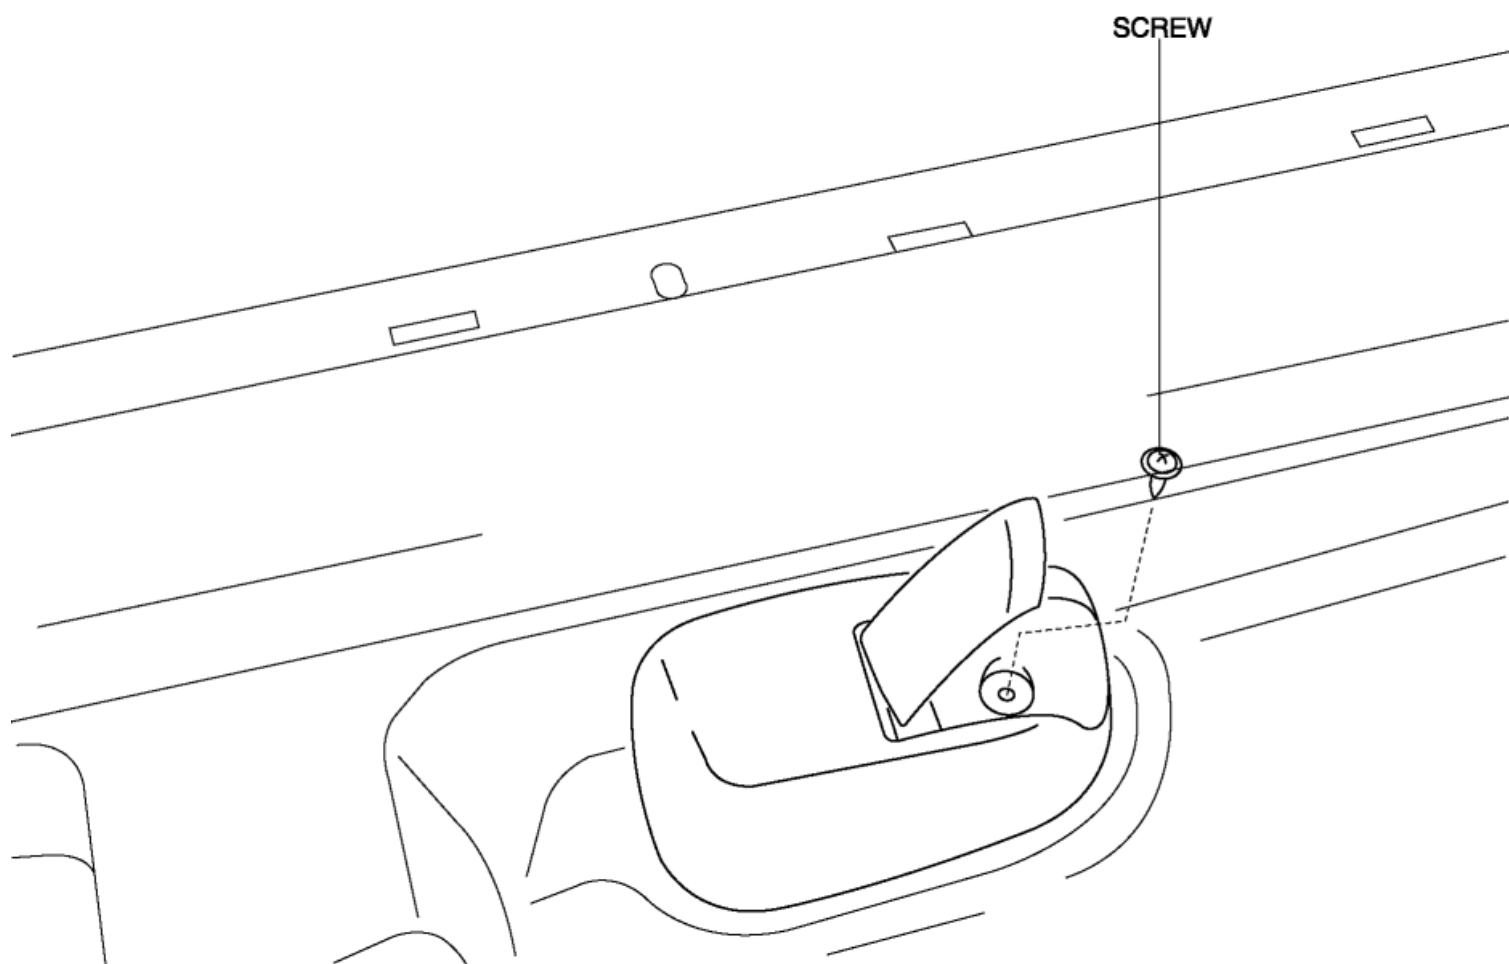

2. Move the fuel-filler lid opener bezel in the direction of the arrow shown in the figure.

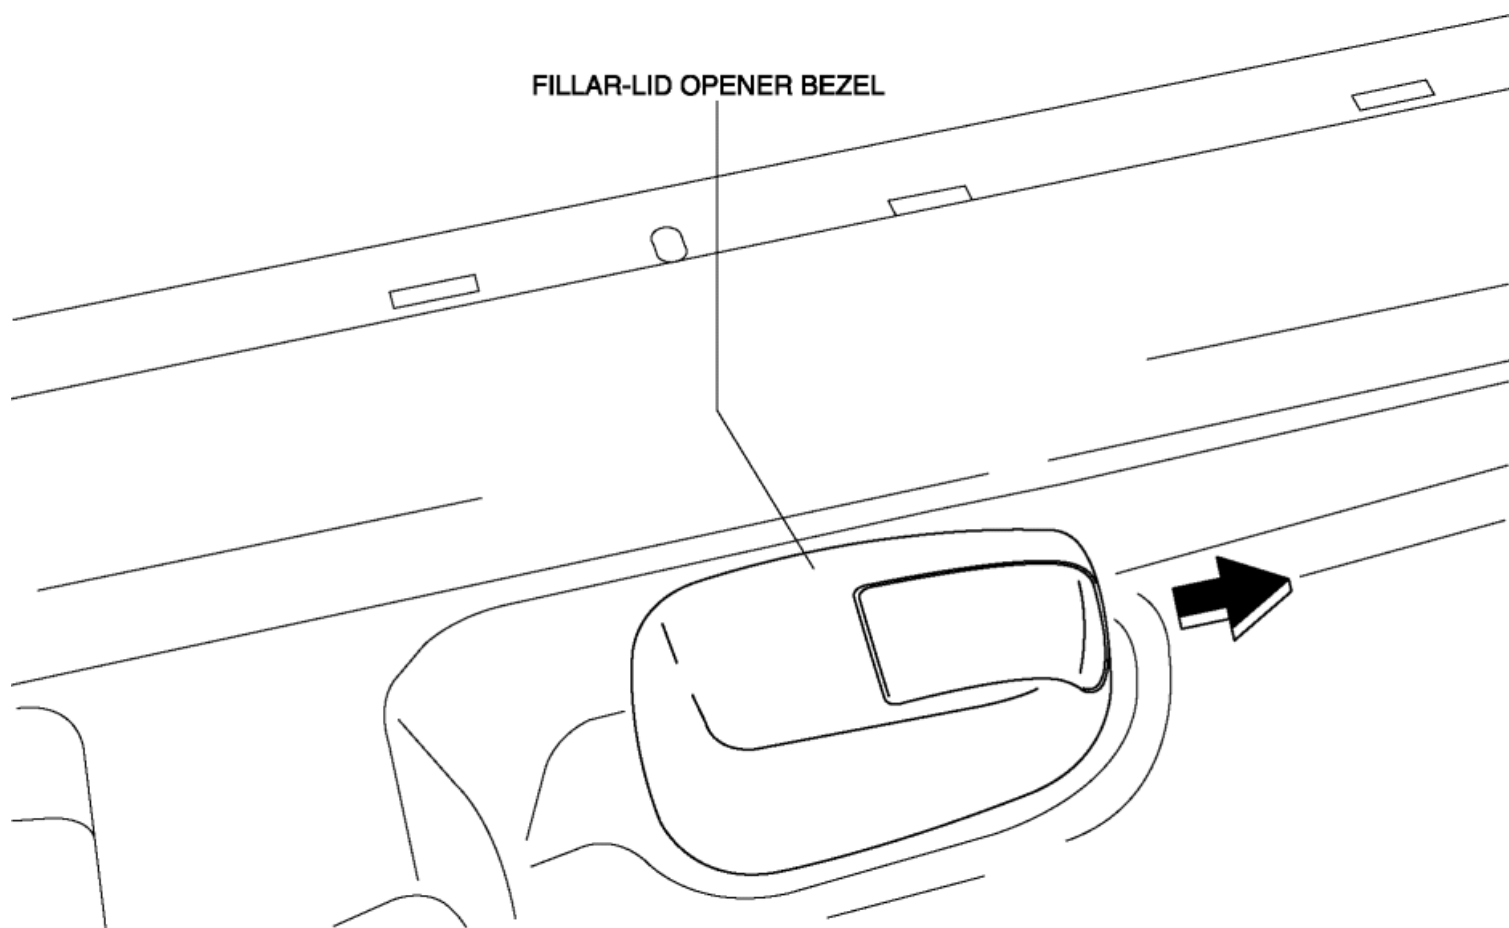

3. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)