



2012 - Mazda6 - Body and Accessories

GROUND ILLUMINATION LIGHT REMOVAL/ INSTALLATION


1. Disconnect the negative battery cable.
2. Insert a tape-wrapped fastener remover into the service hole indicated in the figure.

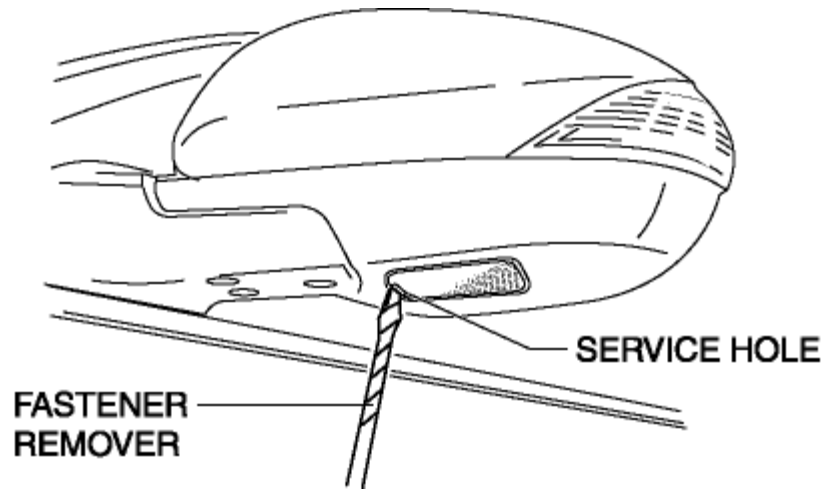


3. While pressing tab in the direction of the arrow (1), pull the ground illumination light in the direction of the arrow (2).

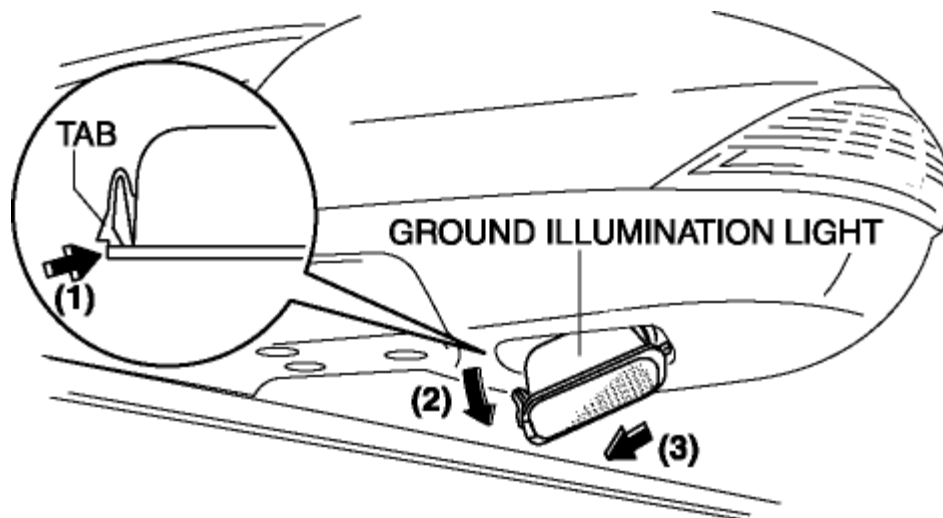

4. Remove the ground illumination light by pulling it in the direction of the arrow (3).
5. Disconnect the socket in the direction of the arrow shown in the figure.

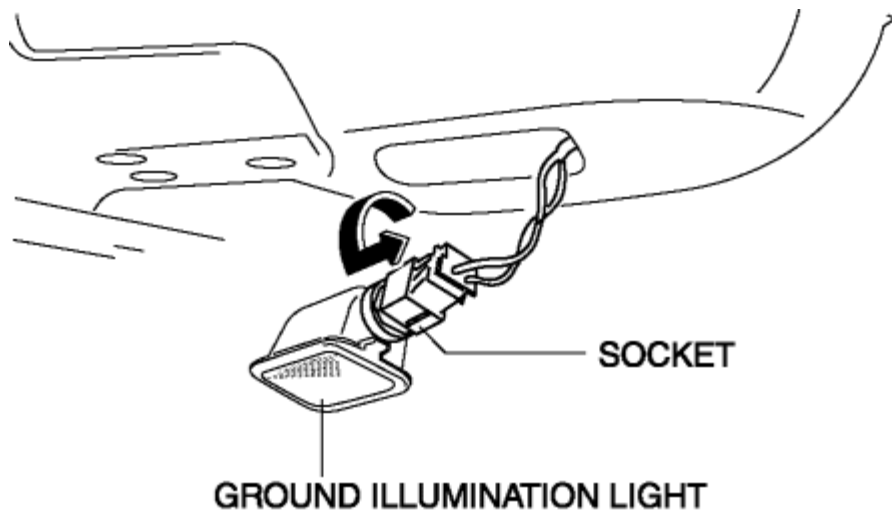

6. Remove the ground illumination light bulb as shown in the figure.

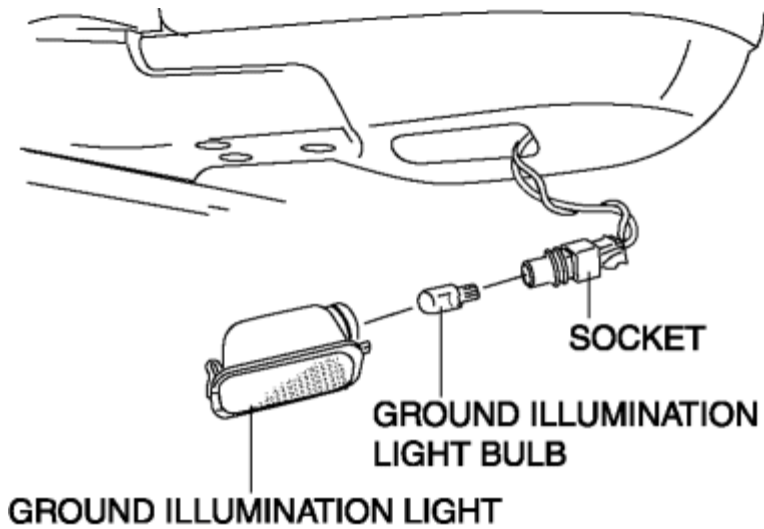

7. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.


2012 - Mazda6 - Body and Accessories

GROUND ILLUMINATION LIGHT REMOVAL/ INSTALLATION


1. Disconnect the negative battery cable.
2. Insert a tape-wrapped fastener remover into the service hole indicated in the figure.

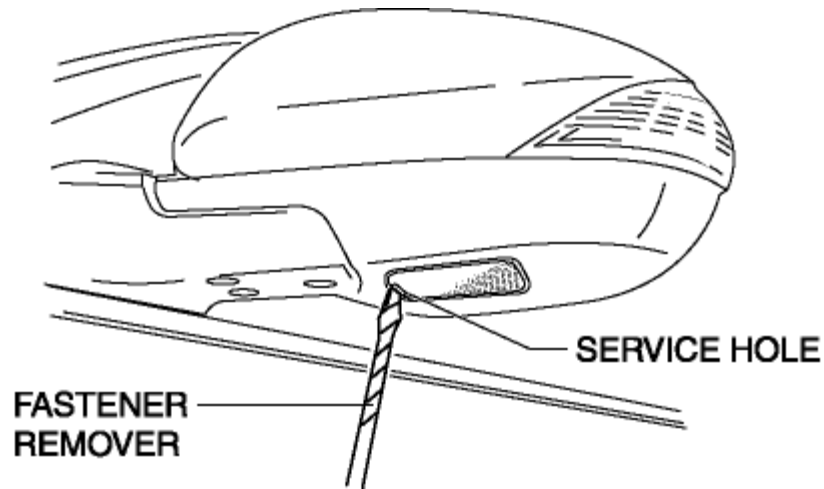


3. While pressing tab in the direction of the arrow (1), pull the ground illumination light in the direction of the arrow (2).

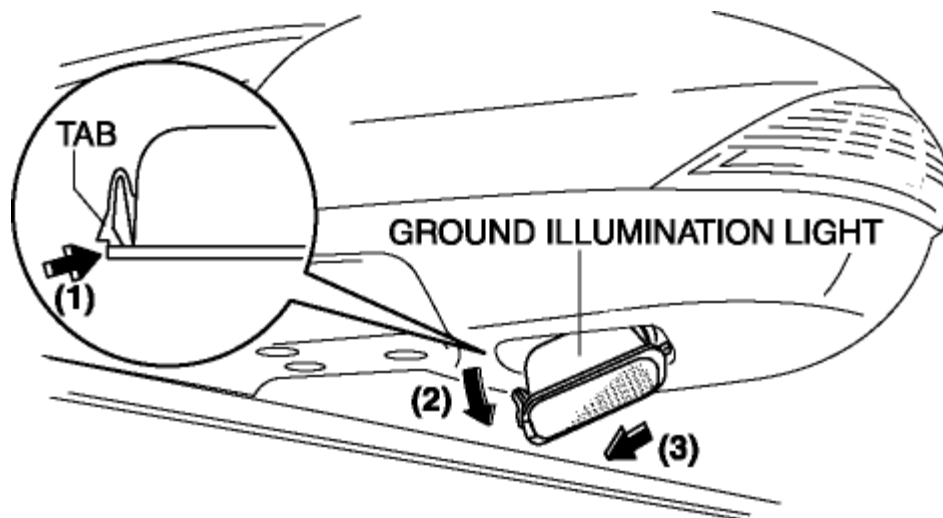

4. Remove the ground illumination light by pulling it in the direction of the arrow (3).
5. Disconnect the socket in the direction of the arrow shown in the figure.

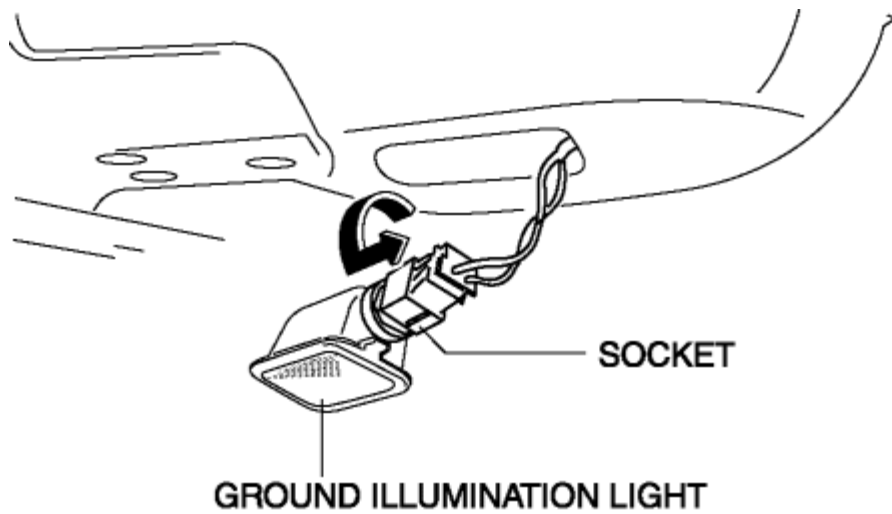

6. Remove the ground illumination light bulb as shown in the figure.

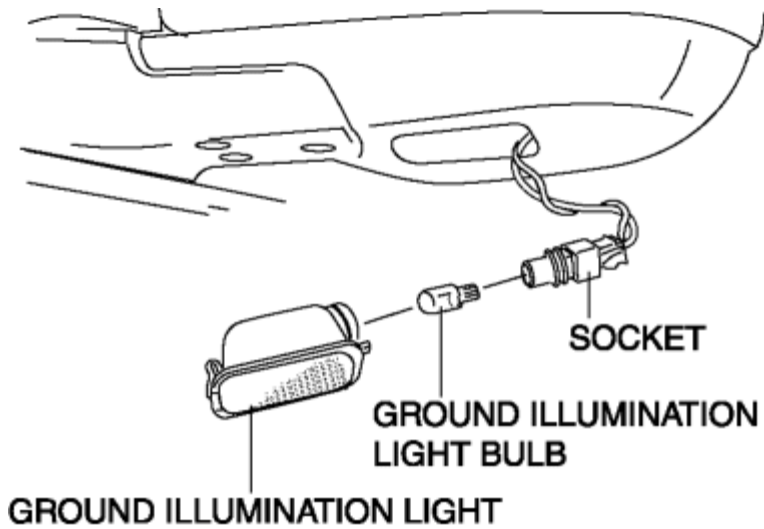

7. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.