

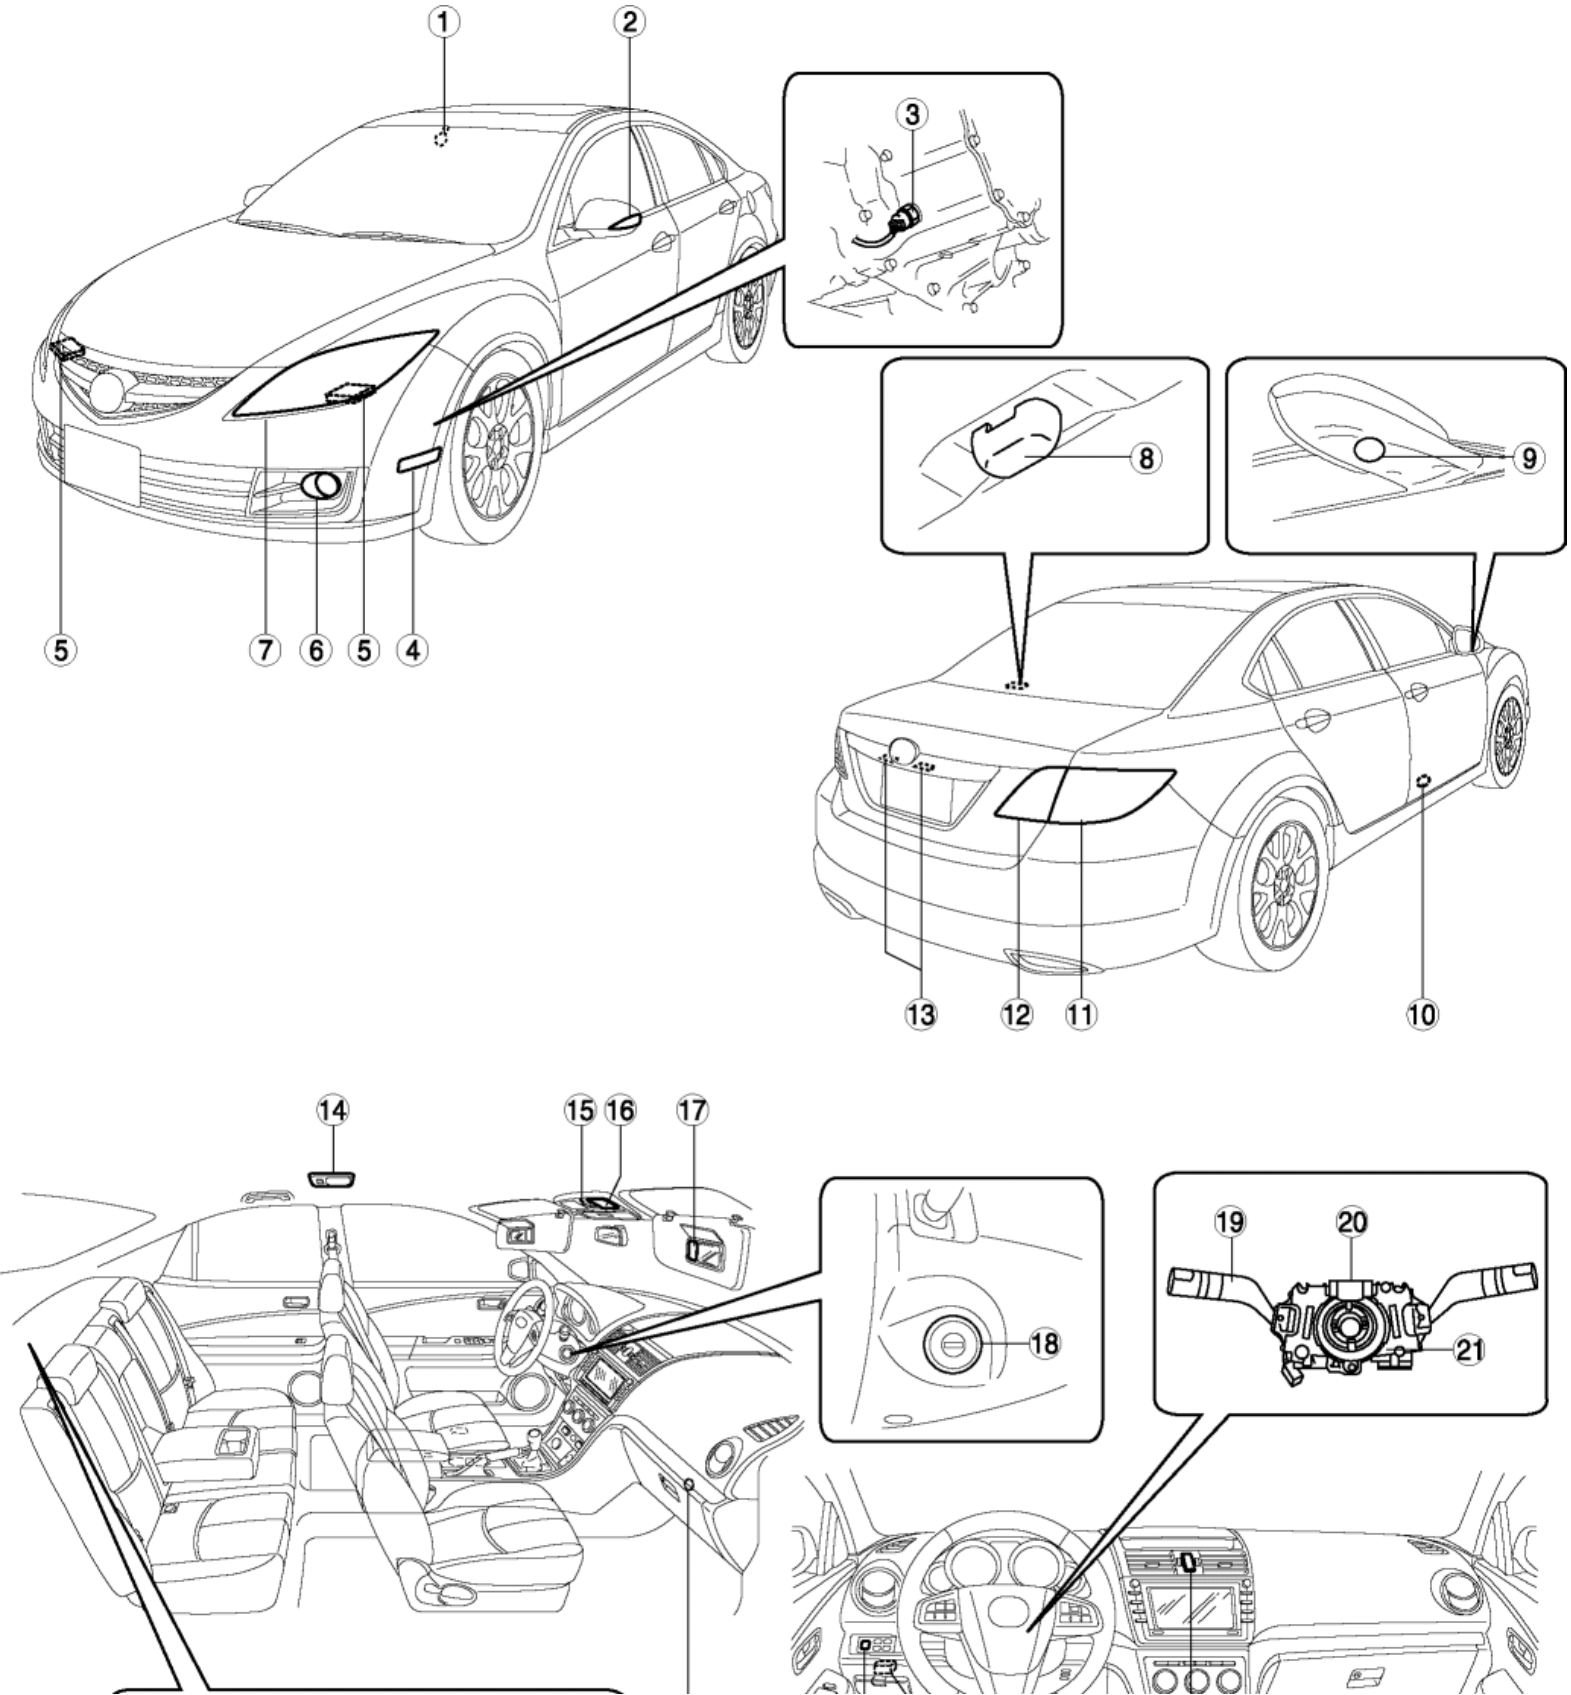


2012 - Mazda6 - Body and Accessories

LIGHTING SYSTEMS LOCATION INDEX

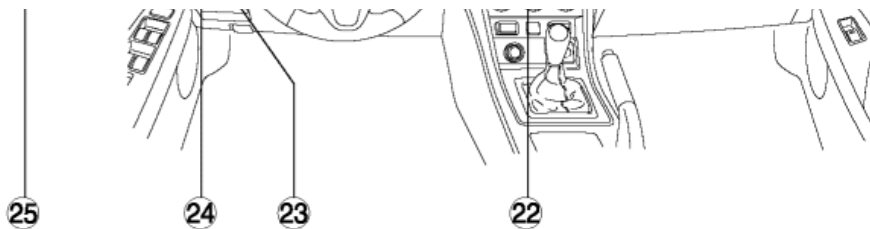

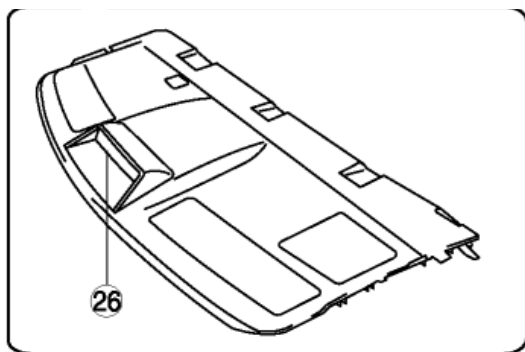


1	Auto light sensor (See RAIN SENSOR REMOVAL/ INSTALLATION.) (See RAIN SENSOR INITIAL SETTING.)
2	Side turn light (See SIDE TURN LIGHT REMOVAL/ INSTALLATION.) (See SIDE TURN LIGHT INSPECTION.)
3	Back-up light switch (MTX) (See BACK-UP LIGHT SWITCH INSPECTION.)
4	Front side marker light (See FRONT SIDE MARKER LIGHT REMOVAL/ INSTALLATION.) (See FRONT SIDE MARKER LIGHT BULB REMOVAL/ INSTALLATION.)
5	Discharge headlight control module (See DISCHARGE HEADLIGHT SERVICE WARNINGS.) (See DISCHARGE HEADLIGHT CONTROL MODULE REMOVAL/ INSTALLATION.) (See DISCHARGE HEADLIGHT SYSTEM INSPECTION.)
6	Front fog light (See FRONT FOG LIGHT REMOVAL/ INSTALLATION.) (See FRONT FOG LIGHT AIMING.) (See FRONT FOG LIGHT BULB REMOVAL/ INSTALLATION.)
7	Front combination light (See DISCHARGE HEADLIGHT SERVICE WARNINGS.) (See FRONT COMBINATION LIGHT REMOVAL/ INSTALLATION.) (See HEADLIGHT AIMING.) (See HEADLIGHT BULB REMOVAL/ INSTALLATION.) (See PARKING/ FRONT TURN LIGHT BULB REMOVAL/ INSTALLATION.)
8	Trunk compartment light (See TRUNK COMPARTMENT LIGHT BULB REMOVAL/ INSTALLATION.)
9	Ground illumination light (See GROUND ILLUMINATION LIGHT REMOVAL/ INSTALLATION.)


10	Courtesy light (See COURTESY LIGHT BULB REMOVAL/ INSTALLATION.)
11	Rear combination light (See REAR COMBINATI ON LIGHT REMOVAL/ INSTALLATI ON.) (See REAR TURN LI GHT BULB REMOVAL/ INSTALLATI ON.) (See BRAKE/ TAILLI GHT BULB REMOVAL/ INSTALLATI ON.)
12	Inboard light (See INBOARD LIGHT REMOVAL/ INSTALLATION.) (See INBOARD LIGHT BULB REMOVAL/ INSTALLATION.)
13	License plate light (See LI CENSE PLATE LI GHT REMOVAL/ INSTALLATI ON.) (See LI CENSE PLATE LI GHT BULB REMOVAL/ INSTALLATI ON.)
14	Interior light (See INTERIOR LI GHT REMOVAL/ INSTALLATI ON.) (See INTERIOR LI GHT BULB REMOVAL/ INSTALLATI ON.)
15	Indirect illumination (See INDI RECT I LLUMI NATION REMOVAL/ INSTALLATI ON.)
16	Map light (See MAP LI GHT REMOVAL/ INSTALLATI ON.) (See MAP LI GHT I NSPECTI ON.)
17	Vanity mirror (See VANI TY MI RROR I LLUMI NATION BULB REMOVAL/ INSTALLATI ON.) (See VANI TY MI RROR I LLUMI NATION I NSPECTI ON.)
18	Ignition key illumination (See IGNI TI ON KEY I LLUMI NATION REMOVAL/ INSTALLATI ON.)
19	Light switch (See LI GHT SWI TCH REMOVAL/ INSTALLATI ON.) (See LI GHT SWI TCH I NSPECTI ON.) (See FRONT FOG LI GHT SWI TCH I NSPECTI ON.)
20	Steering angle sensor (See STEERI NG ANGLE SENSO R I NSPECTI ON.) (See STEERI NG ANGLE SENSO R I NI TI ALI ZATI ON PROCEDURE.)
21	Combination switch (See COMBI NATI ON SWI TCH REMOVAL/ INSTALLATI ON.) (See COMBI NATI ON SWI TCH DI SASSEMBLY/ ASSEMBLY.)
22	Hazard warning switch (See HAZARD WARNING SWI TCH REMOVAL/ INSTALLATI ON.)

	(See HAZARD WARNING SWITCH INSPECTION.)
23	Auto light/wiper control module (Vehicles with auto light/wiper system) (See DRL AND AUTO LIGHT SYSTEM WIRING DIAGRAM.) (See AUTO LIGHT/ WIPER CONTROL MODULE REMOVAL/ INSTALLATION.) (See AUTO LIGHT/ WIPER CONTROL MODULE INSPECTION.) (See AUTO LIGHT/ WIPER CONTROL MODULE CONFIGURATION.) (See LIGHTING SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE.)
24	Headlight leveling switch (See HEADLIGHT LEVELING SWITCH REMOVAL/ INSTALLATION.) (See HEADLIGHT LEVELING SWITCH INSPECTION.)
25	Glove compartment light (See GLOVE COMPARTMENT LIGHT BULB REMOVAL/ INSTALLATION.)
26	High-mount brake light (See HIGH-MOUNT BRAKE LIGHT REMOVAL/ INSTALLATION.)


2012 - Mazda6 - Body and Accessories

LIGHTING SYSTEMS LOCATION INDEX

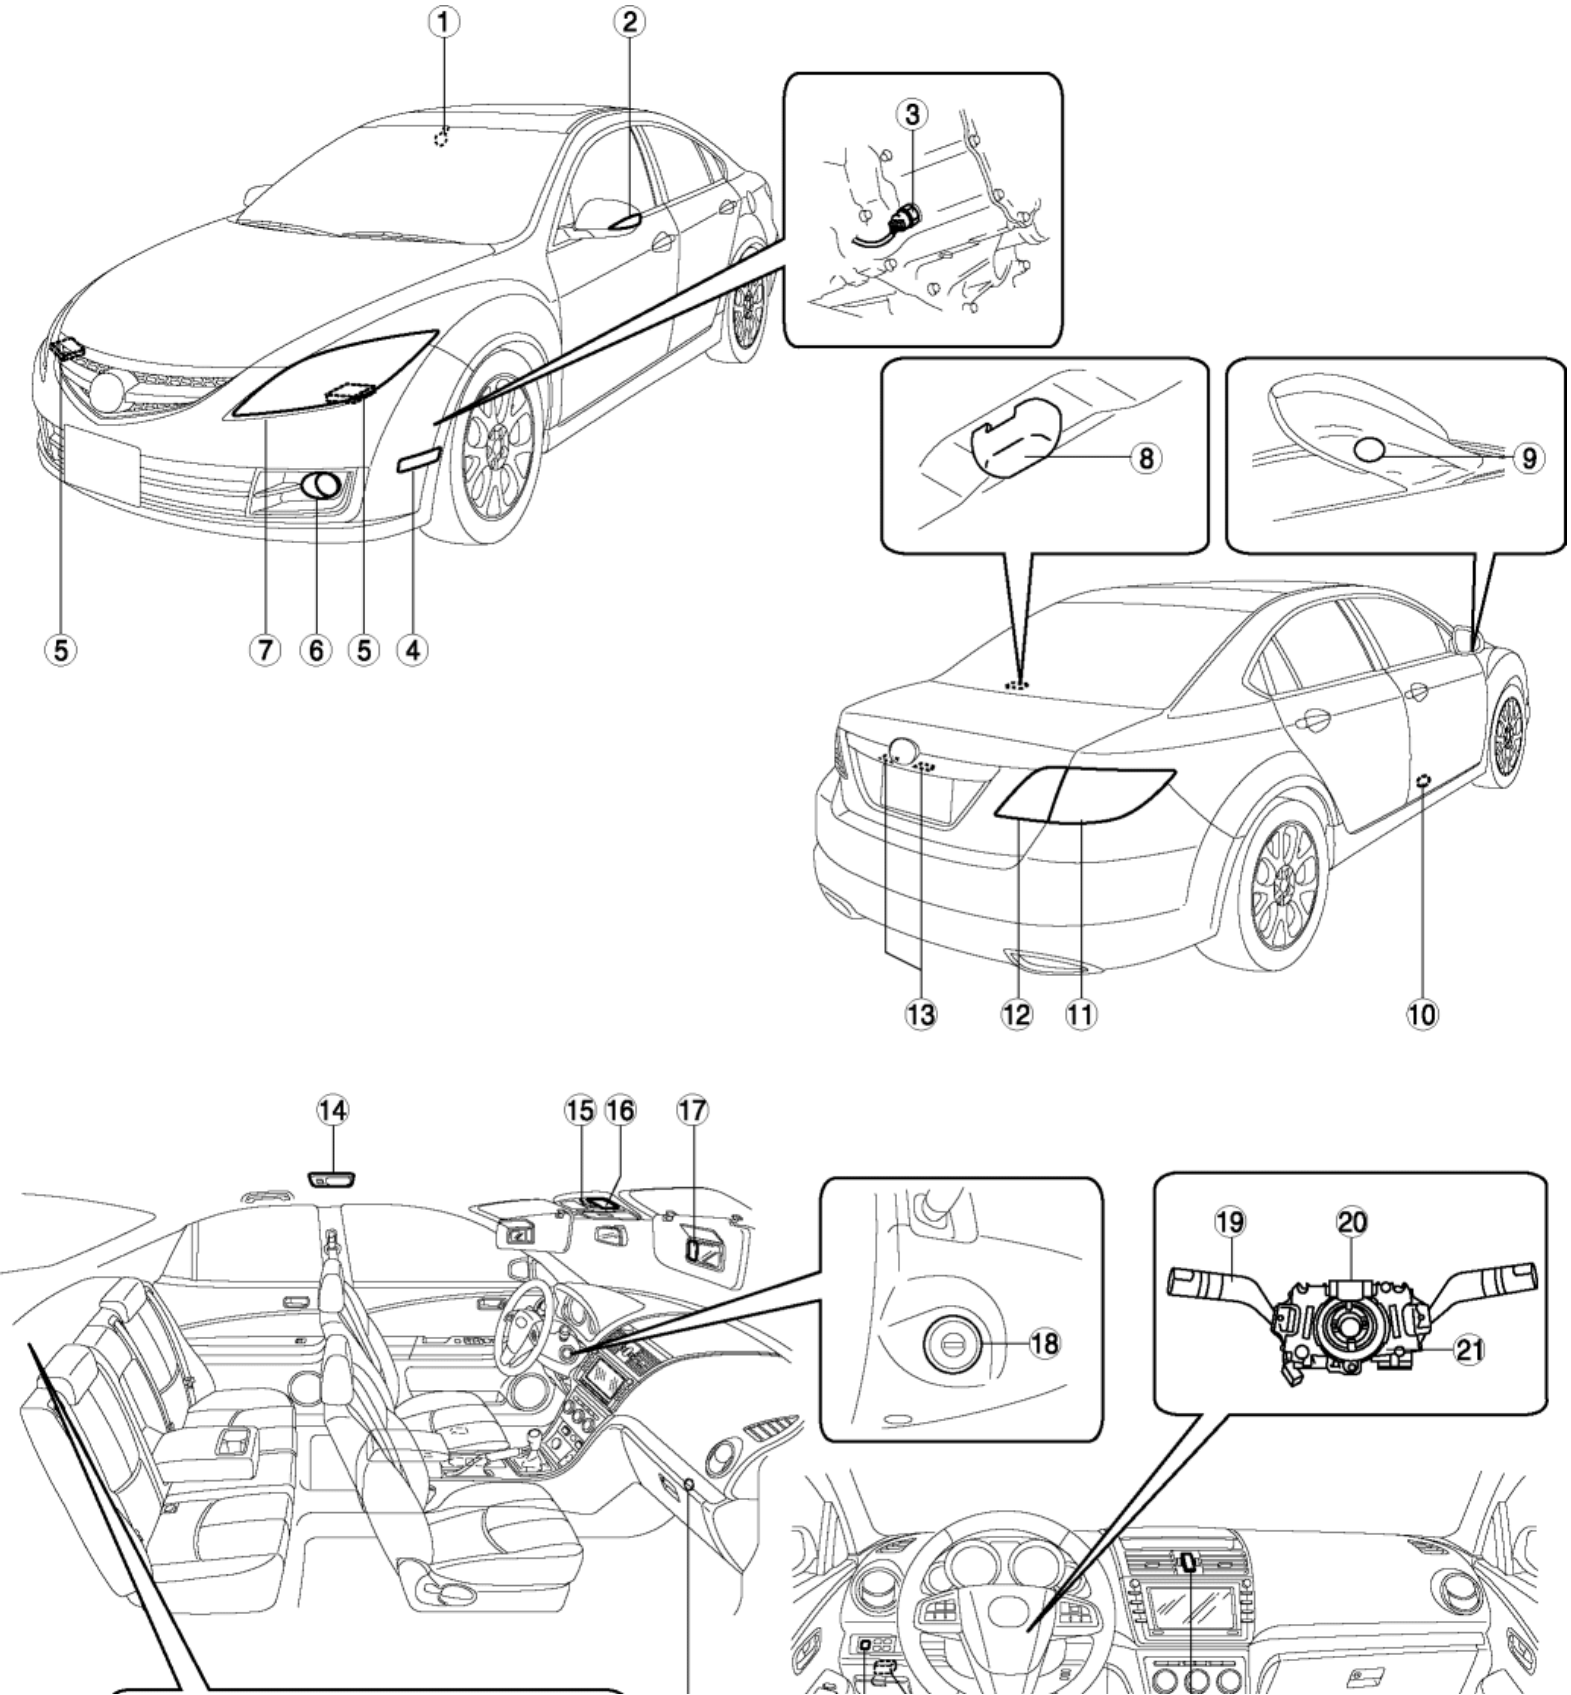

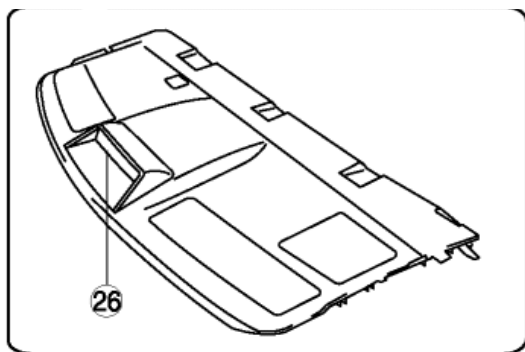

25

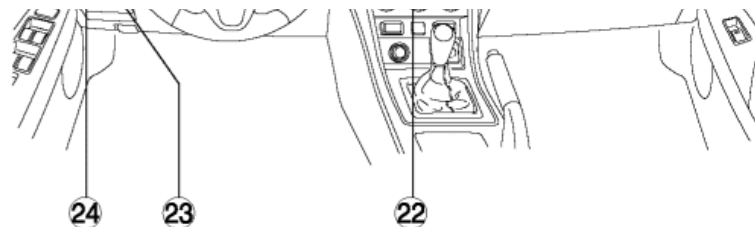

24

23

22

1 Auto light sensor

(See [RAIN SENSOR REMOVAL/ INSTALLATION.](#))

(See [RAIN SENSOR INITIAL SETTING.](#))

2 Side turn light

(See [SIDE TURN LIGHT REMOVAL/ INSTALLATION.](#))

(See [SIDE TURN LIGHT INSPECTION.](#))

3 Back-up light switch (MTX)

(See [BACK-UP LIGHT SWITCH INSPECTION.](#))

4 Front side marker light

(See [FRONT SIDE MARKER LIGHT REMOVAL/ INSTALLATION.](#))

(See [FRONT SIDE MARKER LIGHT BULB REMOVAL/ INSTALLATION.](#))

5 Discharge headlight control module

(See [DISCHARGE HEADLIGHT SERVICE WARNINGS.](#))

(See [DISCHARGE HEADLIGHT CONTROL MODULE REMOVAL/ INSTALLATION.](#))

(See [DISCHARGE HEADLIGHT SYSTEM INSPECTION.](#))

6 Front fog light

(See [FRONT FOG LIGHT REMOVAL/ INSTALLATION.](#))

(See [FRONT FOG LIGHT AIMING.](#))

(See [FRONT FOG LIGHT BULB REMOVAL/ INSTALLATION.](#))

7 Front combination light

(See [DISCHARGE HEADLIGHT SERVICE WARNINGS.](#))

(See [FRONT COMBINATION LIGHT REMOVAL/ INSTALLATION.](#))

(See [HEADLIGHT AIMING.](#))

(See [HEADLIGHT BULB REMOVAL/ INSTALLATION.](#))

(See [PARKING/ FRONT TURN LIGHT BULB REMOVAL/ INSTALLATION.](#))

8 Trunk compartment light

(See [TRUNK COMPARTMENT LIGHT BULB REMOVAL/ INSTALLATION.](#))

9 Ground illumination light

(See [GROUND ILLUMINATION LIGHT REMOVAL/ INSTALLATION.](#))

10	Courtesy light (See COURTESY LIGHT BULB REMOVAL/ INSTALLATION.)
11	Rear combination light (See REAR COMBINATI ON LIGHT REMOVAL/ INSTALLATI ON.) (See REAR TURN LI GHT BULB REMOVAL/ INSTALLATI ON.) (See BRAKE/ TAILLI GHT BULB REMOVAL/ INSTALLATI ON.)
12	Inboard light (See INBOARD LIGHT REMOVAL/ INSTALLATION.) (See INBOARD LIGHT BULB REMOVAL/ INSTALLATION.)
13	License plate light (See LI CENSE PLATE LI GHT REMOVAL/ INSTALLATI ON.) (See LI CENSE PLATE LI GHT BULB REMOVAL/ INSTALLATI ON.)
14	Interior light (See INTERIOR LI GHT REMOVAL/ INSTALLATI ON.) (See INTERIOR LI GHT BULB REMOVAL/ INSTALLATI ON.)
15	Indirect illumination (See INDI RECT I LLUMI NATION REMOVAL/ INSTALLATI ON.)
16	Map light (See MAP LI GHT REMOVAL/ INSTALLATI ON.) (See MAP LI GHT I NSPECTI ON.)
17	Vanity mirror (See VANI TY MI RROR I LLUMI NATION BULB REMOVAL/ INSTALLATI ON.) (See VANI TY MI RROR I LLUMI NATION I NSPECTI ON.)
18	Ignition key illumination (See IGNI TI ON KEY I LLUMI NATION REMOVAL/ INSTALLATI ON.)
19	Light switch (See LI GHT SWI TCH REMOVAL/ INSTALLATI ON.) (See LI GHT SWI TCH I NSPECTI ON.) (See FRONT FOG LI GHT SWI TCH I NSPECTI ON.)
20	Steering angle sensor (See STEERI NG ANGLE SENSO R I NSPECTI ON.) (See STEERI NG ANGLE SENSO R I NITI ALIZATI ON PROCEDURE.)
21	Combination switch (See COMBI NATI ON SWI TCH REMOVAL/ INSTALLATI ON.) (See COMBI NATI ON SWI TCH DI SASSEMBLY/ ASSEMBLY.)
22	Hazard warning switch (See HAZARD WARNI NG SWI TCH REMOVAL/ INSTALLATI ON.)

	(See HAZARD WARNING SWITCH INSPECTION.)
23	Auto light/wiper control module (Vehicles with auto light/wiper system) (See DRL AND AUTO LIGHT SYSTEM WIRING DIAGRAM.) (See AUTO LIGHT/ WIPER CONTROL MODULE REMOVAL/ INSTALLATION.) (See AUTO LIGHT/ WIPER CONTROL MODULE INSPECTION.) (See AUTO LIGHT/ WIPER CONTROL MODULE CONFIGURATION.) (See LIGHTING SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE.)
24	Headlight leveling switch (See HEADLIGHT LEVELING SWITCH REMOVAL/ INSTALLATION.) (See HEADLIGHT LEVELING SWITCH INSPECTION.)
25	Glove compartment light (See GLOVE COMPARTMENT LIGHT BULB REMOVAL/ INSTALLATION.)
26	High-mount brake light (See HIGH-MOUNT BRAKE LIGHT REMOVAL/ INSTALLATION.)