


2012 - Mazda6 - Body and Accessories

BACK-UP LIGHT SWITCH INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the aerodynamic under cover No.2. (See [AERODYNAMIC UNDER COVER NO.2 REMOVAL/ INSTALLATION](#).)
- 3. Disconnect the back-up light switch connector. (See [BACK-UP LIGHT SWITCH REMOVAL/ INSTALLATION \[G66M-R\]](#).)
- 4. Verify that the continuity between the back-up light switch terminals is as indicated in the table.

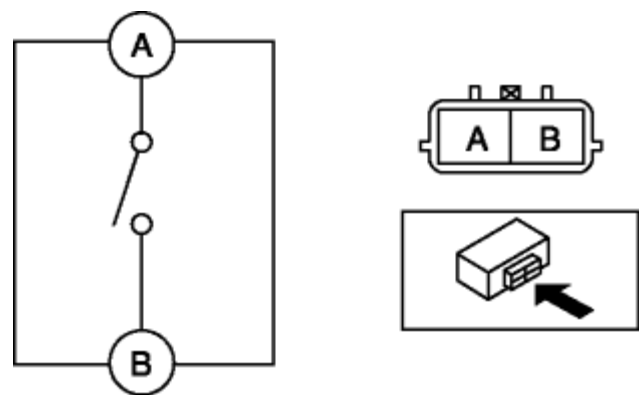

- If not as indicated in the table, replace the back-up light switch.


○ — ○ : Continuity

Shift lever position	Terminal	
	A	B
Reverse	○ — ○	○ — ○
Other		

2012 - Mazda6 - Body and Accessories

BACK-UP LIGHT SWITCH INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the aerodynamic under cover No.2. (See [AERODYNAMIC UNDER COVER NO.2 REMOVAL/ INSTALLATION](#).)
- 3. Disconnect the back-up light switch connector. (See [BACK-UP LIGHT SWITCH REMOVAL/ INSTALLATION \[G66M-R\]](#).)
- 4. Verify that the continuity between the back-up light switch terminals is as indicated in the table.

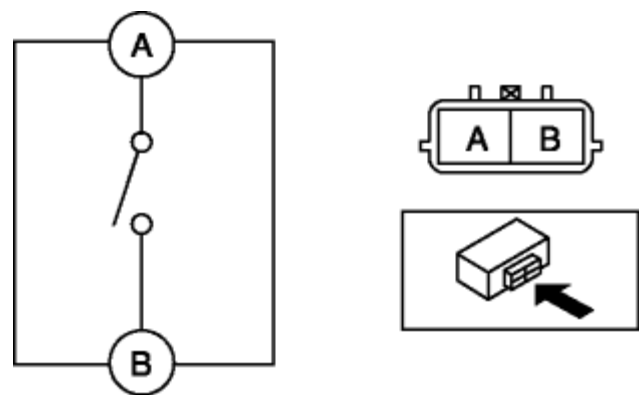

- If not as indicated in the table, replace the back-up light switch.

○ — ○ : Continuity

Shift lever position	Terminal	
	A	B
Reverse	○ — ○	○ — ○
Other		