



2012 - Mazda6 - Body and Accessories

REAR COMBINATION LIGHT REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the trunk end trim. (See [TRUNK END TRIM REMOVAL/ INSTALLATION.](#))
3. Partially peel back the trunk side trim. (See [TRUNK SIDE TRIM REMOVAL/ INSTALLATION.](#))
4. Disconnect the connectors shown in the figure and remove the nuts.

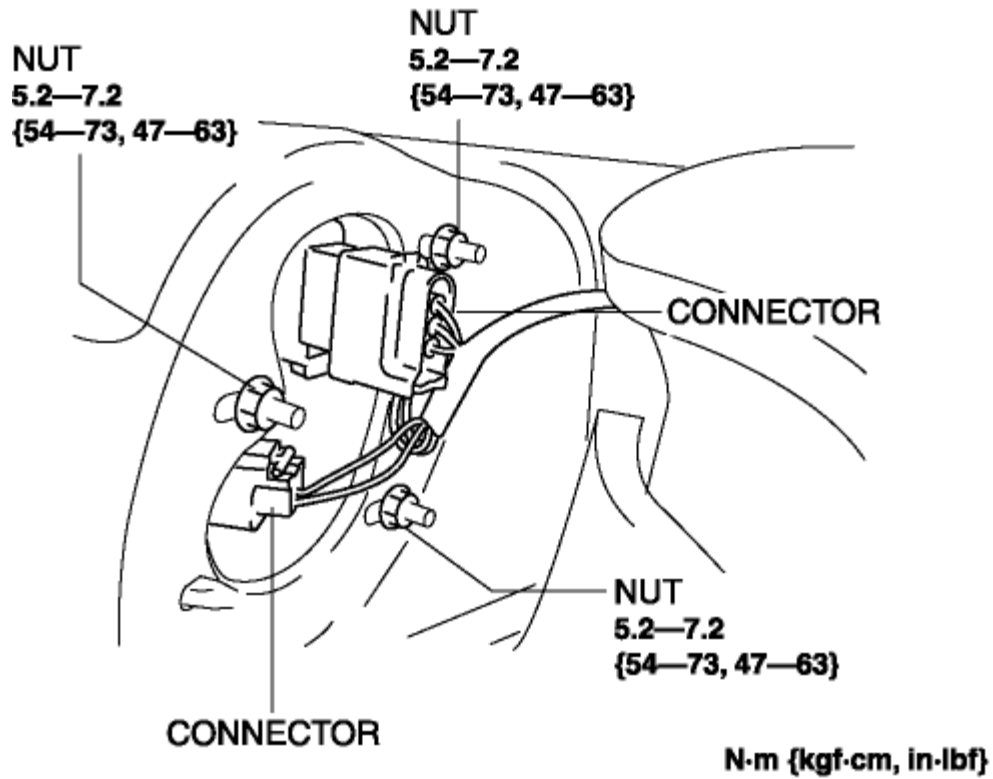

5. Pull the rear combination light in the direction of the arrow to detach it from the tab.

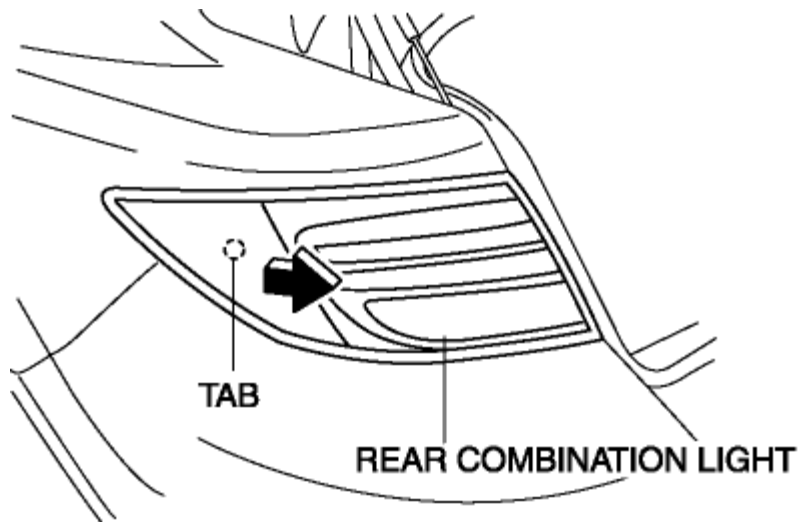

6. Remove the rear combination light.
7. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.


2012 - Mazda6 - Body and Accessories

REAR COMBINATION LIGHT REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the trunk end trim. (See [TRUNK END TRIM REMOVAL/ INSTALLATION.](#))
3. Partially peel back the trunk side trim. (See [TRUNK SIDE TRIM REMOVAL/ INSTALLATION.](#))
4. Disconnect the connectors shown in the figure and remove the nuts.

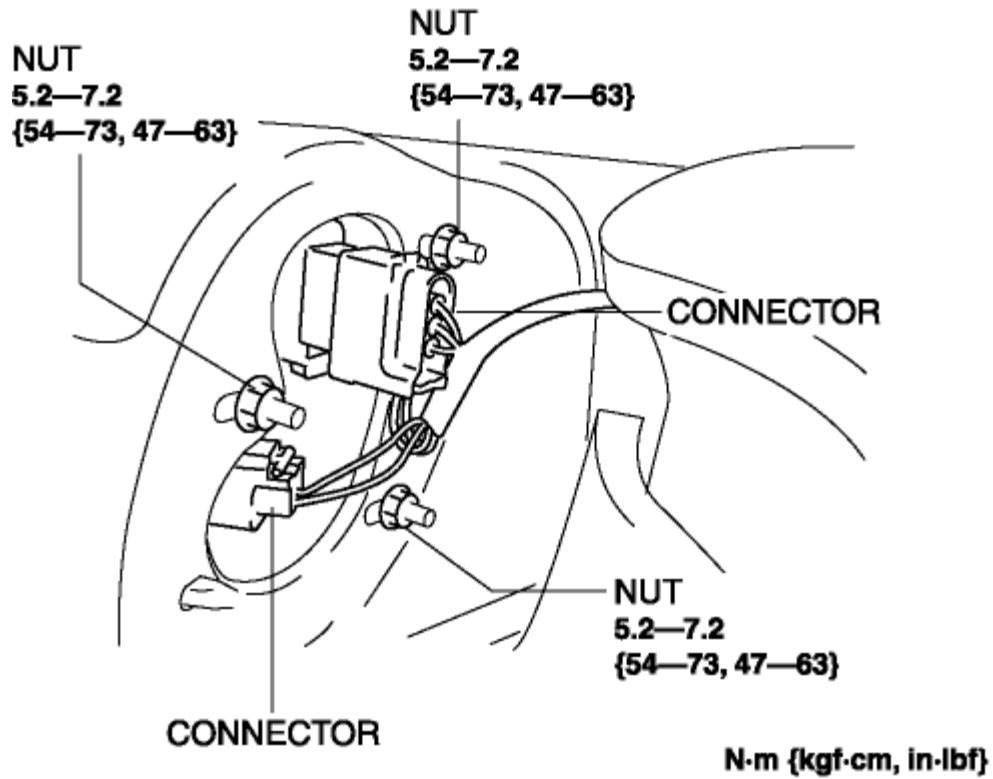

5. Pull the rear combination light in the direction of the arrow to detach it from the tab.

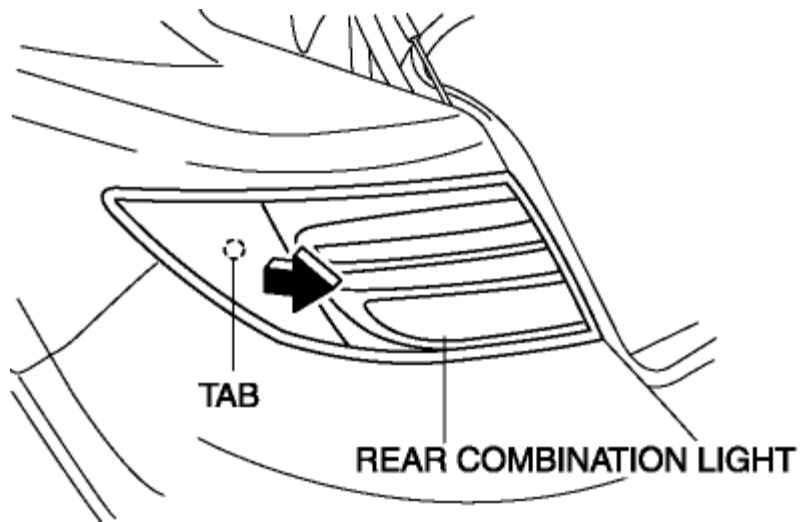

6. Remove the rear combination light.
7. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.