


2012 - Mazda6 - Body and Accessories

LICENSE PLATE LIGHT REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Recess (See [RECESS REMOVAL/ INSTALLATION](#).)
 - b. Trunk lid trim (See [TRUNK LID TRIM REMOVAL/ INSTALLATION](#).)
 - c. Rear finisher (See [REAR FINISHER REMOVAL/ INSTALLATION](#).)
 - d. License plate light bulb (See [LICENSE PLATE LIGHT BULB REMOVAL/ INSTALLATION](#).)
3. Press tab A in the direction of the arrow (1) shown in the figure, press the license plate light in the direction of the arrow (2), and detach tab B.

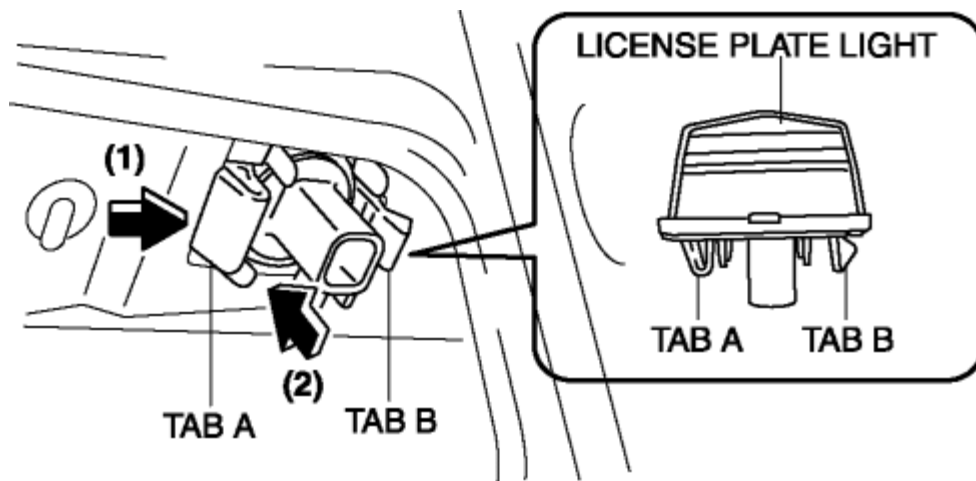


4. Remove the license plate light.
5. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

LICENSE PLATE LIGHT REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Recess (See [RECESS REMOVAL/ INSTALLATION](#).)
 - b. Trunk lid trim (See [TRUNK LID TRIM REMOVAL/ INSTALLATION](#).)
 - c. Rear finisher (See [REAR FINISHER REMOVAL/ INSTALLATION](#).)
 - d. License plate light bulb (See [LICENSE PLATE LIGHT BULB REMOVAL/ INSTALLATION](#).)
3. Press tab A in the direction of the arrow (1) shown in the figure, press the license plate light in the direction of the arrow (2), and detach tab B.

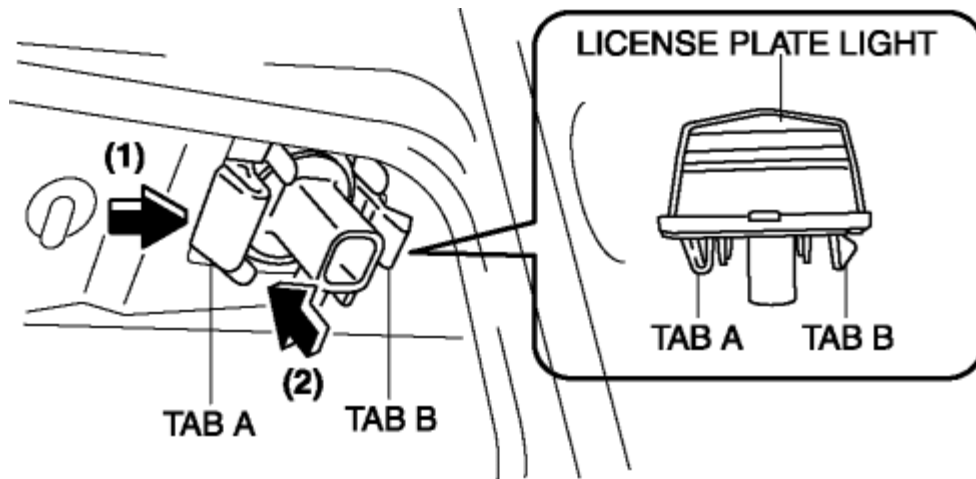

4. Remove the license plate light.
5. Install in the reverse order of removal.