


2012 - Mazda6 - Body and Accessories

MAP LIGHT INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the map light. (See [MAP LIGHT REMOVAL/ INSTALLATION](#).)
- 3. Verify that the continuity between the map light terminals is as indicated in the table.

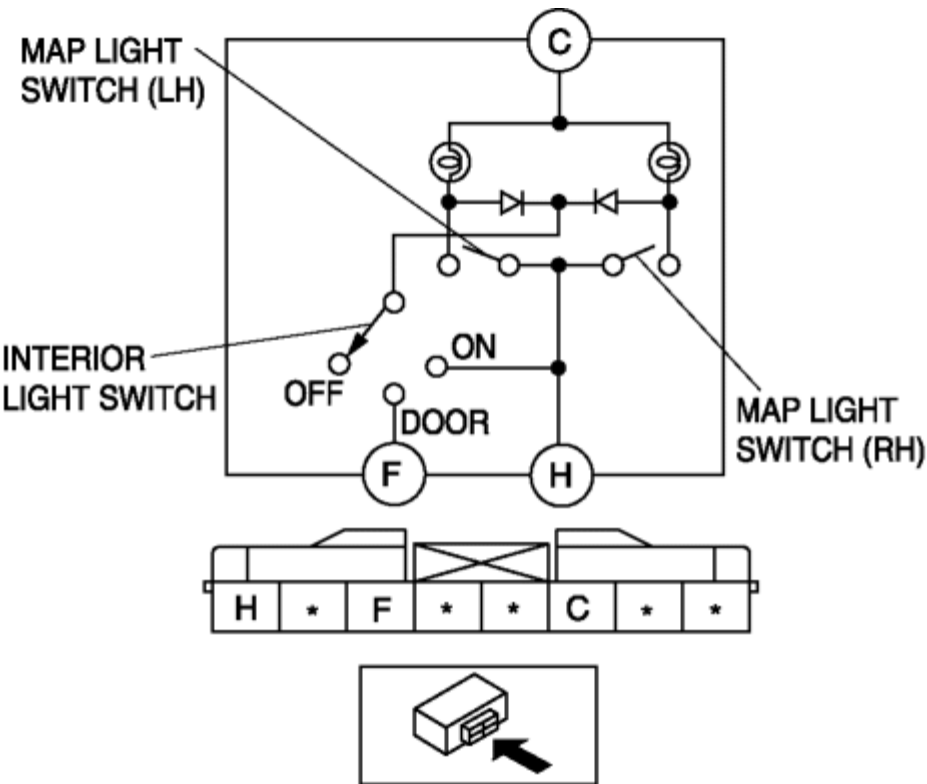

- If not as indicated in the table, replace the map light.

 : Bulb


Switch position		Terminal		
Map light switch	Interior light switch	C	F	H
ON	-			
OFF	OFF			

- 4. Apply battery positive voltage to map light terminal C, and connect terminal F to ground.
- 5. Switch the room light switch to the DOOR position and verify that the map light illuminates.
- If the light does not illuminate, replace the map light.

2012 - Mazda6 - Body and Accessories

MAP LIGHT INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the map light. (See [MAP LIGHT REMOVAL/ INSTALLATION](#).)
- 3. Verify that the continuity between the map light terminals is as indicated in the table.

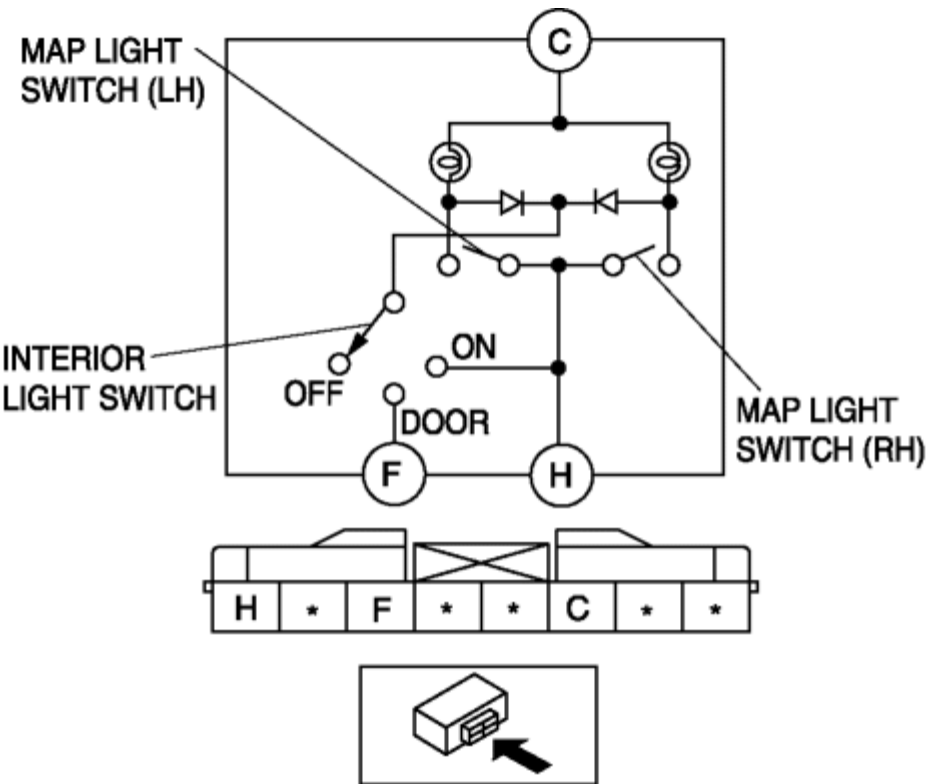

- If not as indicated in the table, replace the map light.

○—○ : Bulb

Switch position		Terminal		
Map light switch	Interior light switch	C	F	H
ON	-	○	○—○	○
OFF	OFF			

- 4. Apply battery positive voltage to map light terminal C, and connect terminal F to ground.
- 5. Switch the room light switch to the DOOR position and verify that the map light illuminates.
- If the light does not illuminate, replace the map light.

