


2012 - Mazda6 - Body and Accessories

INTERIOR LIGHT REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Partially peel back the seaming welt.
3. Remove the rain sensor cover. (Vehicles with auto light/wiper system) (See [RAIN SENSOR REMOVAL/ INSTALLATION.](#))
4. Disconnect the rain sensor connector. (Vehicles auto light/wiper system)
5. Remove the following parts:
 - a. Sunroof seaming welt (vehicles with sunroof system)
 - b. A-pillar trim (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
 - c. Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - d. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - e. B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.](#))
 - f. Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
 - g. B-pillar upper trim (See [B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION.](#))
 - h. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
 - i. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
 - j. C-pillar trim (See [C-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
6. Disconnect the auto-dimming mirror connector. (vehicles with auto-dimming mirror)
7. Remove the sunvisor. (See [SUNVISOR REMOVAL/ INSTALLATION.](#))
8. Remove the map light. (See [MAP LIGHT REMOVAL/ INSTALLATION.](#))
9. Remove the assist handle. (See [ASSIST HANDLE REMOVAL/ INSTALLATION.](#))
10. Remove the headliner (See [HEADLINER REMOVAL/ INSTALLATION.](#))
11. Disconnect the interior light connector.

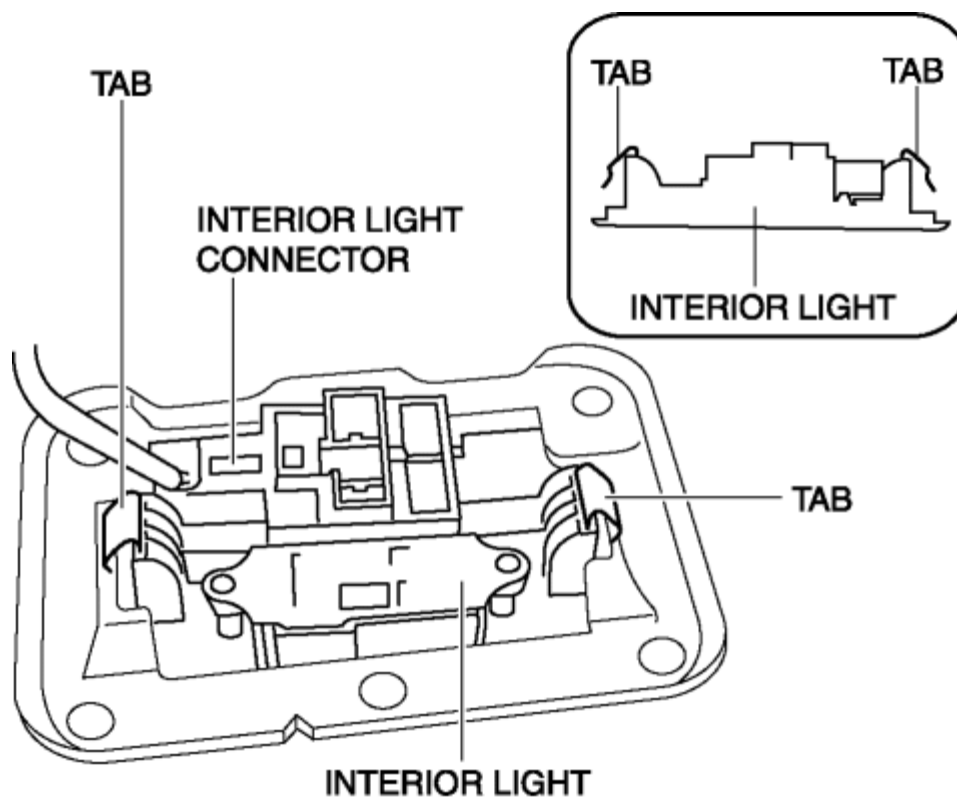

12. Detach the tab and remove the interior light.

13. Install in the reverse order of removal.


[< Previous](#) [Next >](#)

[Back to Top](#)

2012 - Mazda6 - Body and Accessories

INTERIOR LIGHT REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Partially peel back the seaming welt.
3. Remove the rain sensor cover. (Vehicles with auto light/wiper system) (See [RAIN SENSOR REMOVAL/ INSTALLATION.](#))
4. Disconnect the rain sensor connector. (Vehicles auto light/wiper system)
5. Remove the following parts:
 - a. Sunroof seaming welt (vehicles with sunroof system)
 - b. A-pillar trim (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
 - c. Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - d. Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - e. B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.](#))
 - f. Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/ INSTALLATION.](#))
 - g. B-pillar upper trim (See [B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION.](#))
 - h. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION.](#))
 - i. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
 - j. C-pillar trim (See [C-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
6. Disconnect the auto-dimming mirror connector. (vehicles with auto-dimming mirror)
7. Remove the sunvisor. (See [SUNVISOR REMOVAL/ INSTALLATION.](#))
8. Remove the map light. (See [MAP LIGHT REMOVAL/ INSTALLATION.](#))
9. Remove the assist handle. (See [ASSIST HANDLE REMOVAL/ INSTALLATION.](#))
10. Remove the headliner (See [HEADLINER REMOVAL/ INSTALLATION.](#))
11. Disconnect the interior light connector.

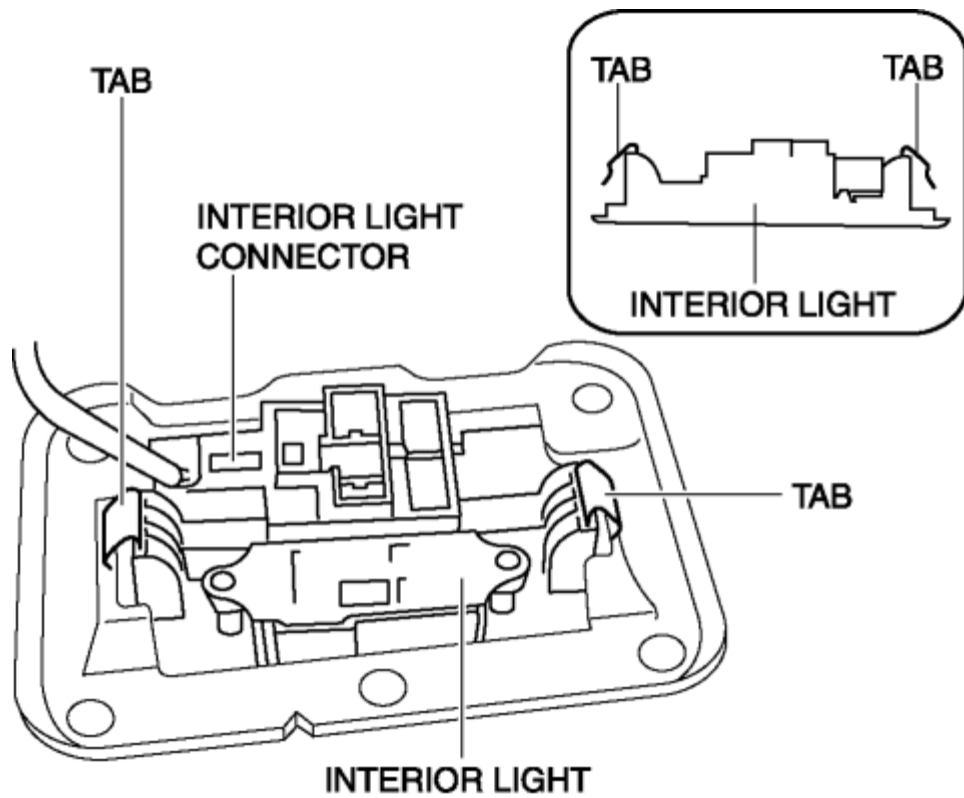

12. Detach the tab and remove the interior light.

13. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)