



2012 - Mazda6 - Body and Accessories

FRONT FOG LIGHT REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See [FRONT BUMPER REMOVAL/ INSTALLATION](#).)
3. Remove the screws A.

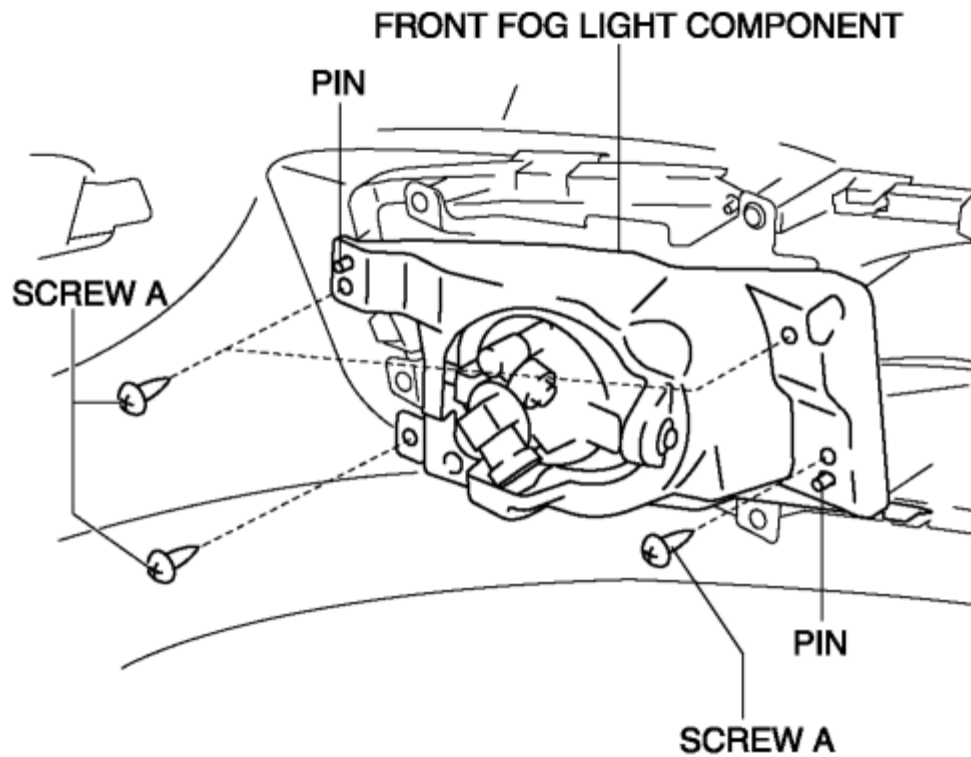


4. Remove the front fog light component.
5. Remove the screw B.

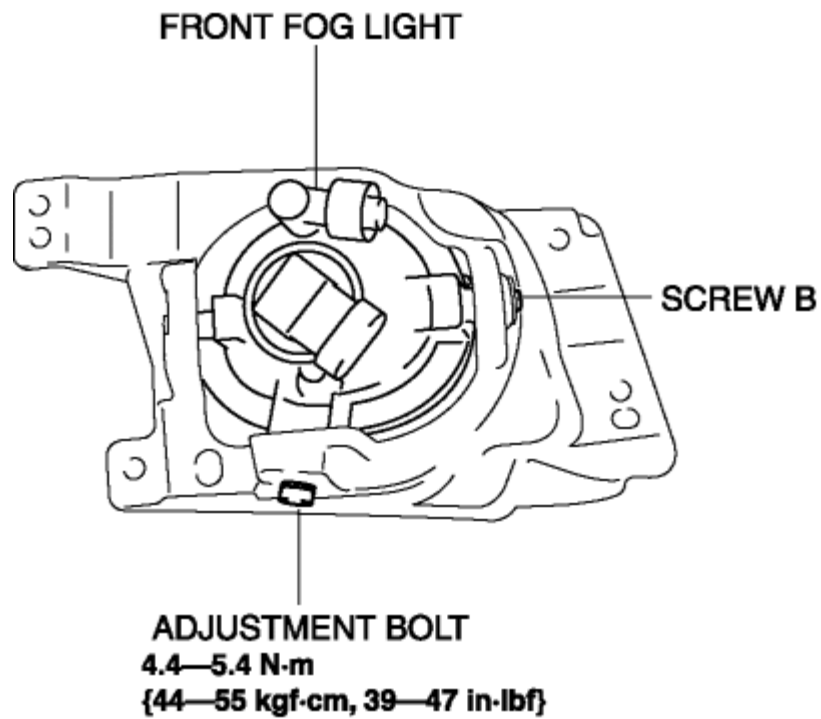

6. Remove the adjustment bolt.

7. Pull the front fog light in the direction of the arrow shown in the figure and remove it from the front fog light bracket.

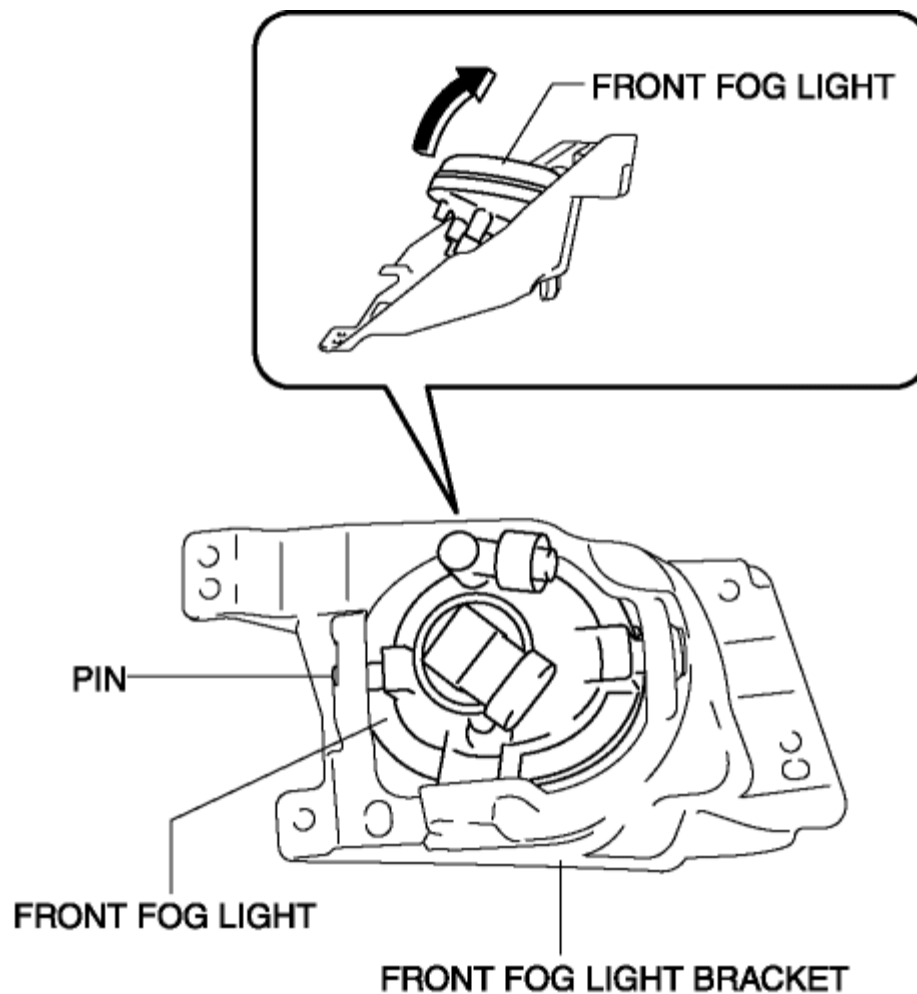

8. Install in the reverse order of removal.

9. Adjust the front fog light aiming. (See [FRONT FOG LIGHT AIMING](#).)

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.


2012 - Mazda6 - Body and Accessories

FRONT FOG LIGHT REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See [FRONT BUMPER REMOVAL/ INSTALLATION](#).)
3. Remove the screws A.

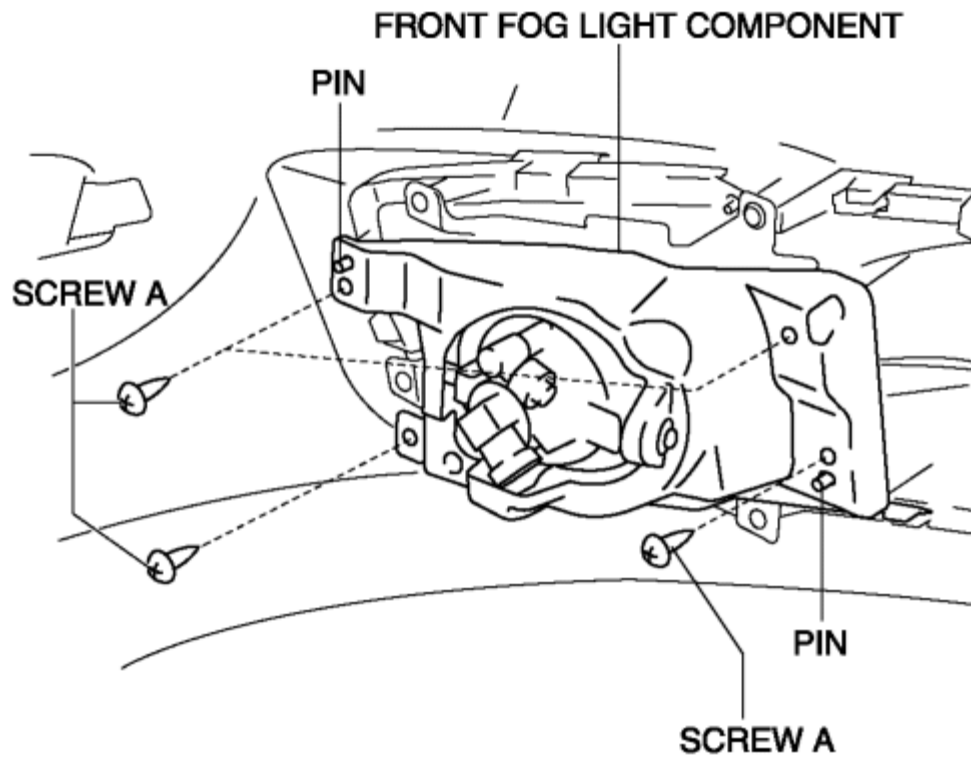


4. Remove the front fog light component.
5. Remove the screw B.

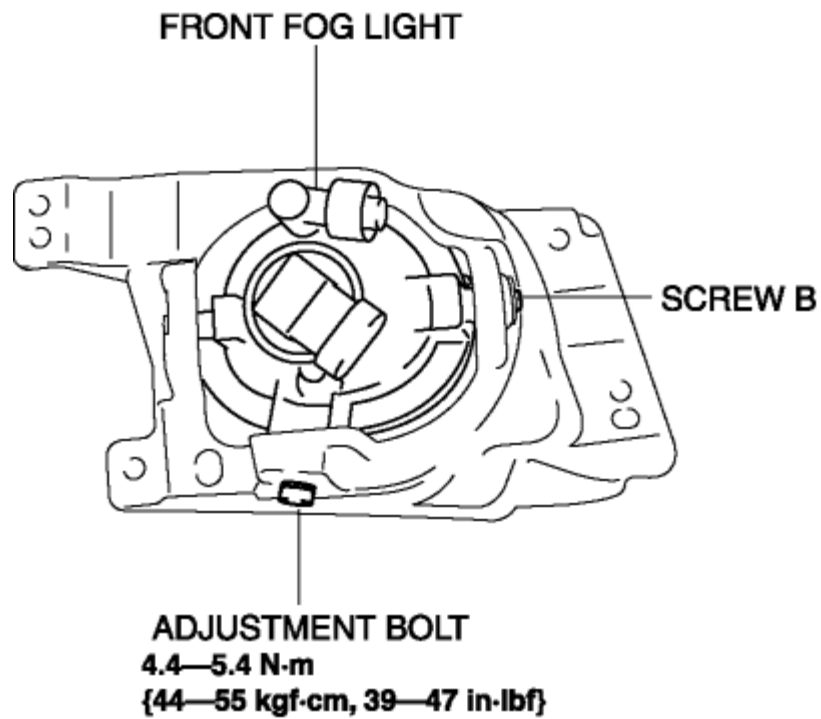

6. Remove the adjustment bolt.

7. Pull the front fog light in the direction of the arrow shown in the figure and remove it from the front fog light bracket.

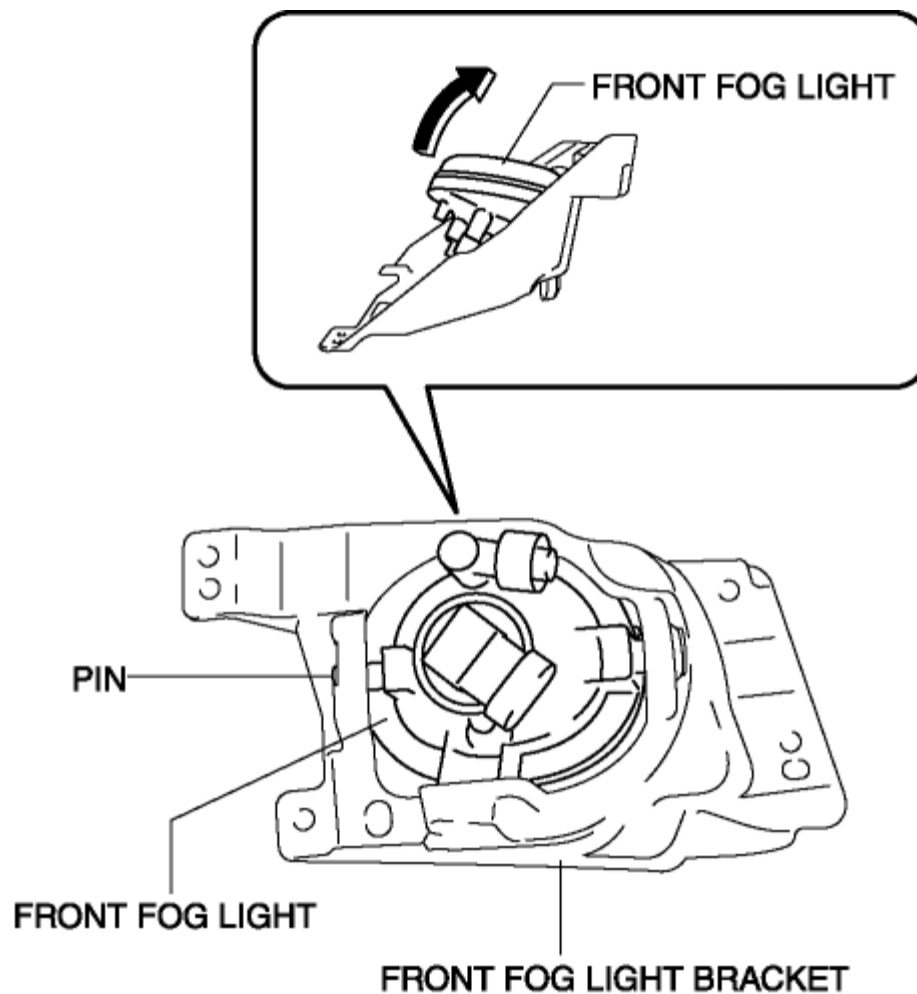

8. Install in the reverse order of removal.

9. Adjust the front fog light aiming. (See [FRONT FOG LIGHT AIMING](#).)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.