


2012 - Mazda6 - Body and Accessories

FRONT FOG LIGHT BULB REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Slightly bend back the mudguard. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
3. Disconnect the connector.

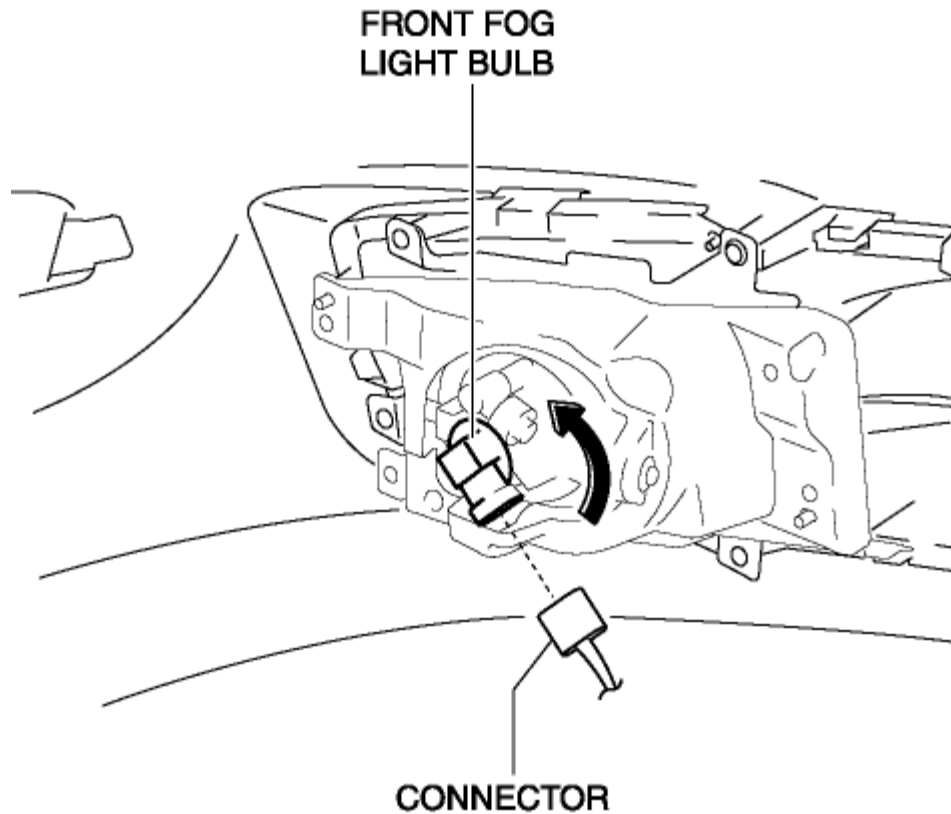


4. Rotate the front fog light bulb in the direction of the arrow shown in the figure.

CAUTION:

- A halogen bulb generates extremely high heat when it is used. If the surface of the bulb is soiled, excessive heat will build up and the light's life will be shortened. When replacing the bulb, hold the metal flange, not the glass.

5. Remove the front fog light bulb.

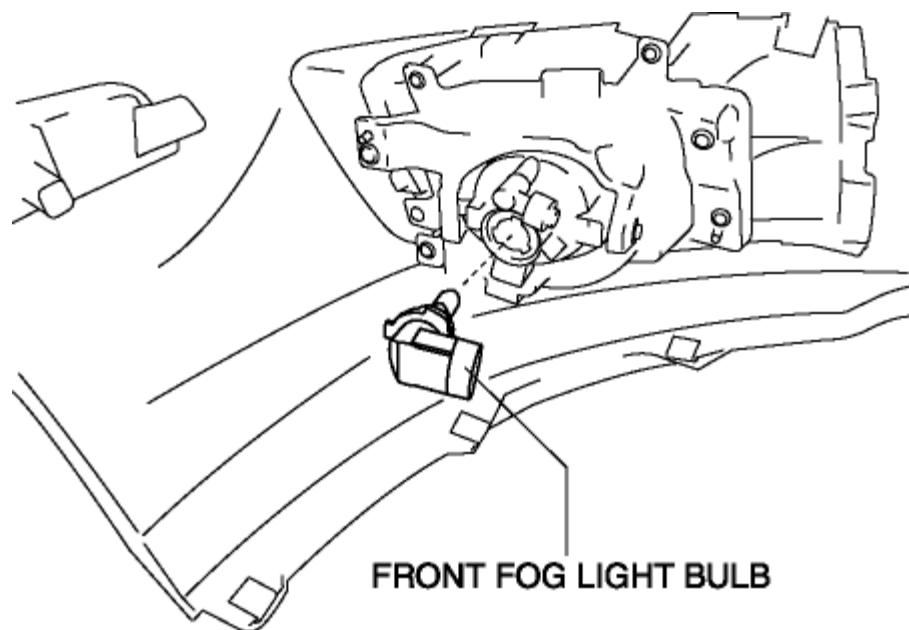

6. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

FRONT FOG LIGHT BULB REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Slightly bend back the mudguard. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
3. Disconnect the connector.

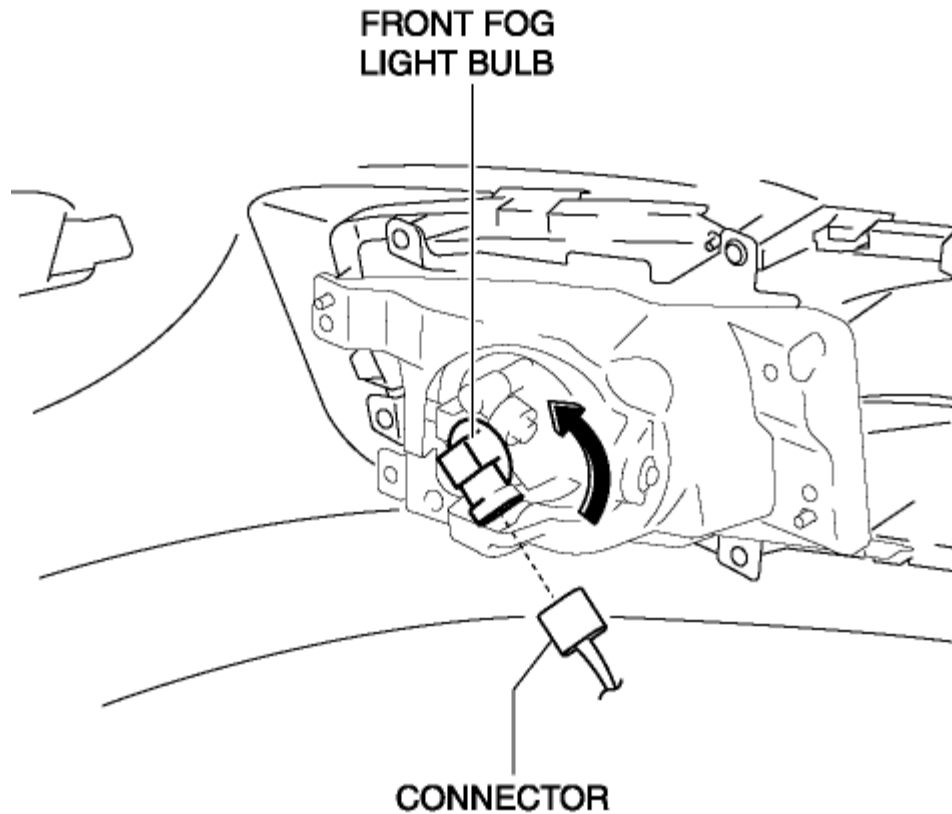


4. Rotate the front fog light bulb in the direction of the arrow shown in the figure.

CAUTION:

- A halogen bulb generates extremely high heat when it is used. If the surface of the bulb is soiled, excessive heat will build up and the light's life will be shortened. When replacing the bulb, hold the metal flange, not the glass.

5. Remove the front fog light bulb.

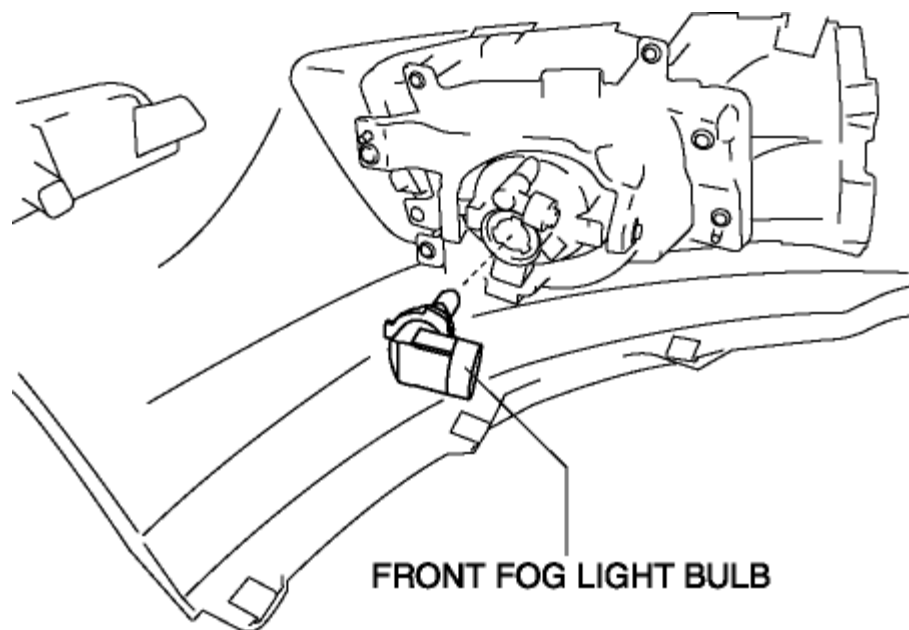

6. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.