


2012 - Mazda6 - Body and Accessories

LIGHT SWITCH REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the column cover. (See [COLUMN COVER REMOVAL/ INSTALLATION.](#))
3. Disconnect the connector.

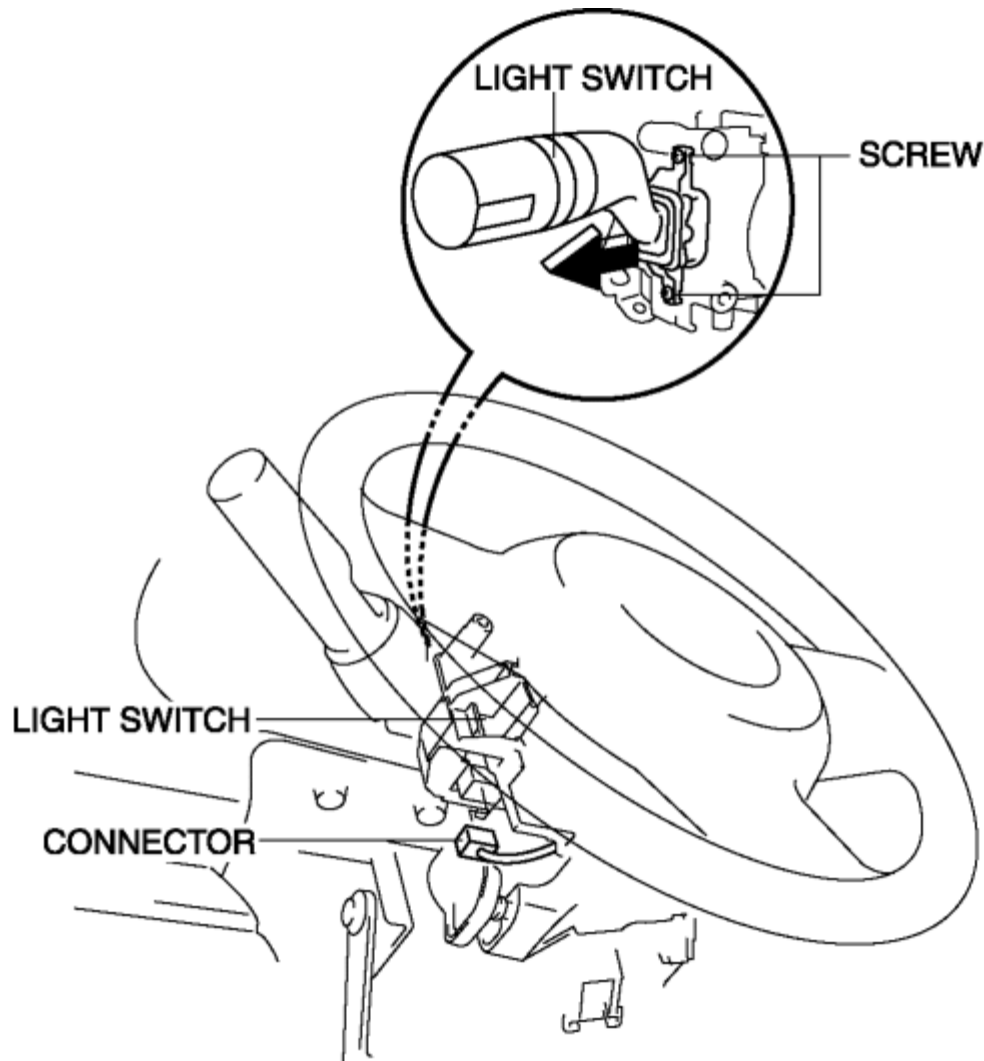


4. Remove the screws shown in the figure, then remove the light switch by pulling it in the direction of the arrow.
5. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

LIGHT SWITCH REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the column cover. (See [COLUMN COVER REMOVAL/ INSTALLATION.](#))
3. Disconnect the connector.

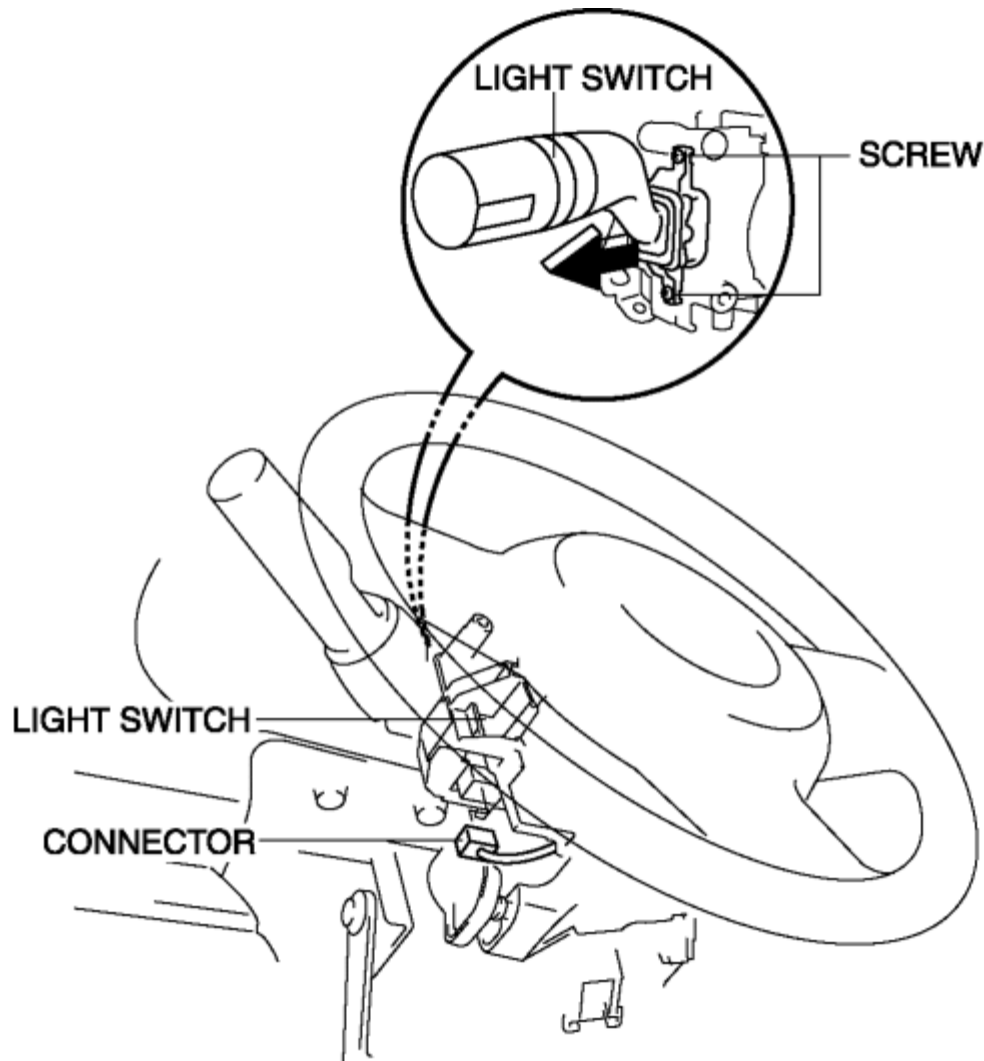

4. Remove the screws shown in the figure, then remove the light switch by pulling it in the direction of the arrow.
5. Install in the reverse order of removal.