


2012 - Mazda6 - Body and Accessories

HAZARD WARNING SWITCH INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the center panel upper. (See [CENTER PANEL UPPER REMOVAL/ INSTALLATION.](#))
- 3. Remove the hazard warning switch. (See [HAZARD WARNING SWITCH REMOVAL/ INSTALLATION.](#))
- 4. Verify that the continuity between the hazard switch terminals is as indicated in the table.

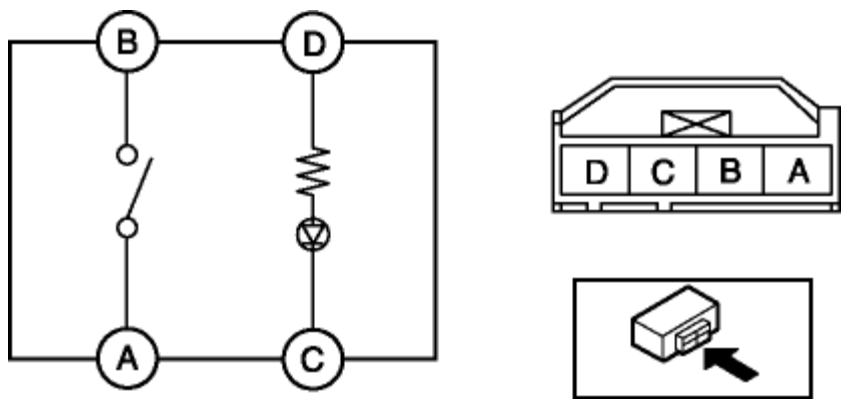

- If not as indicated in the table, replace the hazard warning switch.

○ — ○ : Continuity


Switch position	Terminal	
	B	A
OFF		
ON	○ — ○	○ — ○

- 5. Apply battery voltage to hazard switch terminal D, and connect terminal C to ground.
- 6. Verify that the LED illuminates.
- If there is any malfunction, replace the hazard warning switch.

2012 - Mazda6 - Body and Accessories

HAZARD WARNING SWITCH INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the center panel upper. (See [CENTER PANEL UPPER REMOVAL/ INSTALLATION.](#))
- 3. Remove the hazard warning switch. (See [HAZARD WARNING SWITCH REMOVAL/ INSTALLATION.](#))
- 4. Verify that the continuity between the hazard switch terminals is as indicated in the table.

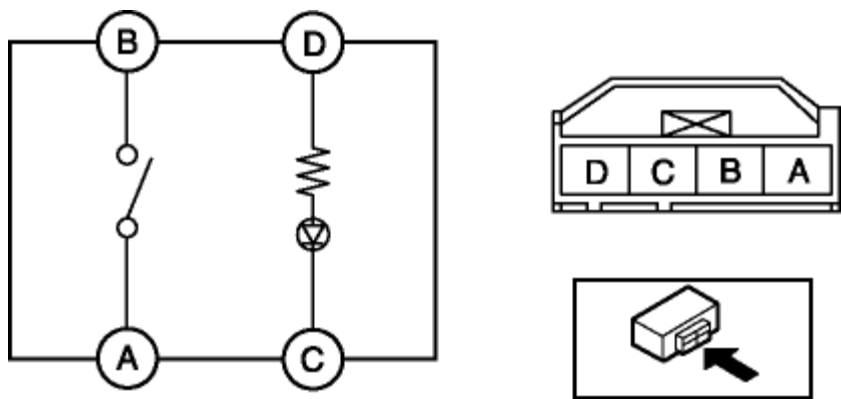

- If not as indicated in the table, replace the hazard warning switch.

○ — ○ : Continuity

Switch position	Terminal	
	B	A
OFF		
ON	○ — ○	○ — ○

- 5. Apply battery voltage to hazard switch terminal D, and connect terminal C to ground.
- 6. Verify that the LED illuminates.
- If there is any malfunction, replace the hazard warning switch.