


2012 - Mazda6 - Body and Accessories

FRONT FOG LIGHT SWITCH INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the column cover. (See [COLUMN COVER REMOVAL/ INSTALLATION](#).)
- 3. Remove the light switch. (See [LIGHT SWITCH REMOVAL/ INSTALLATION](#).)
- 4. Verify that the continuity between the front fog light switch terminals is as indicated in the table.
  - If not as indicated in the table, replace the light switch.

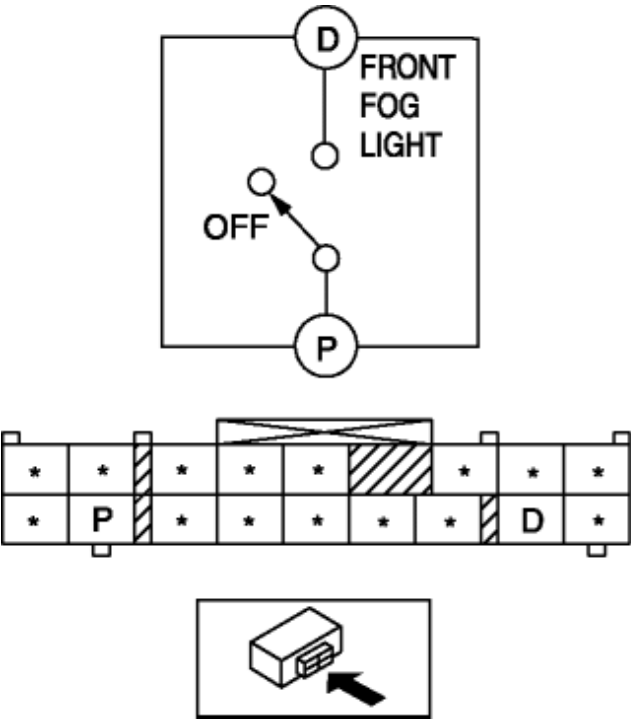


○ — ○ : Continuity

| Switch position | Terminal |       |
|-----------------|----------|-------|
|                 | D        | P     |
| OFF             |          |       |
| ON              | ○ — ○    | ○ — ○ |

2012 - Mazda6 - Body and Accessories

FRONT FOG LIGHT SWITCH INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the column cover. (See [COLUMN COVER REMOVAL/ INSTALLATION](#).)
- 3. Remove the light switch. (See [LIGHT SWITCH REMOVAL/ INSTALLATION](#).)
- 4. Verify that the continuity between the front fog light switch terminals is as indicated in the table.
  - If not as indicated in the table, replace the light switch.

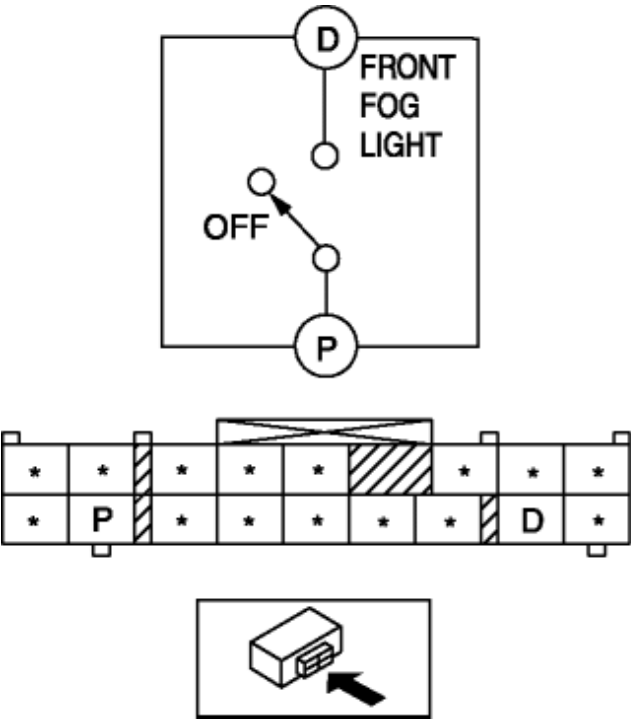

○ — ○ : Continuity

| Switch position | Terminal |       |
|-----------------|----------|-------|
|                 | D        | P     |
| OFF             |          |       |
| ON              | ○ — ○    | ○ — ○ |