



2012 - Mazda6 - Body and Accessories

INBOARD LIGHT BULB REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Partially peel back the trunk lid trim. (See [TRUNK LID TRIM REMOVAL/ INSTALLATION](#).)
3. Disconnect the back-up light bulb connector.

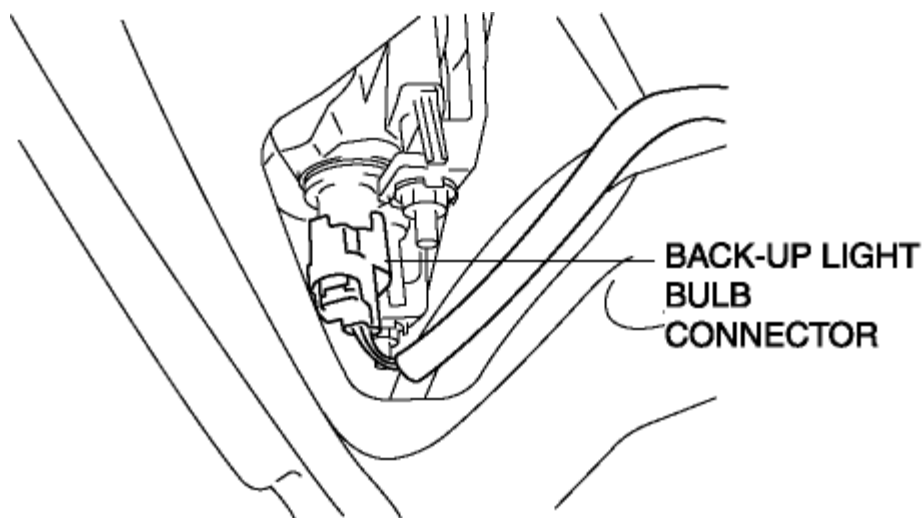

4. Rotate the socket in the direction of the arrow as shown in the figure to remove it.

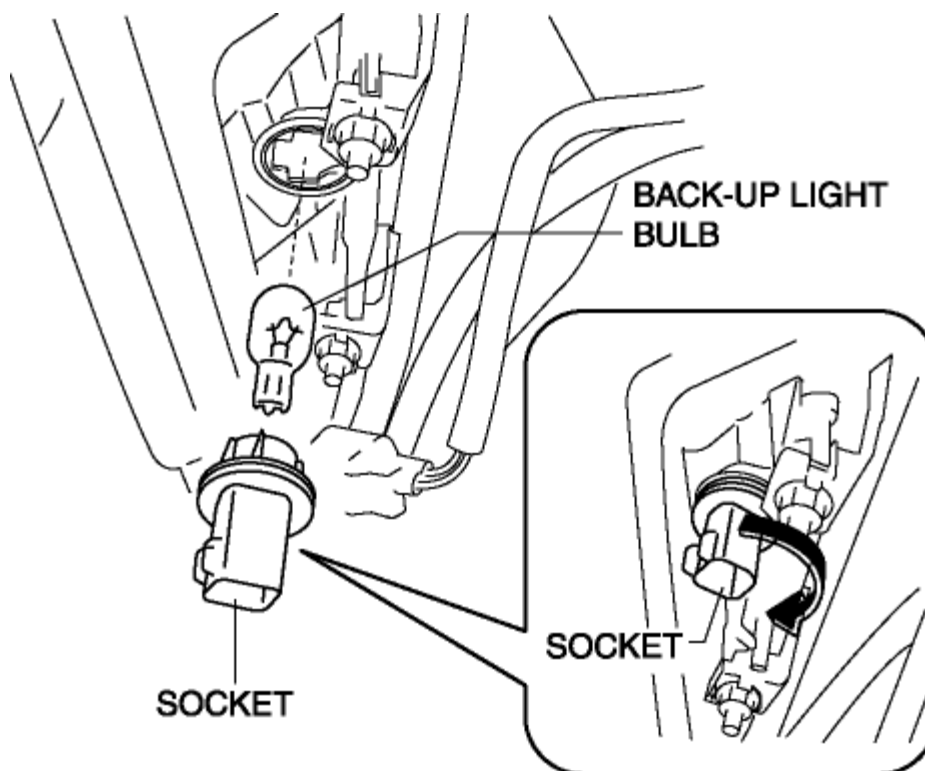

5. Remove the back-up light bulb.

6. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.


2012 - Mazda6 - Body and Accessories

INBOARD LIGHT BULB REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Partially peel back the trunk lid trim. (See [TRUNK LID TRIM REMOVAL/ INSTALLATION](#).)
3. Disconnect the back-up light bulb connector.

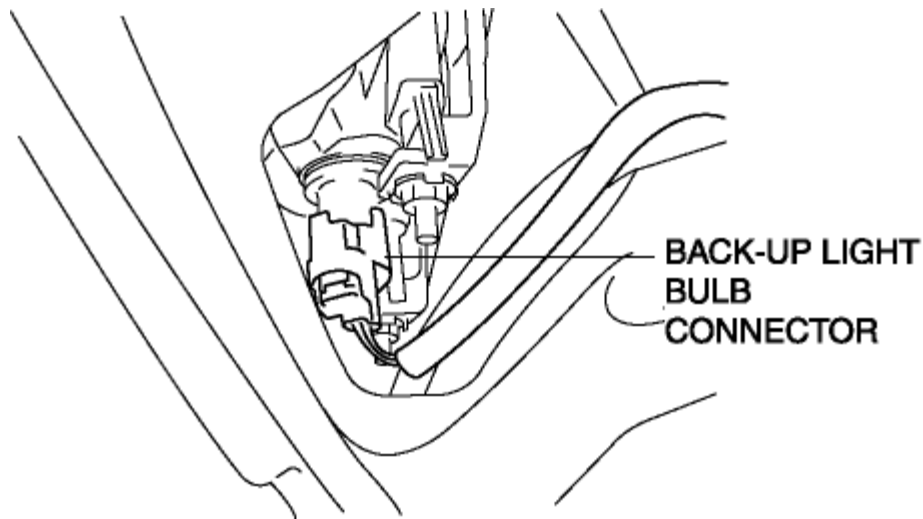

4. Rotate the socket in the direction of the arrow as shown in the figure to remove it.

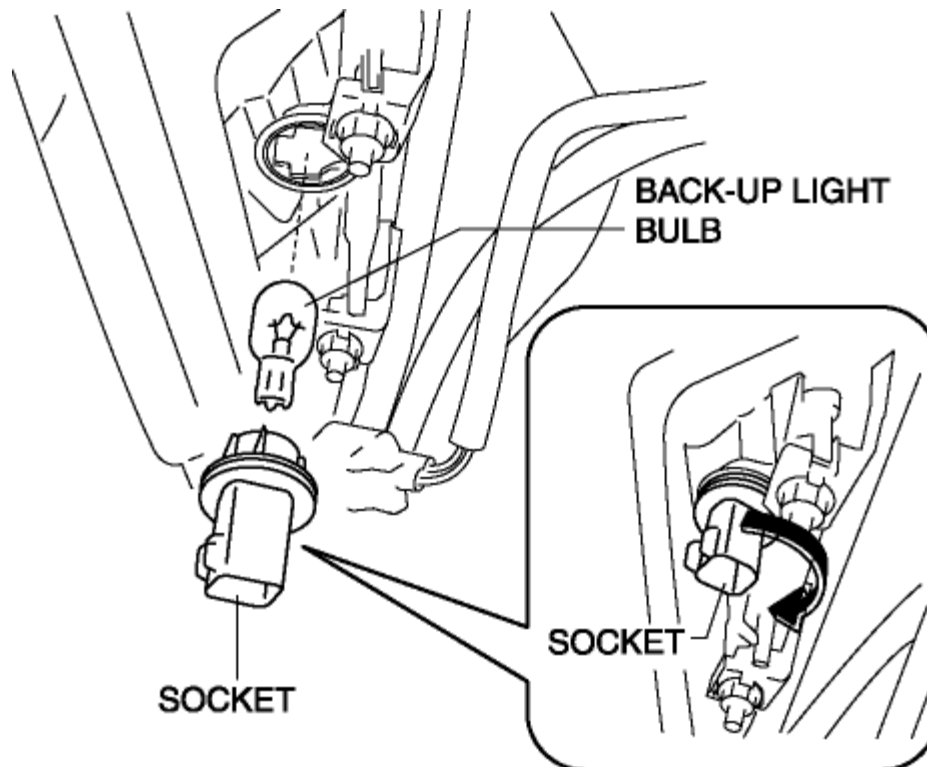

5. Remove the back-up light bulb.

6. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.