



2012 - Mazda6 - Body and Accessories

FRONT SIDE MARKER LIGHT REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Slightly bend back the mudguard. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
3. Disconnect the front side marker light connector.

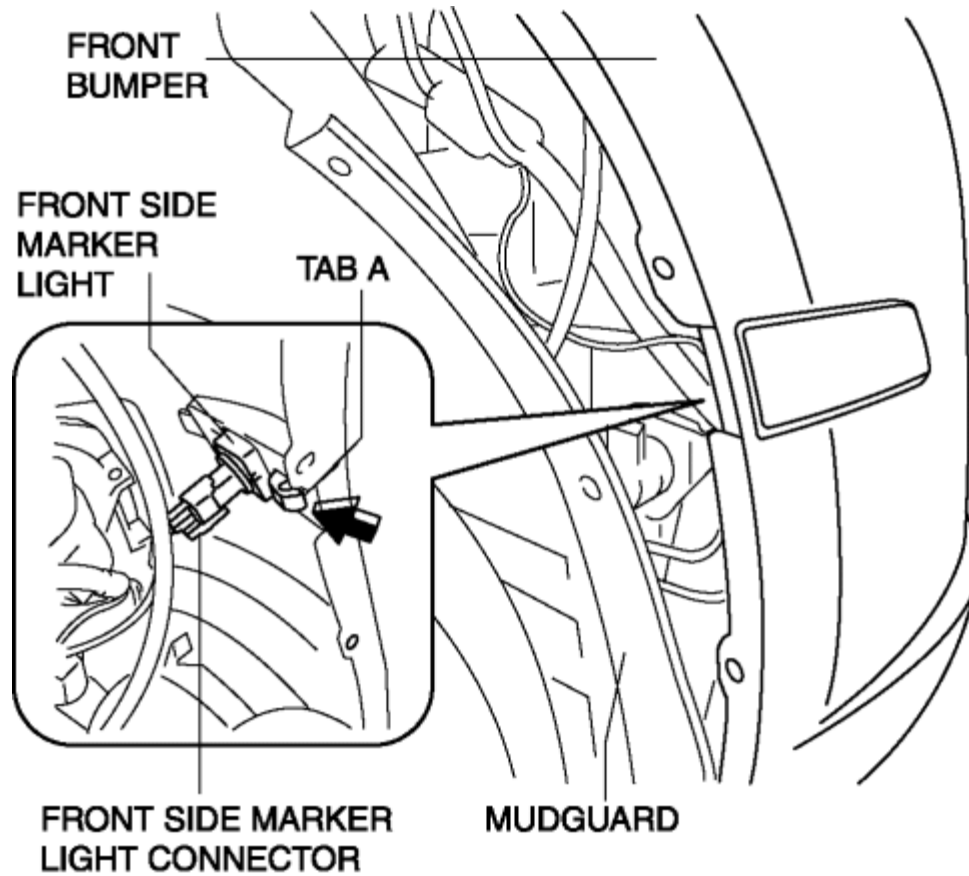

4. Remove tab A by pressing it in the direction of the arrow shown in the figure.
5. Remove the front side marker light by pulling it in the direction of the arrow shown in the figure.

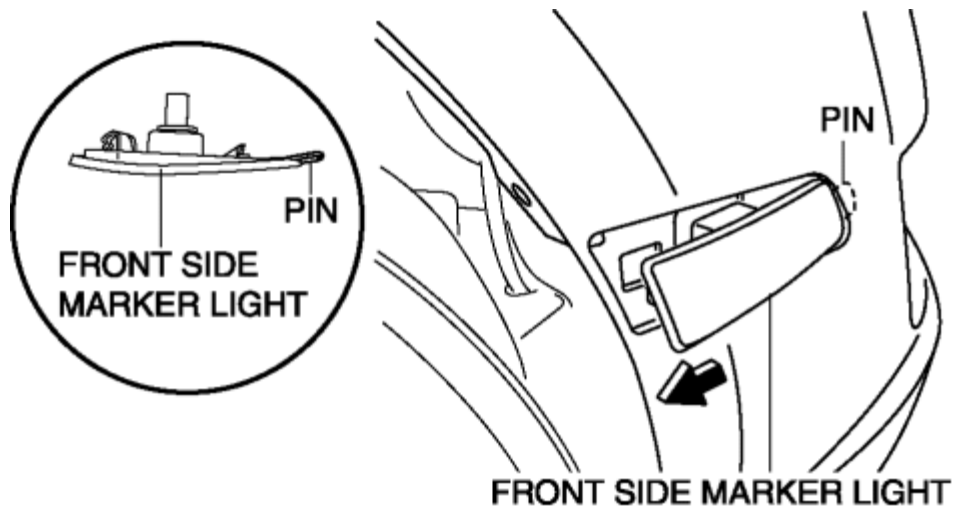

CAUTION:

- When remove the front side marker light, be careful not to damage the pin.

6. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.


2012 - Mazda6 - Body and Accessories

FRONT SIDE MARKER LIGHT REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Slightly bend back the mudguard. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
3. Disconnect the front side marker light connector.

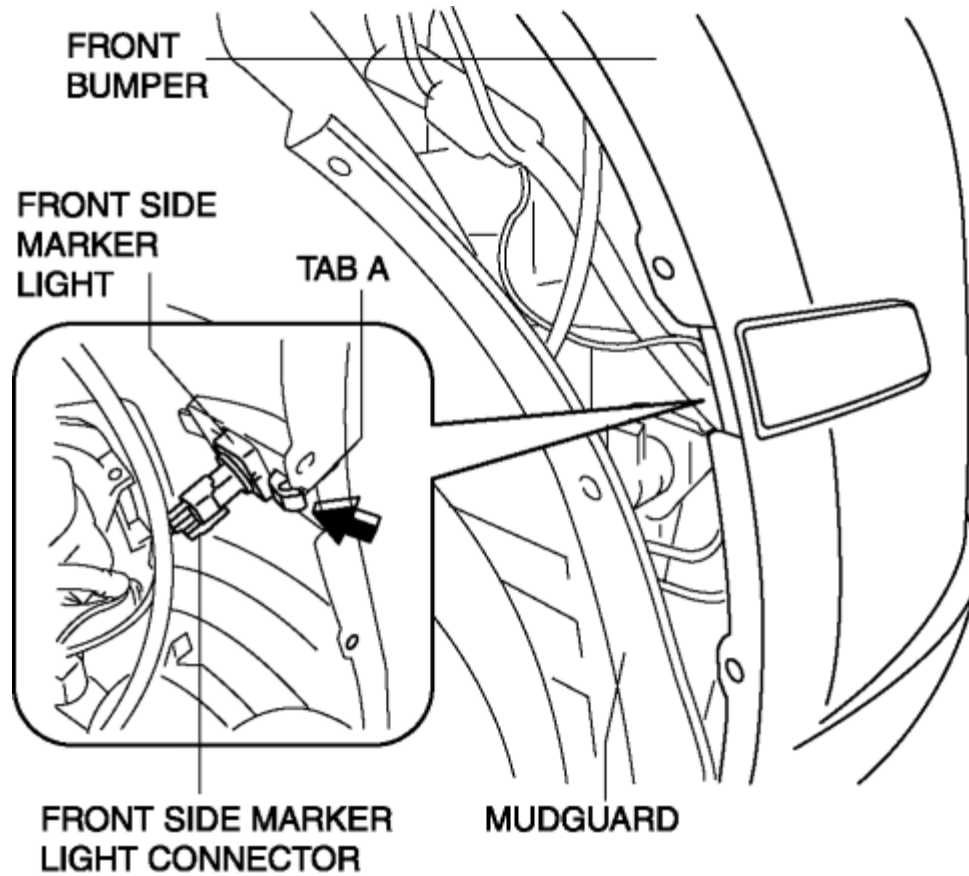

4. Remove tab A by pressing it in the direction of the arrow shown in the figure.
5. Remove the front side marker light by pulling it in the direction of the arrow shown in the figure.

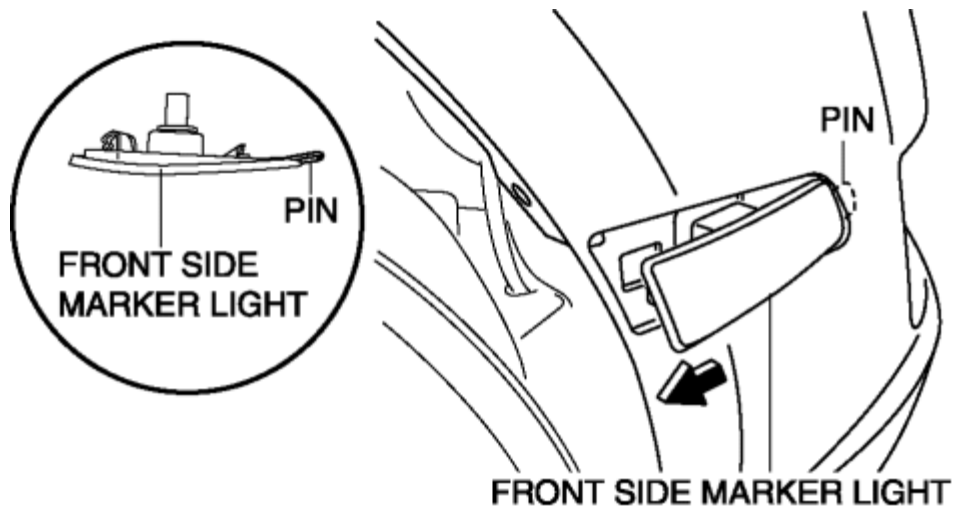

CAUTION:

- When remove the front side marker light, be careful not to damage the pin.

6. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.