



2012 - Mazda6 - Body and Accessories

BRAKE/ TAILLIGHT BULB REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the trunk end trim. (See [TRUNK END TRIM REMOVAL/ INSTALLATION.](#))
3. Partially peel back the trunk side trim. (See [TRUNK SIDE TRIM REMOVAL/ INSTALLATION.](#))
4. Disconnect the connectors shown in the figure.

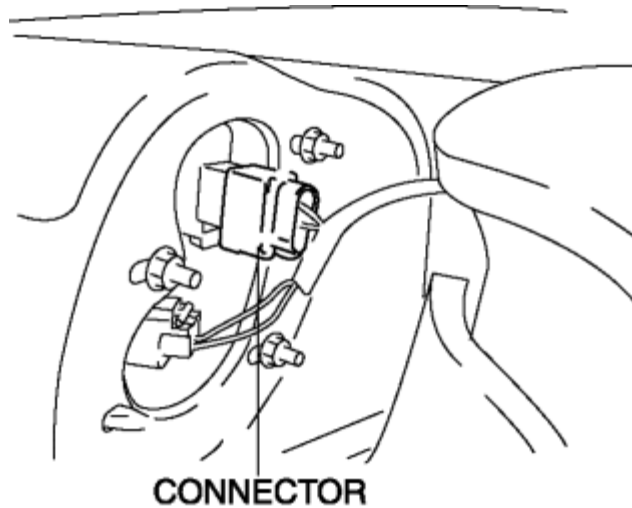

5. Rotate the brake/taillight socket in the direction of the arrow shown in the figure and remove it.

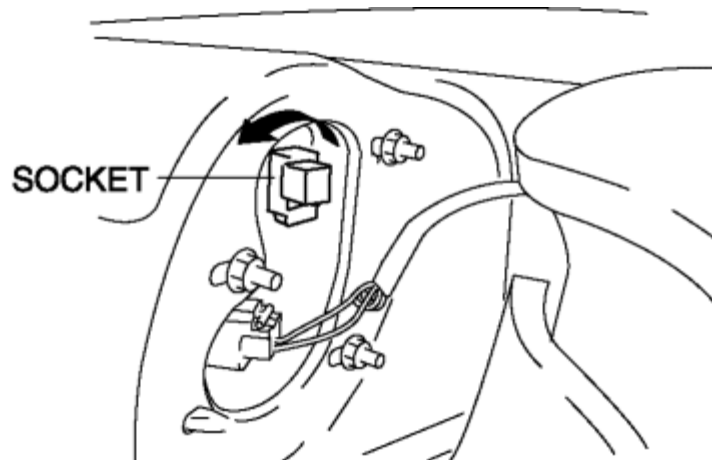


6. Remove the brake/taillight bulb.
7. Install in the reverse order of removal.


2012 - Mazda6 - Body and Accessories

BRAKE/ TAILLIGHT BULB REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the trunk end trim. (See [TRUNK END TRIM REMOVAL/ INSTALLATION.](#))
3. Partially peel back the trunk side trim. (See [TRUNK SIDE TRIM REMOVAL/ INSTALLATION.](#))
4. Disconnect the connectors shown in the figure.

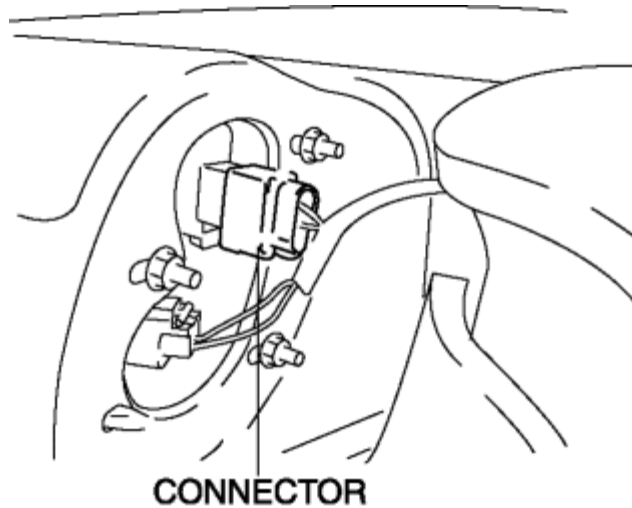

5. Rotate the brake/taillight socket in the direction of the arrow shown in the figure and remove it.

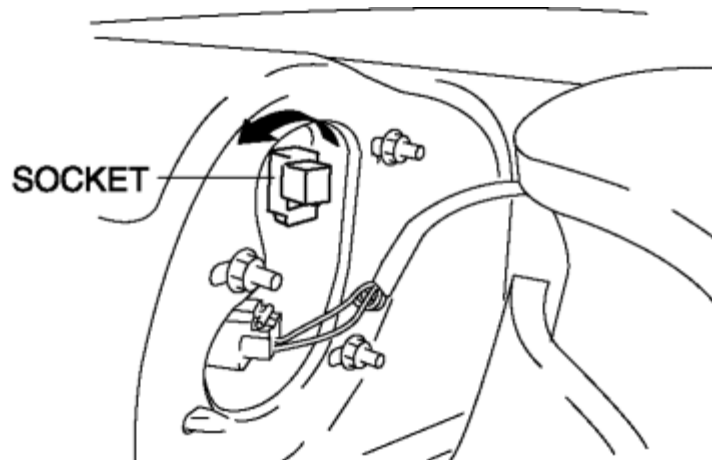

6. Remove the brake/taillight bulb.
7. Install in the reverse order of removal.

