

[< Previous](#) [Next >](#)

2012 - Mazda6 - Body and Accessories

RAIN SENSOR INITIAL SETTING

NOTE:

- When the ignition switch is turned to the ON position, the initialization is stored after verifying the windshield condition.

Rain Sensor initialization

1. Switch the ignition ON.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

[< Previous](#) [Next >](#)

2012 - Mazda6 - Body and Accessories

RAIN SENSOR INITIAL SETTING

NOTE:

- When the ignition switch is turned to the ON position, the initialization is stored after verifying the windshield condition.

Rain Sensor initialization

1. Switch the ignition ON.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.