
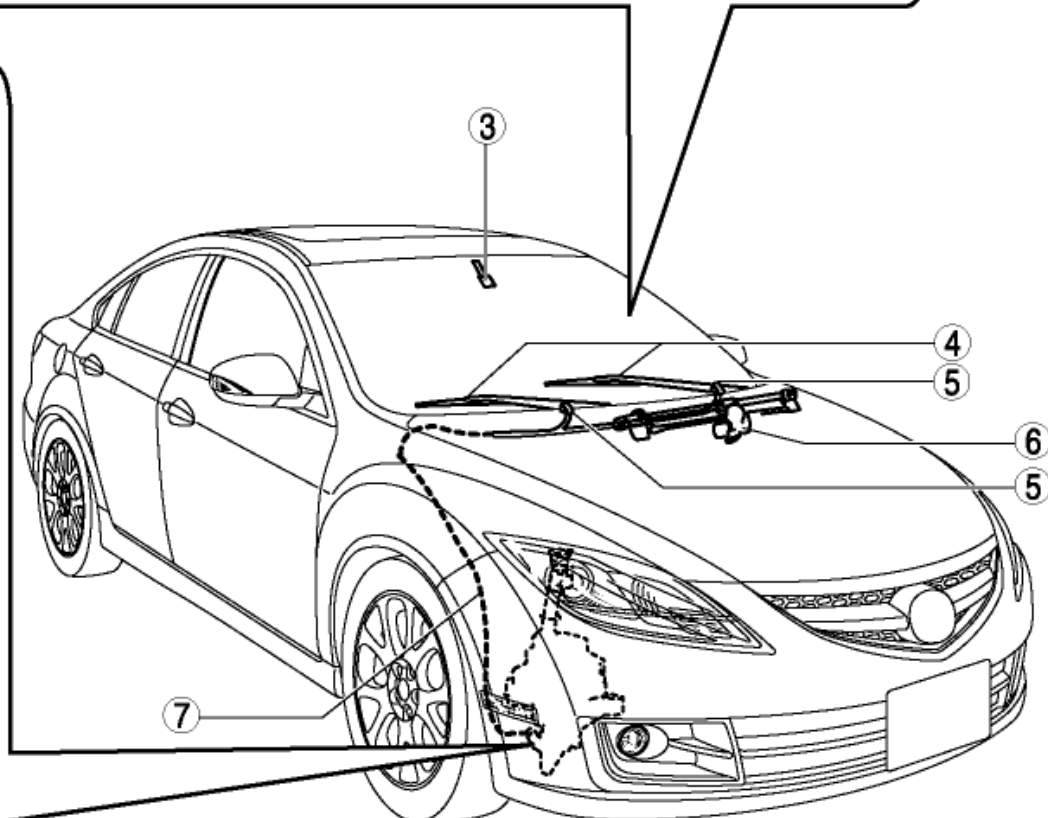
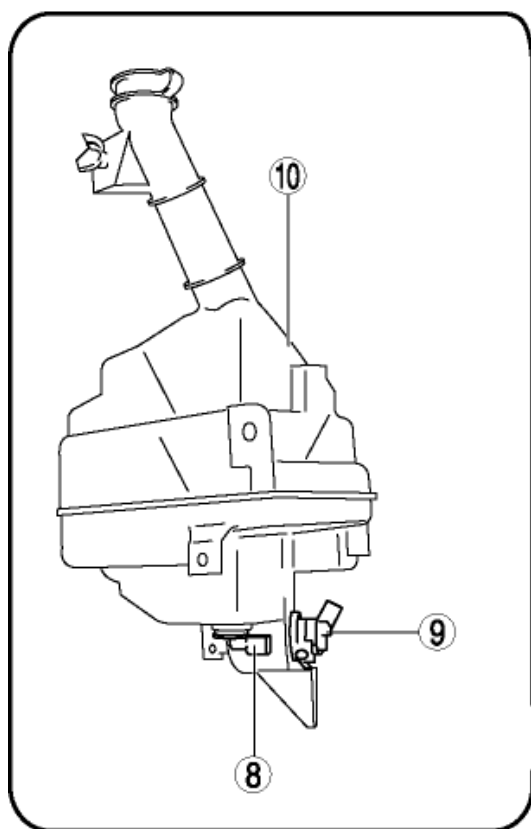


[< Previous](#) [Next >](#)

2012 - Mazda6 - Body and Accessories

WIPER/ WASHER SYSTEM LOCATION INDEX

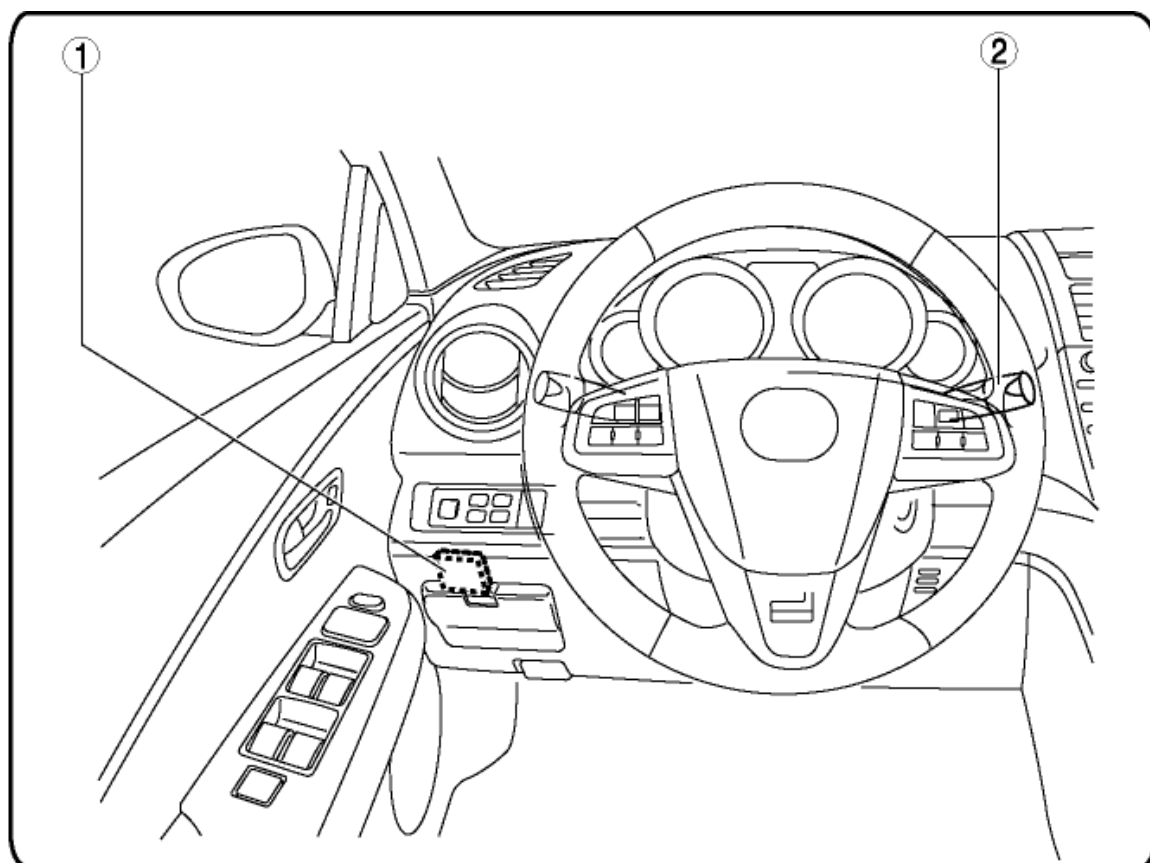

1 Auto light/wiper control module




(See **AUTO LIGHT/ WIPER CONTROL MODULE REMOVAL/ INSTALLATION.**)

	(See AUTO LIGHT/ WIPER CONTROL MODULE INSPECTION.)
2	Wiper and washer switch (See WIPER AND WASHER SWITCH REMOVAL/ INSTALLATION.) (See WINDSHIELD WIPER AND WASHER SWITCH INSPECTION.)
3	Rain sensor (See RAIN SENSOR REMOVAL/ INSTALLATION.) (See RAIN SENSOR INITIAL SETTING.)
4	Windshield wiper arm and blade (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION.) (See WINDSHIELD WIPER ARM AND BLADE ADJUSTMENT.)
5	Windshield washer nozzle (See WINDSHIELD WASHER NOZZLE REMOVAL/ INSTALLATION.)
6	Windshield wiper motor (See WINDSHIELD WIPER MOTOR REMOVAL/ INSTALLATION.) (See WINDSHIELD WIPER MOTOR DISASSEMBLY/ ASSEMBLY.) (See WINDSHIELD WIPER MOTOR INSPECTION.)
7	Windshield washer hose (See WINDSHIELD WASHER HOSE REMOVAL/ INSTALLATION.)
8	Washer fluid-level sensor (See WASHER FLUID-LEVEL SENSOR REMOVAL/ INSTALLATION.) (See WASHER FLUID-LEVEL SENSOR INSPECTION.)
9	Windshield washer motor (See WINDSHIELD WASHER MOTOR REMOVAL/ INSTALLATION.) (See WINDSHIELD WASHER MOTOR INSPECTION.)
10	Washer tank (See WASHER TANK REMOVAL/ INSTALLATION.)

[< Previous](#) [Next >](#)

2012 - Mazda6 - Body and Accessories

WIPER/ WASHER SYSTEM LOCATION INDEX

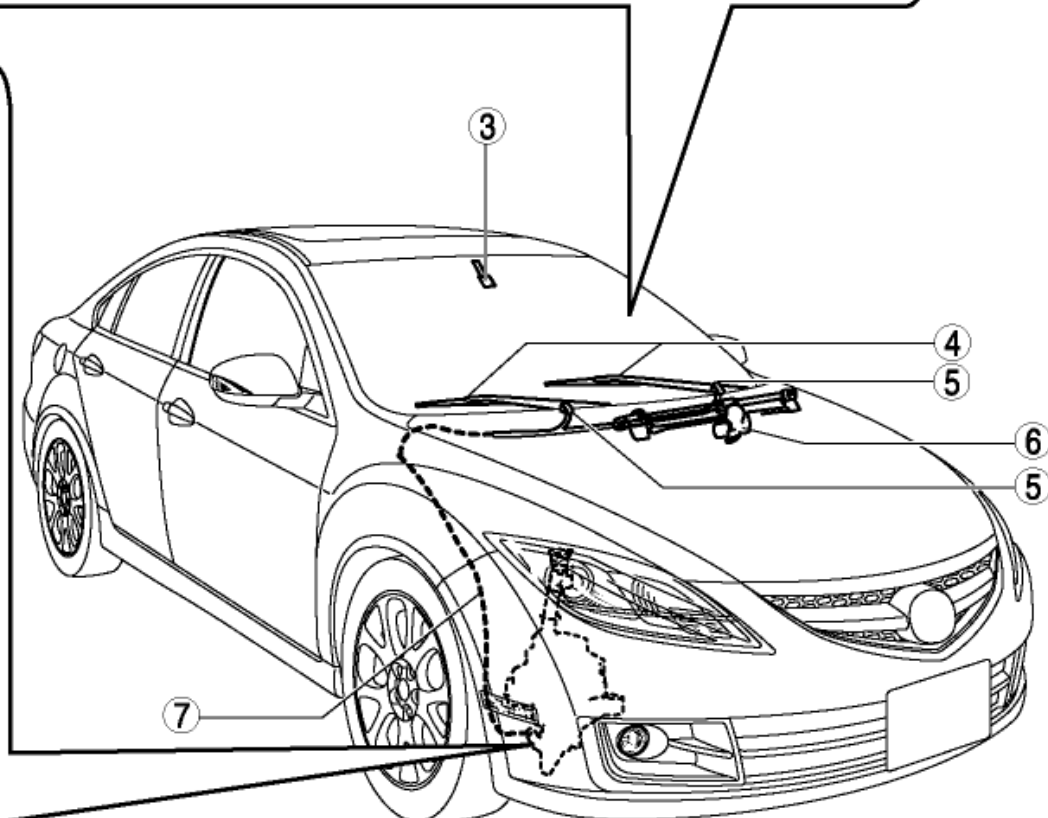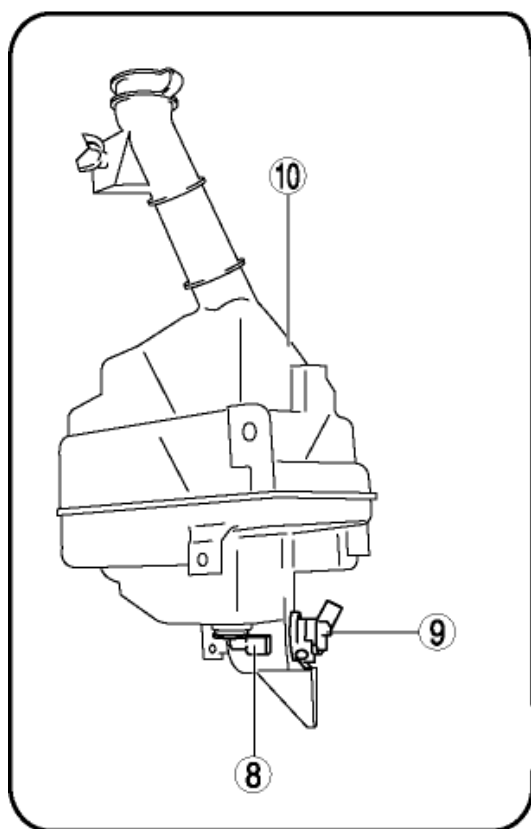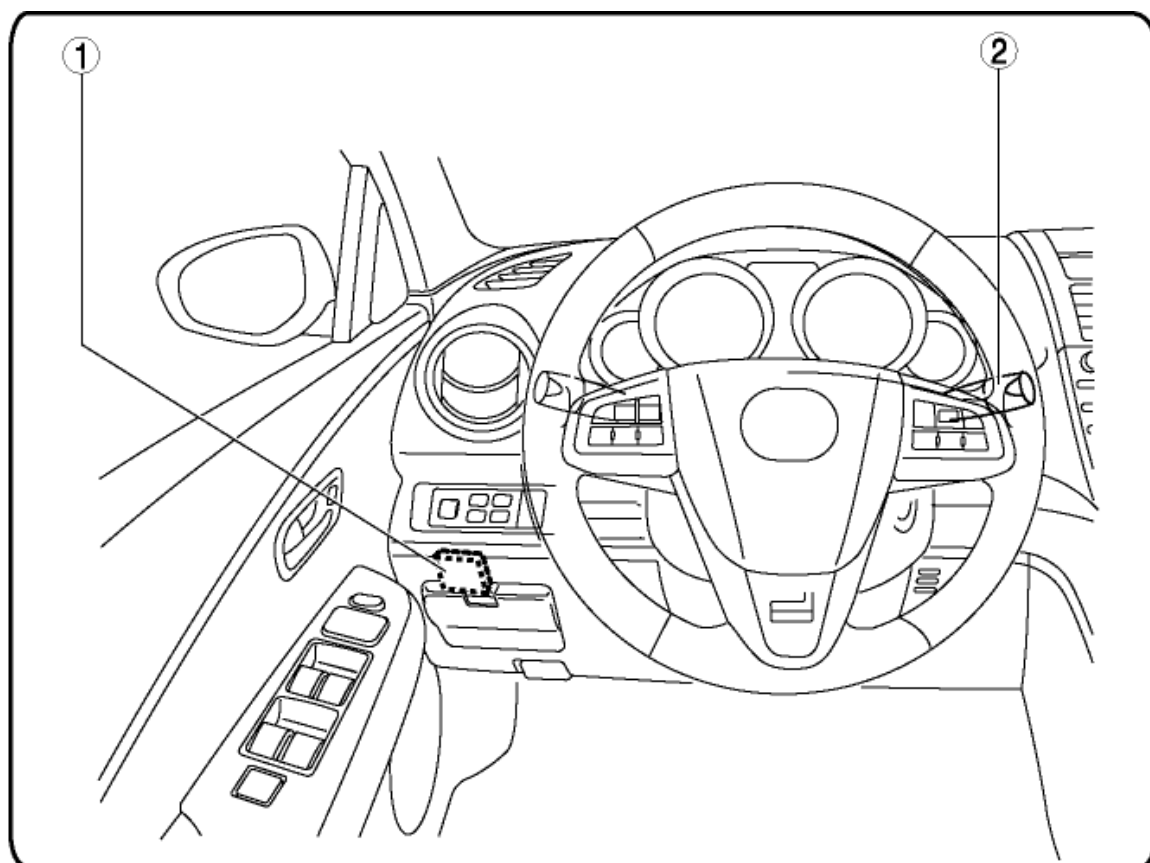

1 Auto light/wiper control module

(See **AUTO LIGHT/ WIPER CONTROL MODULE REMOVAL/ INSTALLATION.**)

	(See AUTO LIGHT/ WIPER CONTROL MODULE INSPECTION.)
2	Wiper and washer switch (See WIPER AND WASHER SWITCH REMOVAL/ INSTALLATION.) (See WINDSHIELD WIPER AND WASHER SWITCH INSPECTION.)
3	Rain sensor (See RAIN SENSOR REMOVAL/ INSTALLATION.) (See RAIN SENSOR INITIAL SETTING.)
4	Windshield wiper arm and blade (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION.) (See WINDSHIELD WIPER ARM AND BLADE ADJUSTMENT.)
5	Windshield washer nozzle (See WINDSHIELD WASHER NOZZLE REMOVAL/ INSTALLATION.)
6	Windshield wiper motor (See WINDSHIELD WIPER MOTOR REMOVAL/ INSTALLATION.) (See WINDSHIELD WIPER MOTOR DISASSEMBLY/ ASSEMBLY.) (See WINDSHIELD WIPER MOTOR INSPECTION.)
7	Windshield washer hose (See WINDSHIELD WASHER HOSE REMOVAL/ INSTALLATION.)
8	Washer fluid-level sensor (See WASHER FLUID-LEVEL SENSOR REMOVAL/ INSTALLATION.) (See WASHER FLUID-LEVEL SENSOR INSPECTION.)
9	Windshield washer motor (See WINDSHIELD WASHER MOTOR REMOVAL/ INSTALLATION.) (See WINDSHIELD WASHER MOTOR INSPECTION.)
10	Washer tank (See WASHER TANK REMOVAL/ INSTALLATION.)