


2012 - Mazda6 - Body and Accessories

WINDSHIELD WIPER AND WASHER SWITCH INSPECTION

- 1. Disconnect the negative battery cable.
 - 2. Remove the column cover. (See [COLUMN COVER REMOVAL/ INSTALLATION](#).)
 - 3. Remove the wiper and washer switch. (See [WIPER AND WASHER SWITCH REMOVAL/ INSTALLATION](#).)
 - 4. Verify that the continuity between the windshield wiper and washer switch terminals is as indicated in the table.
- If the continuity is not as indicated in the table, or if the resistance is not within the specification, replace the windshield wiper and washer switch. (See [WIPER AND WASHER SWITCH REMOVAL/ INSTALLATION](#).)


Vehicles Without Auto Wiper System

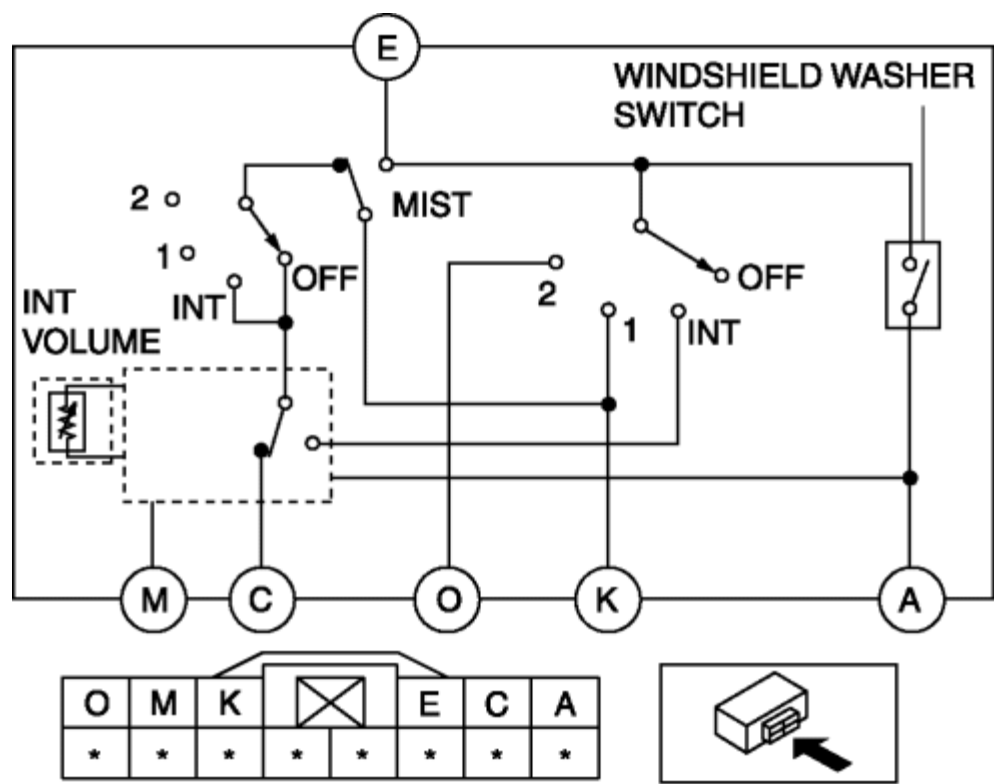

○—○ : Continuity

Switch position		Mist	Terminal					
			A	C	E	K	M	O
Windshield wiper switch	OFF	OFF		○—○				
		ON			○—○			
	INT			○—○				
	1				○—○			
	2				○—○	○—○		
Windshield washer switch	ON		○—○		○—○			
				○—○		○—○		

Vehicles With Auto Wiper System

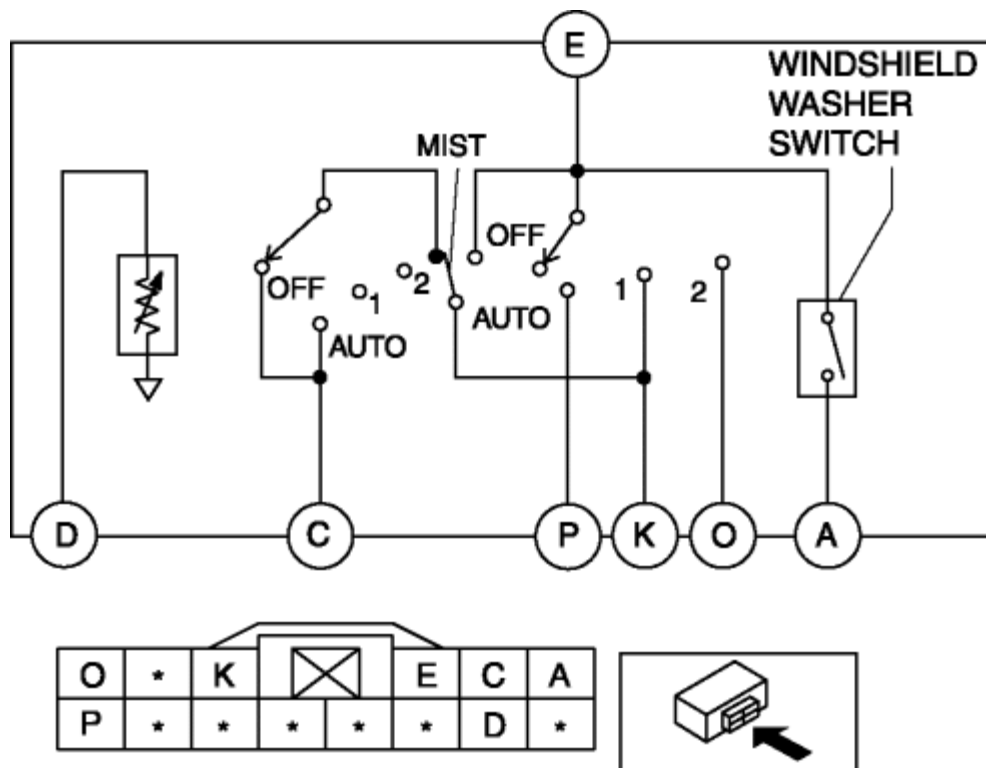

○—○ : Continuity

Switch position		Mist	Terminal						
			A	C	D	E	K	O	P
Windshield wiper switch	OFF	OFF		○—○			○		
		ON				○—○			
	AUTO					○—○			○
				○—○			○		
	1					○—○			
	2					○—○		○	
Windshield washer switch	ON		○—○			○			
				○—○			○		

< Previous Next >

[Back to Top](#)


© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

WINDSHIELD WIPER AND WASHER SWITCH INSPECTION

- 1. Disconnect the negative battery cable.
 - 2. Remove the column cover. (See [COLUMN COVER REMOVAL/ INSTALLATION](#).)
 - 3. Remove the wiper and washer switch. (See [WIPER AND WASHER SWITCH REMOVAL/ INSTALLATION](#).)
 - 4. Verify that the continuity between the windshield wiper and washer switch terminals is as indicated in the table.
- If the continuity is not as indicated in the table, or if the resistance is not within the specification, replace the windshield wiper and washer switch. (See [WIPER AND WASHER SWITCH REMOVAL/ INSTALLATION](#).)


Vehicles Without Auto Wiper System

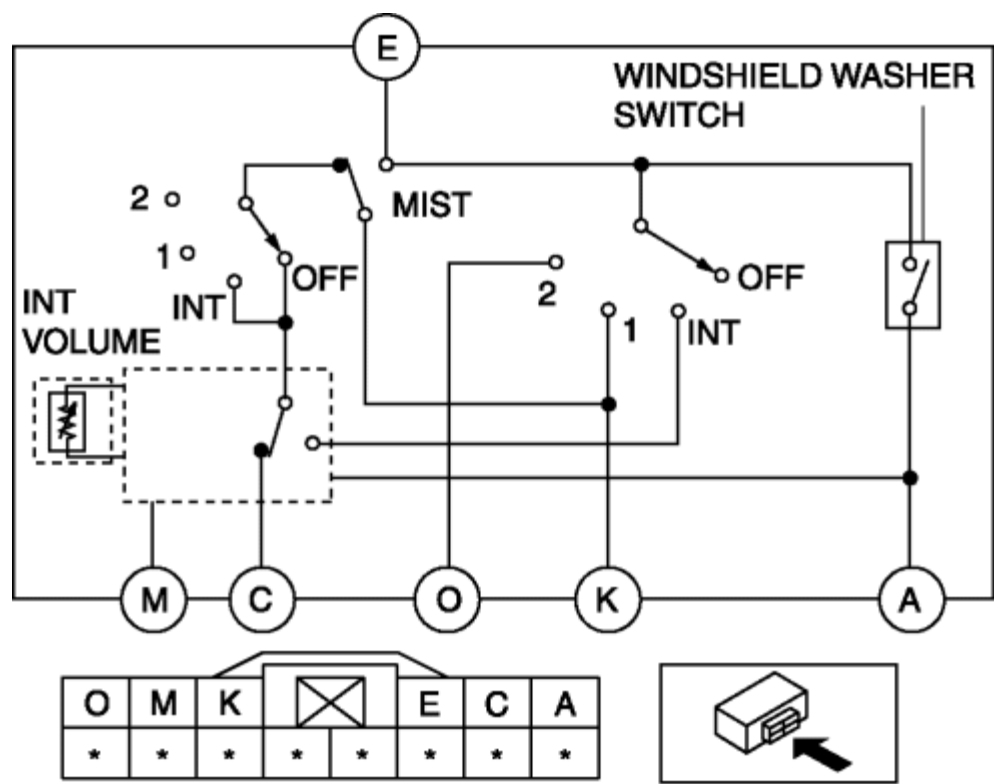

○—○ : Continuity

Switch position		Mist	Terminal					
			A	C	E	K	M	O
Windshield wiper switch	OFF	OFF		○—○				
		ON			○—○			
	INT			○—○				
	1				○—○			
	2				○—○	○—○		
Windshield washer switch	ON		○—○		○—○			
				○—○		○—○		

Vehicles With Auto Wiper System

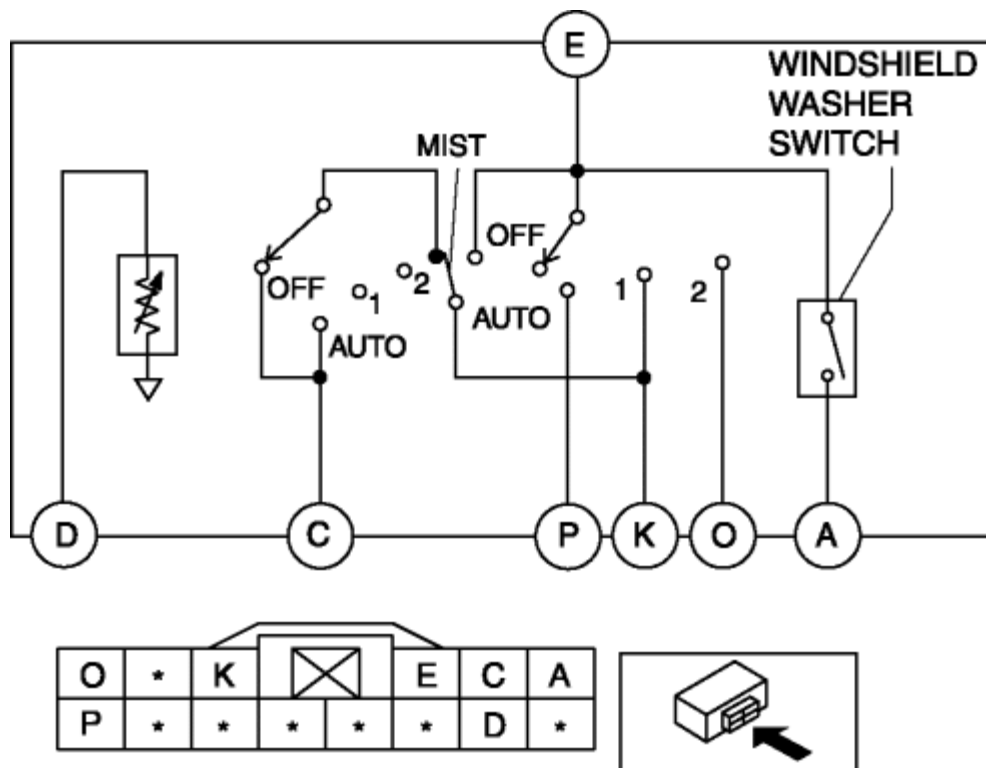

○—○ : Continuity

Switch position		Mist	Terminal						
			A	C	D	E	K	O	P
Windshield wiper switch	OFF	OFF		○—○			○		
		ON				○—○			
	AUTO					○—○			○
				○—○			○		
	1					○—○			
	2					○—○		○	
Windshield washer switch	ON		○—○			○			
				○—○			○		

< Previous Next >

[Back to Top](#)