


2012 - Mazda6 - Body and Accessories

WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION


- 1. Remove in the order indicated in the table.
- 2. Install in the reverse order of removal.
- 3. Adjust the windshield wiper arm and blade. (See [WINDSHIELD WIPER ARM AND BLADE ADJUSTMENT.](#))

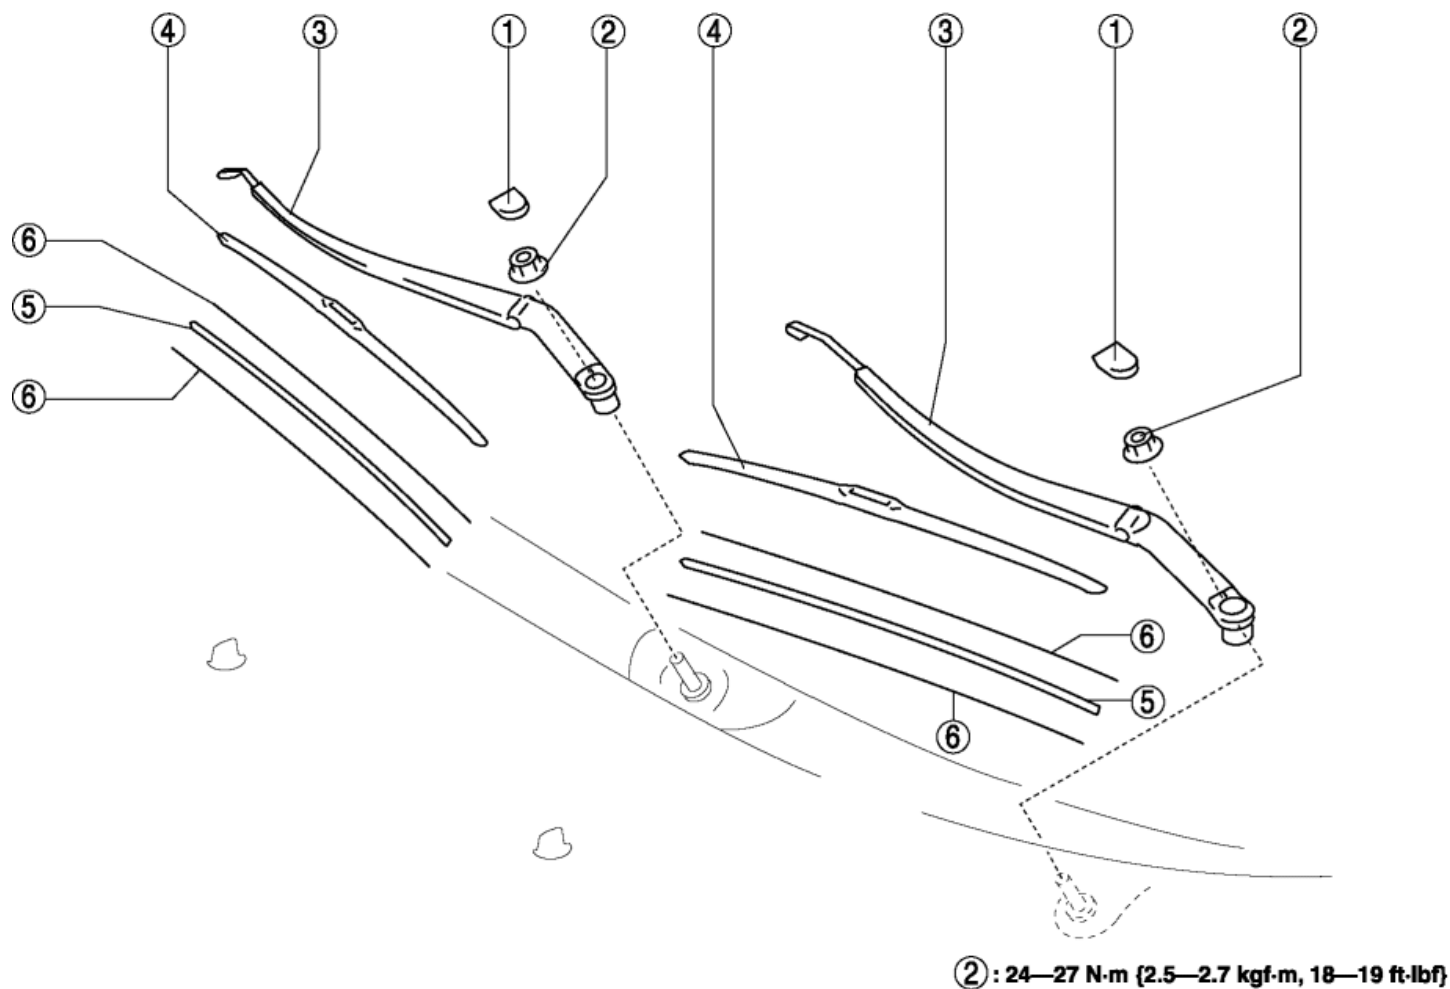

1	Cap
2	Nut
3	Windshield wiper arm (See Windshield Wiper Arm Installation Note.)
4	Windshield wiper blade
5	Rubber brush
6	Backing plate

Windshield Wiper Arm Installation Note

1. Clean the windshield wiper arm connector shafts using a wire brush before installing the windshield wiper arms.

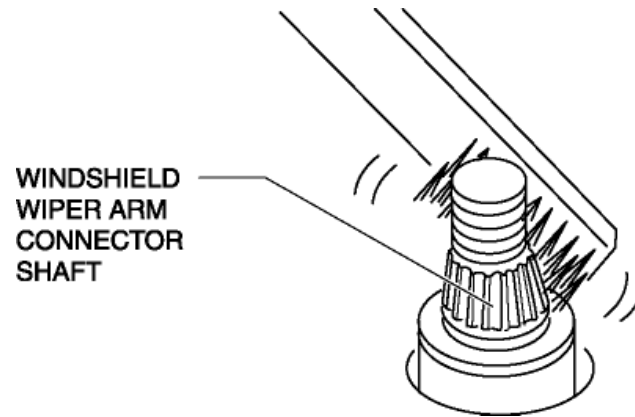

[< Previous](#) [Next >](#)


© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)

2012 - Mazda6 - Body and Accessories

WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION


- 1. Remove in the order indicated in the table.
- 2. Install in the reverse order of removal.
- 3. Adjust the windshield wiper arm and blade. (See [WINDSHIELD WIPER ARM AND BLADE ADJUSTMENT.](#))

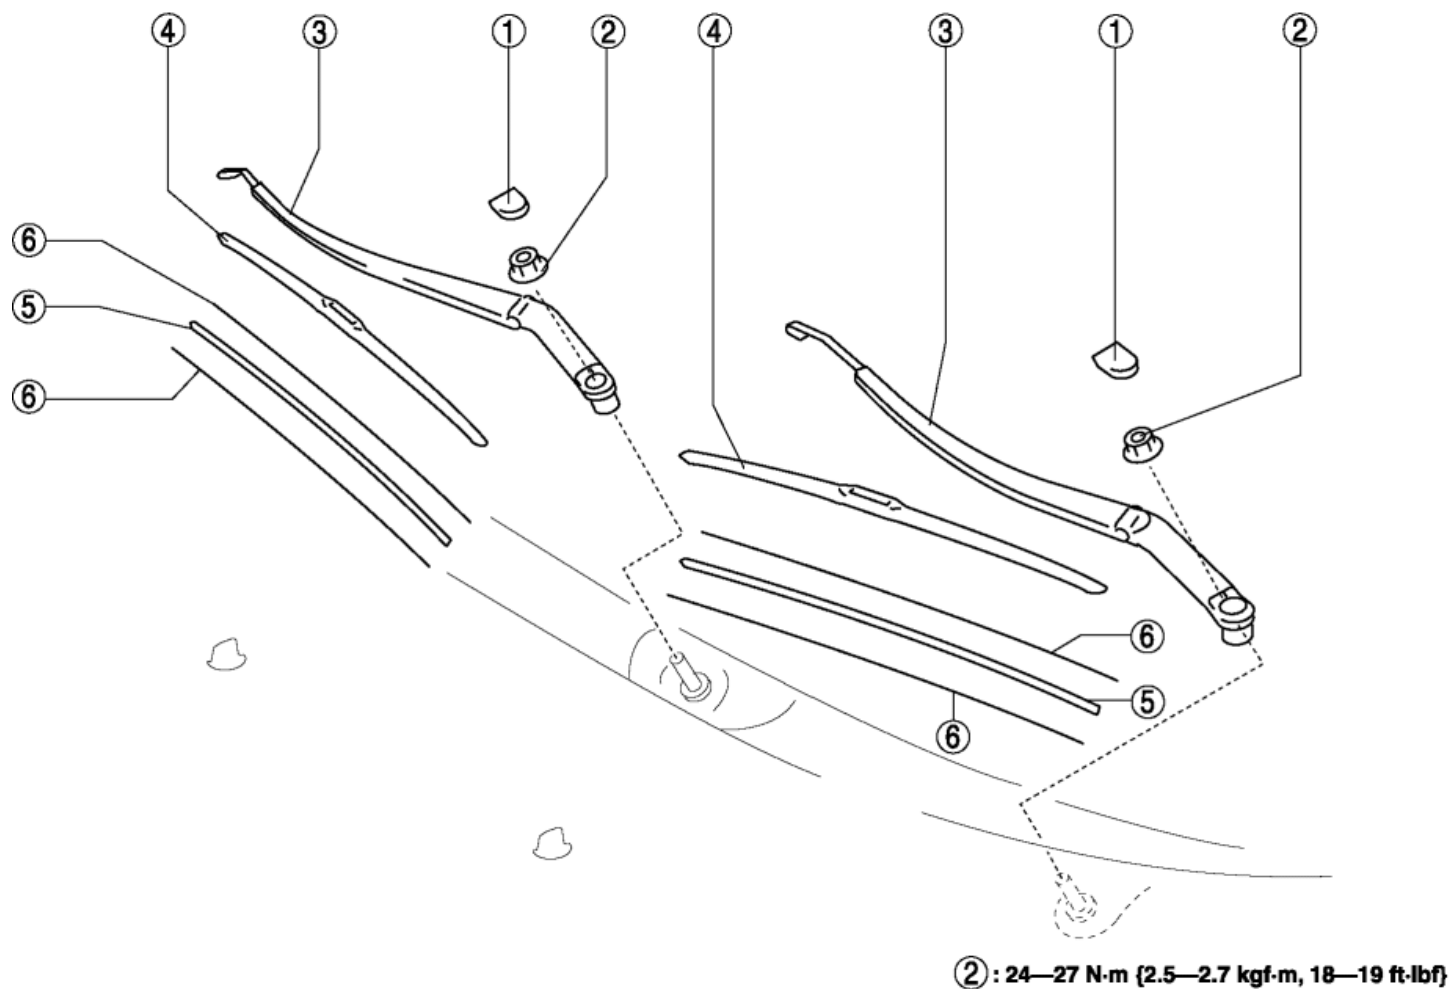

1	Cap
2	Nut
3	Windshield wiper arm (See Windshield Wiper Arm Installation Note.)
4	Windshield wiper blade
5	Rubber brush
6	Backing plate

Windshield Wiper Arm Installation Note

1. Clean the windshield wiper arm connector shafts using a wire brush before installing the windshield wiper arms.

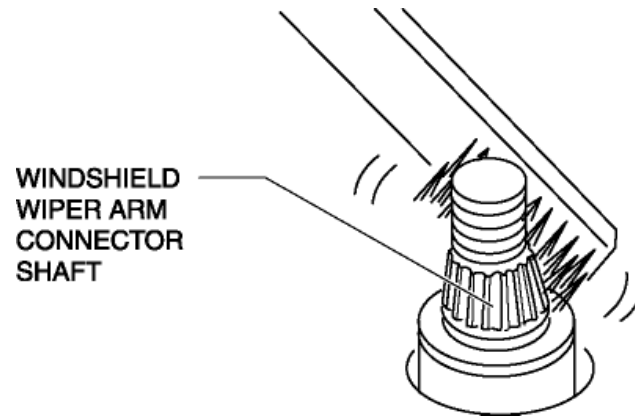

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)