


2012 - Mazda6 - Body and Accessories

WINDSHIELD WIPER ARM AND BLADE ADJUSTMENT

1. Operate the windshield wipers, and then turn off the windshield wiper motor to set the wipers in the park position.
2. Slide the serrated connecting part and adjust the windshield wiper arm and blade so that its end is aligned with the hollowed mark in the ceramic coating.

NOTE:

- If the hollowed mark in the ceramic coating cannot be located, measure the distance from the cowl grille end line, and adjust the windshield wiper arm and blade.

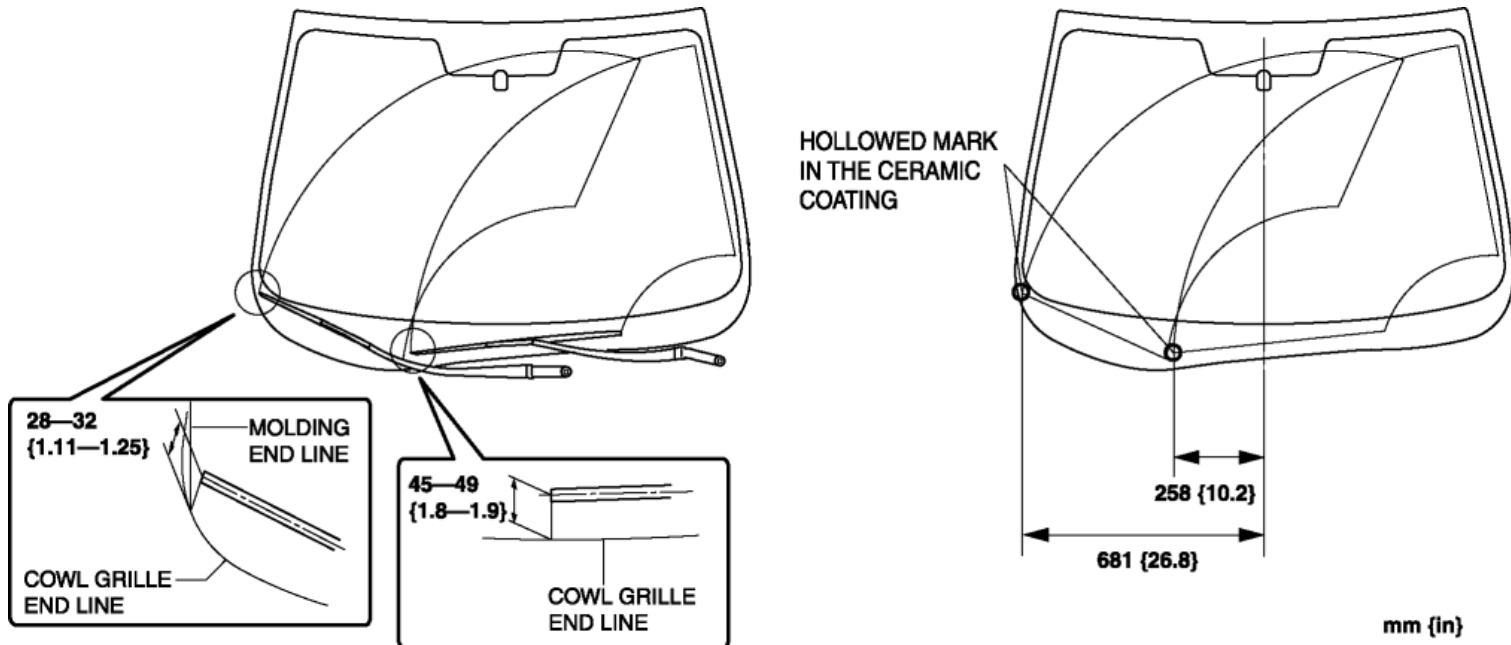

2012 - Mazda6 - Body and Accessories

WINDSHIELD WIPER ARM AND BLADE ADJUSTMENT

1. Operate the windshield wipers, and then turn off the windshield wiper motor to set the wipers in the park position.
2. Slide the serrated connecting part and adjust the windshield wiper arm and blade so that its end is aligned with the hollowed mark in the ceramic coating.

NOTE:

- If the hollowed mark in the ceramic coating cannot be located, measure the distance from the cowl grille end line, and adjust the windshield wiper arm and blade.

