


2012 - Mazda6 - Body and Accessories

WINDSHIELD WIPER MOTOR REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the windshield wiper arm and blade. (See [WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION](#).)
3. Remove the cowl grille. (See [COWL GRILLE REMOVAL/ INSTALLATION](#).)
4. Remove the cover, and remove the bolt.

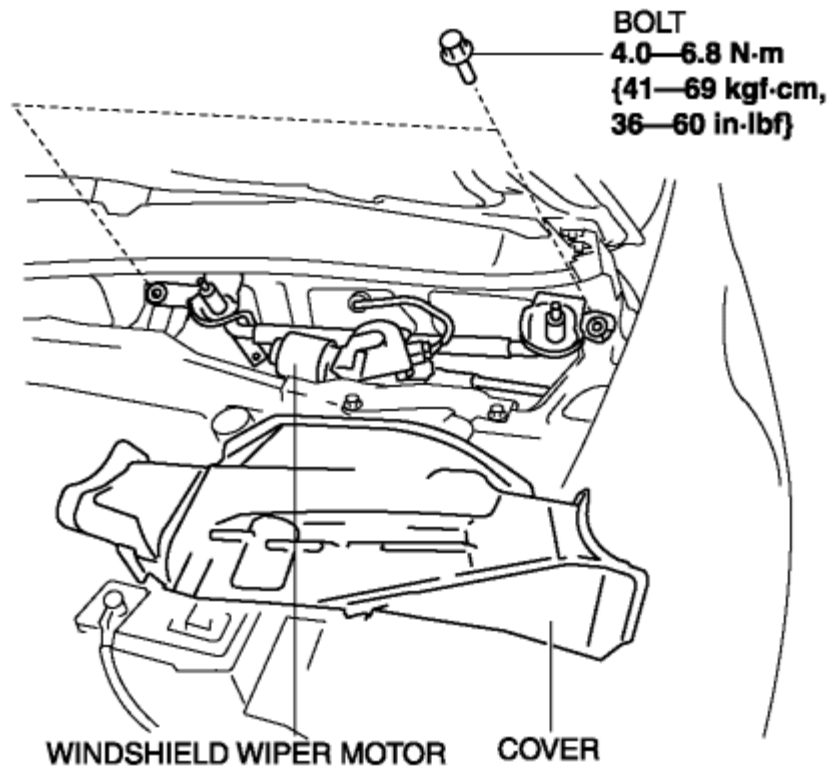


5. Remove the windshield wiper motor.
6. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

WINDSHIELD WIPER MOTOR REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the windshield wiper arm and blade. (See [WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION](#).)
3. Remove the cowl grille. (See [COWL GRILLE REMOVAL/ INSTALLATION](#).)
4. Remove the cover, and remove the bolt.

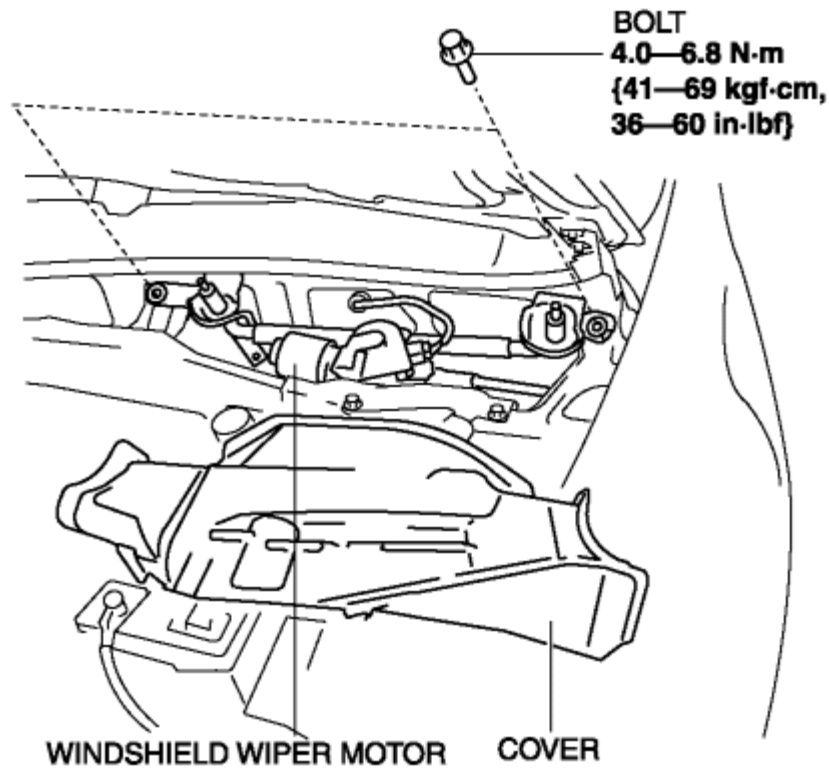

5. Remove the windshield wiper motor.
6. Install in the reverse order of removal.