


2012 - Mazda6 - Body and Accessories

WINDSHIELD WIPER MOTOR DISASSEMBLY/ ASSEMBLY

- 1. Disassemble in the order indicated in the table.
- 2. Assemble in the reverse order of disassembly.

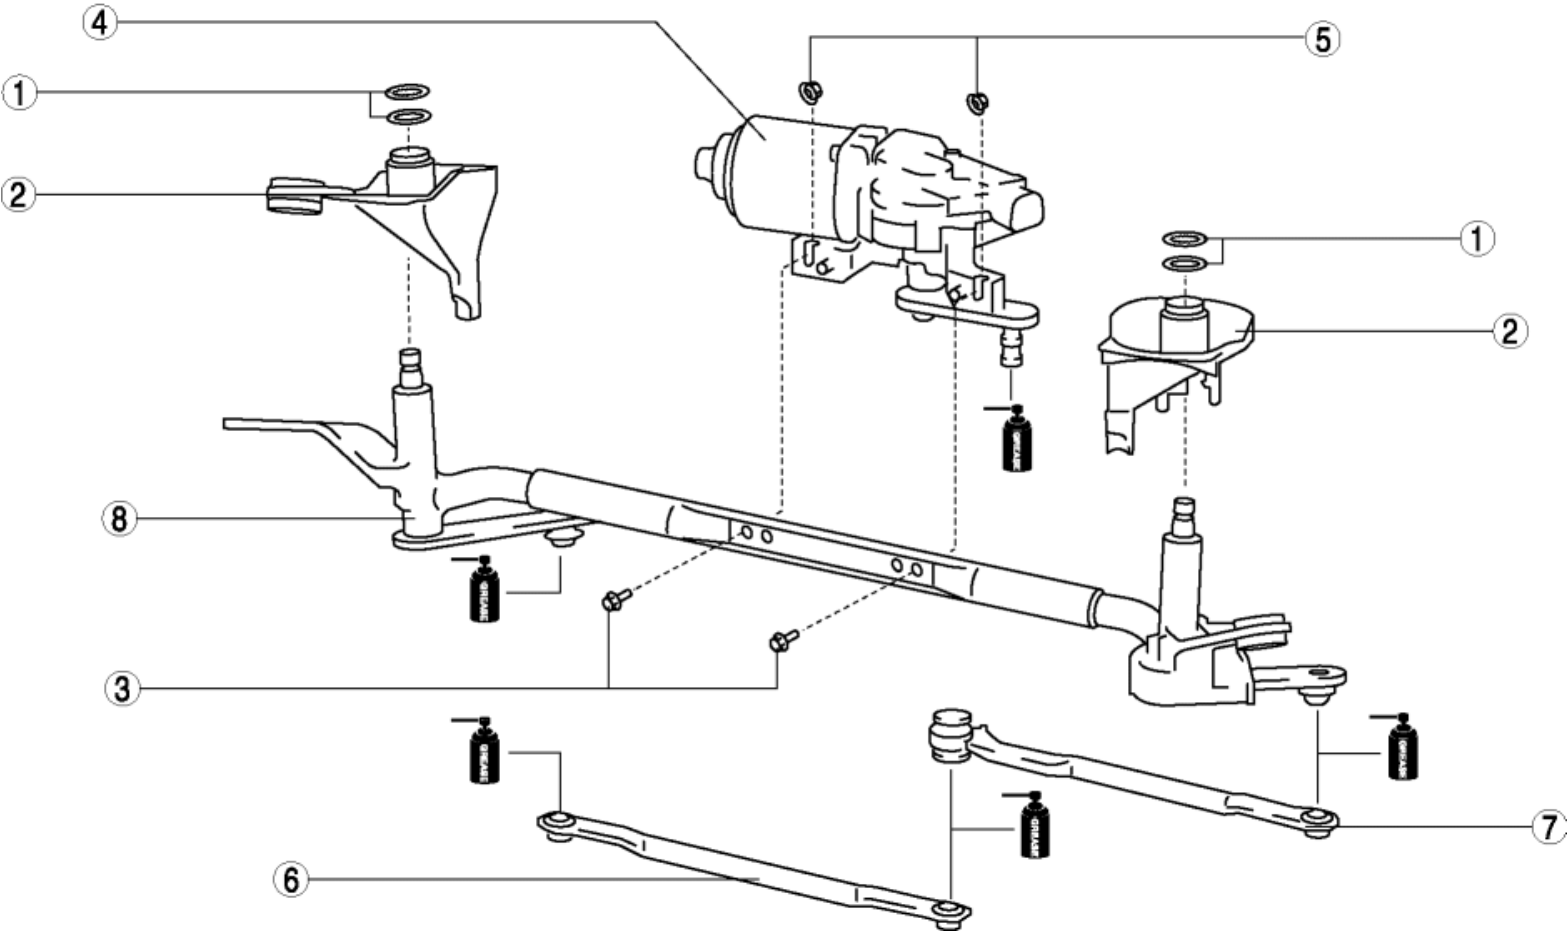


1	Washer
2	Cover
3	Bolt
4	Windshield wiper motor (See Windshield Wiper Motor Assembly Note.)
5	Nut
6	Wiper link No. 1 (See Ball Joint Assembly Note.)

7	Wiper link No. 2 (See Ball Joint Assembly Note.)
8	Main link (See Ball Joint Assembly Note.)


Ball Joint Assembly Note

1. Use a clean cloth to protect the link, and squeeze using pliers.

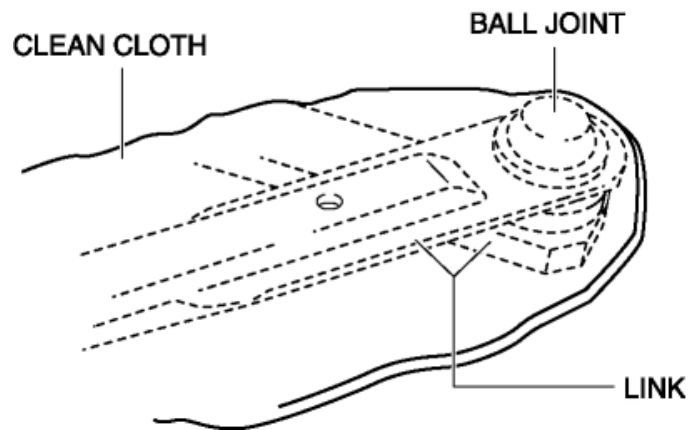

Windshield Wiper Motor Assembly Note

1. Connect the windshield wiper motor to the vehicle wiring harness connector, operate the windshield wipers, and then stop them at the auto-stop position.
2. Adjust the motor crank and wiper link No.1 so that they are parallel as shown in the figure.

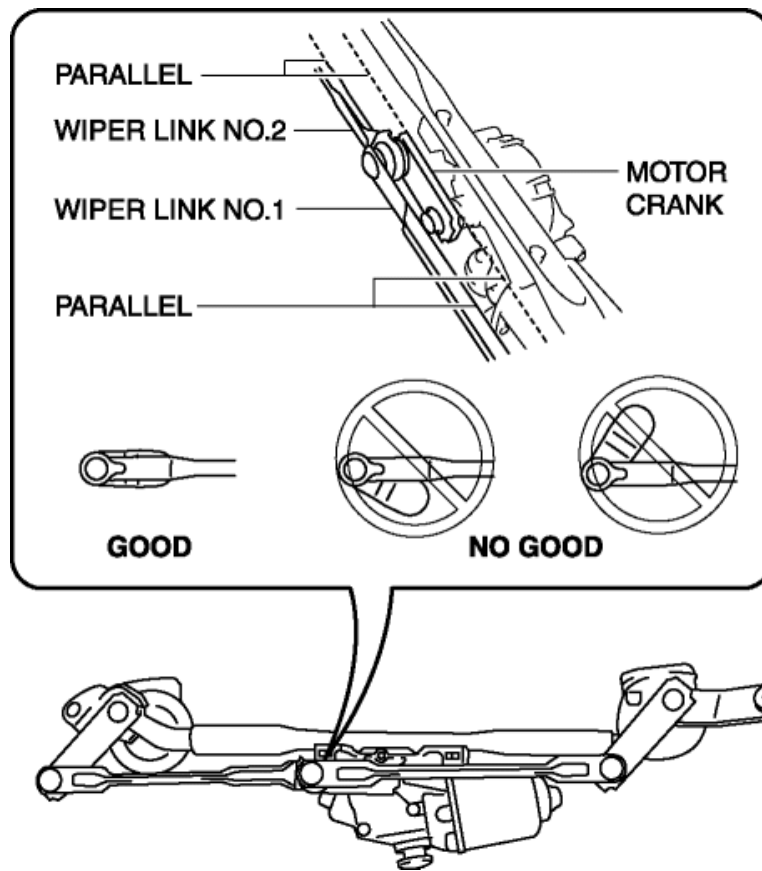

3. Assemble the windshield wiper motor.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

WINDSHIELD WIPER MOTOR DISASSEMBLY/ ASSEMBLY

- 1. Disassemble in the order indicated in the table.
- 2. Assemble in the reverse order of disassembly.

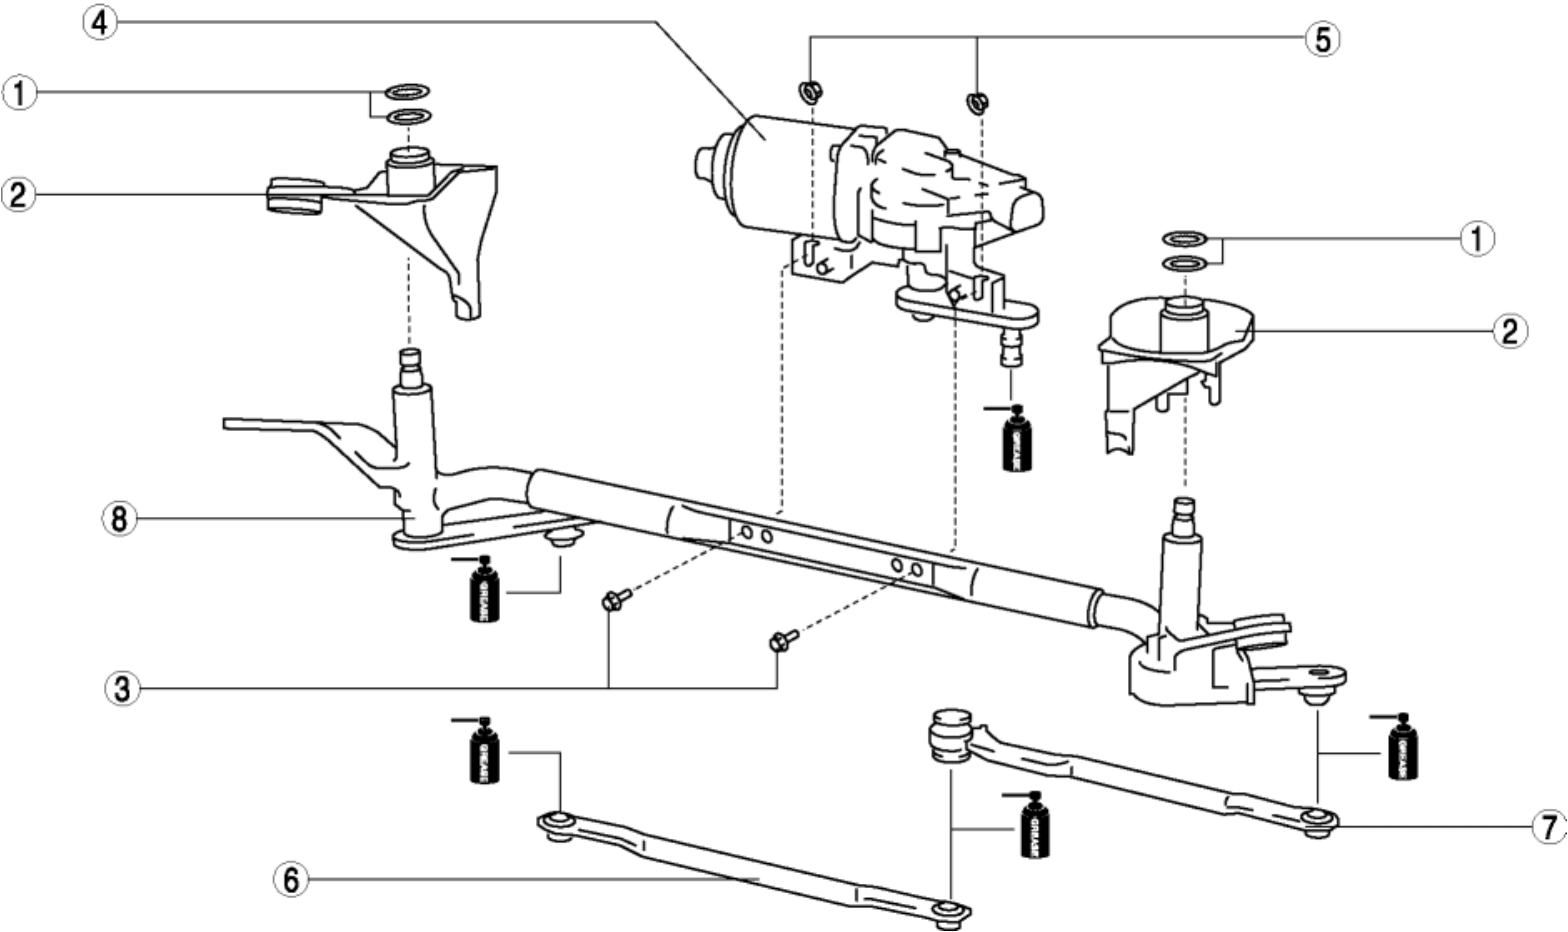


1	Washer
2	Cover
3	Bolt
4	Windshield wiper motor (See Windshield Wiper Motor Assembly Note.)
5	Nut
6	Wiper link No. 1 (See Ball Joint Assembly Note.)

7	Wiper link No. 2 (See Ball Joint Assembly Note.)
8	Main link (See Ball Joint Assembly Note.)


Ball Joint Assembly Note

1. Use a clean cloth to protect the link, and squeeze using pliers.

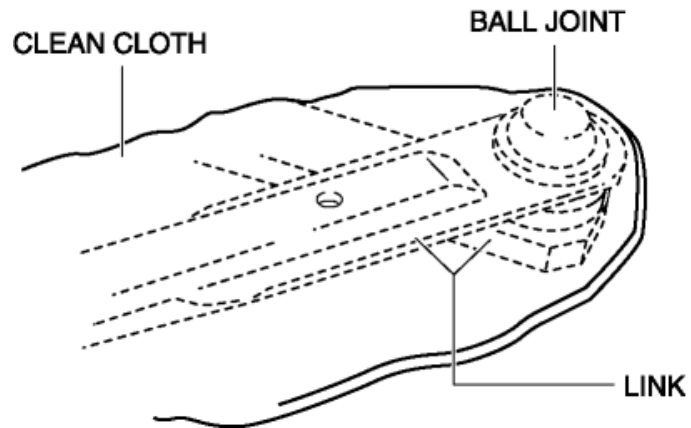

Windshield Wiper Motor Assembly Note

1. Connect the windshield wiper motor to the vehicle wiring harness connector, operate the windshield wipers, and then stop them at the auto-stop position.
2. Adjust the motor crank and wiper link No.1 so that they are parallel as shown in the figure.

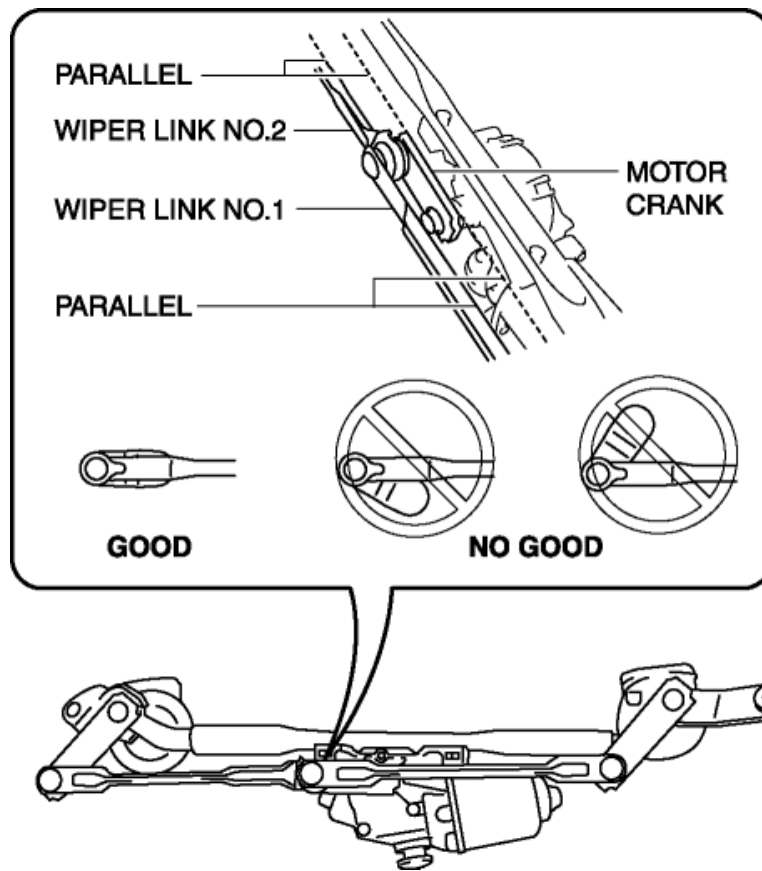

3. Assemble the windshield wiper motor.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)