


2012 - Mazda6 - Body and Accessories

WINDSHIELD WIPER MOTOR INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the windshield wiper arm and blade. (See [WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION.](#))
- 3. Remove the cowl grille. (See [COWL GRILLE REMOVAL/ INSTALLATION.](#))
- 4. Remove the cover. (See [WINDSHIELD WIPER MOTOR REMOVAL/ INSTALLATION.](#))
- 5. Disconnect the windshield wiper motor connector.
- 6. Connect battery positive voltage to windshield wiper motor terminal A or B, and ground to terminal D, then verify that the windshield wipers operate as shown in the table.

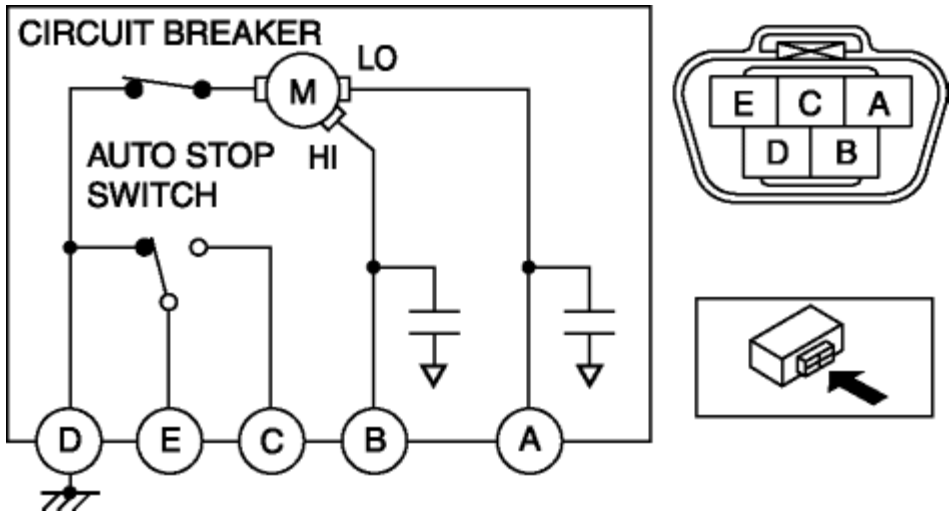

- If the windshield wipers do not operate as indicated in the table, replace the windshield wiper motor. (See [WINDSHIELD WIPER MOTOR REMOVAL/ INSTALLATION.](#)) (See [WINDSHIELD WIPER MOTOR DISASSEMBLY/ ASSEMBLY.](#))

Terminal connected to battery positive voltage	Operation condition
A	LO
B	HI

- 7. Disconnect battery positive voltage from the motor terminal A or B while the wipers are operating.

8. Verify that the wipers do not stop in the park position.
9. Short between the motor terminals A and E, and connect battery positive voltage to the motor terminal C.
10. Verify that the wipers operate at low speed again, then stop in the park position.
 - If there is any malfunction, replace the windshield wiper motor. (See [WINDSHIELD WIPER MOTOR REMOVAL/ INSTALLATION.](#)) (See [WINDSHIELD WIPER MOTOR DISASSEMBLY/ ASSEMBLY.](#))

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

WINDSHIELD WIPER MOTOR INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the windshield wiper arm and blade. (See [WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION.](#))
- 3. Remove the cowl grille. (See [COWL GRILLE REMOVAL/ INSTALLATION.](#))
- 4. Remove the cover. (See [WINDSHIELD WIPER MOTOR REMOVAL/ INSTALLATION.](#))
- 5. Disconnect the windshield wiper motor connector.
- 6. Connect battery positive voltage to windshield wiper motor terminal A or B, and ground to terminal D, then verify that the windshield wipers operate as shown in the table.

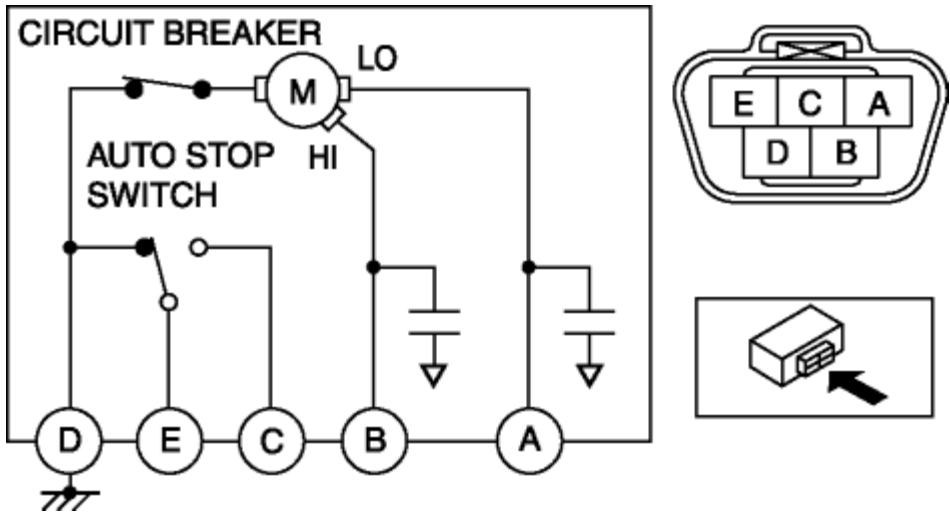

- If the windshield wipers do not operate as indicated in the table, replace the windshield wiper motor. (See [WINDSHIELD WIPER MOTOR REMOVAL/ INSTALLATION.](#)) (See [WINDSHIELD WIPER MOTOR DISASSEMBLY/ ASSEMBLY.](#))

Terminal connected to battery positive voltage	Operation condition
A	LO
B	HI

- 7. Disconnect battery positive voltage from the motor terminal A or B while the wipers are operating.

8. Verify that the wipers do not stop in the park position.
9. Short between the motor terminals A and E, and connect battery positive voltage to the motor terminal C.
10. Verify that the wipers operate at low speed again, then stop in the park position.
 - If there is any malfunction, replace the windshield wiper motor. (See [WINDSHIELD WIPER MOTOR REMOVAL/ INSTALLATION.](#)) (See [WINDSHIELD WIPER MOTOR DISASSEMBLY/ ASSEMBLY.](#))

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.