


2012 - Mazda6 - Body and Accessories

WASHER TANK REMOVAL/ INSTALLATION

- 1. Disconnect the negative battery cable.
- 2. Remove the front bumper. (See FRONT BUMPER REMOVAL/ INSTALLATION.)
- 3. Remove in the order indicated in the table.

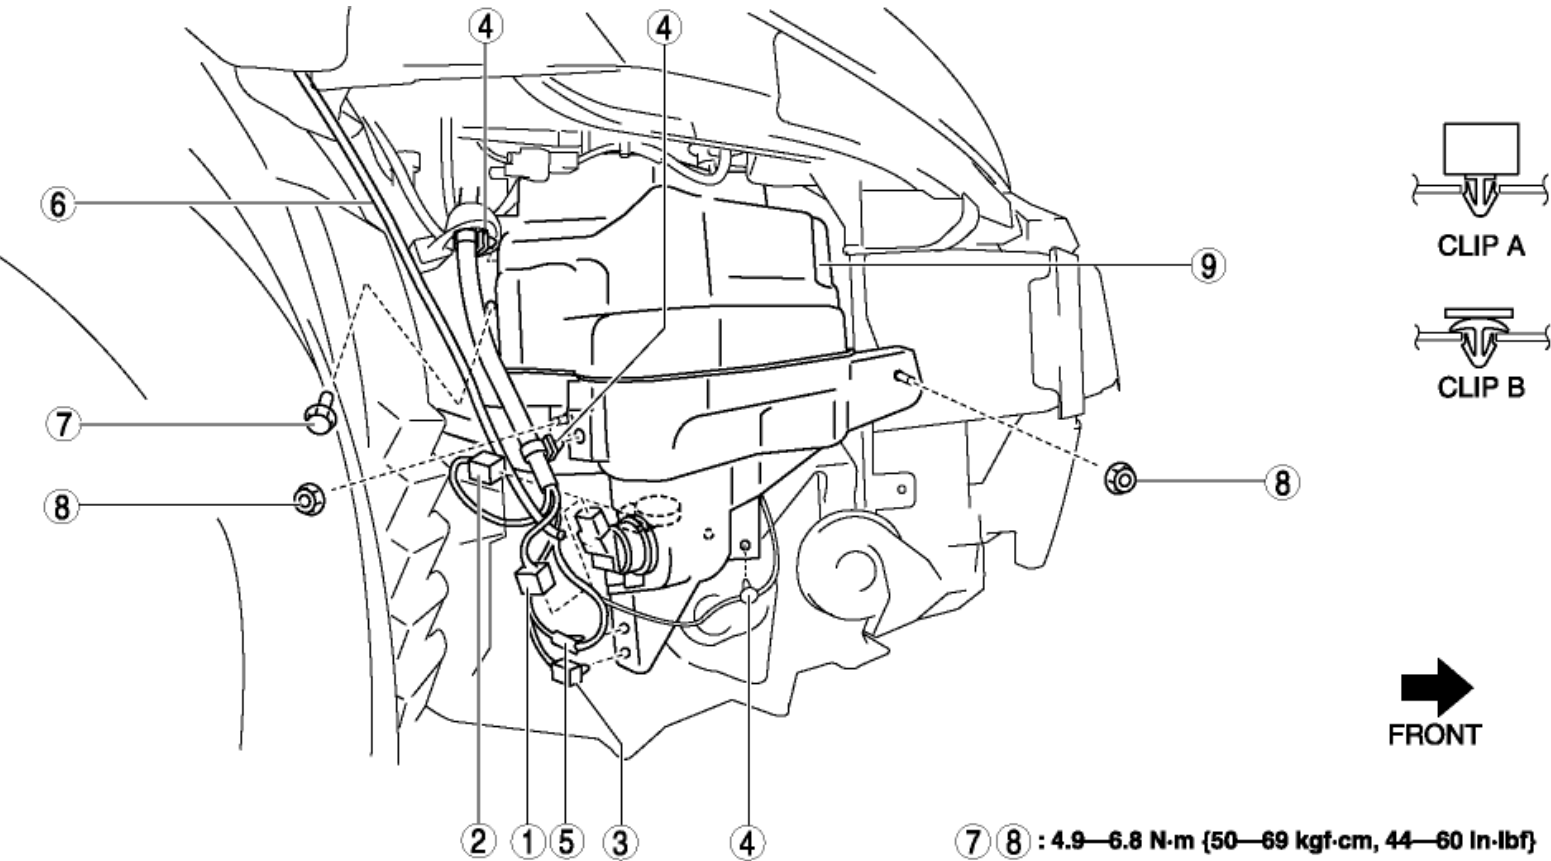

1	Windshield washer motor connector
2	Washer fluid-level sensor connector
3	Vehicle's connector
4	Clip B
5	Clip A
6	Windshield washer hose
7	Bolt
8	Nut

9 Washer tank

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)

2012 - Mazda6 - Body and Accessories

WASHER TANK REMOVAL/ INSTALLATION

- 1. Disconnect the negative battery cable.
- 2. Remove the front bumper. (See FRONT BUMPER REMOVAL/ INSTALLATION.)
- 3. Remove in the order indicated in the table.

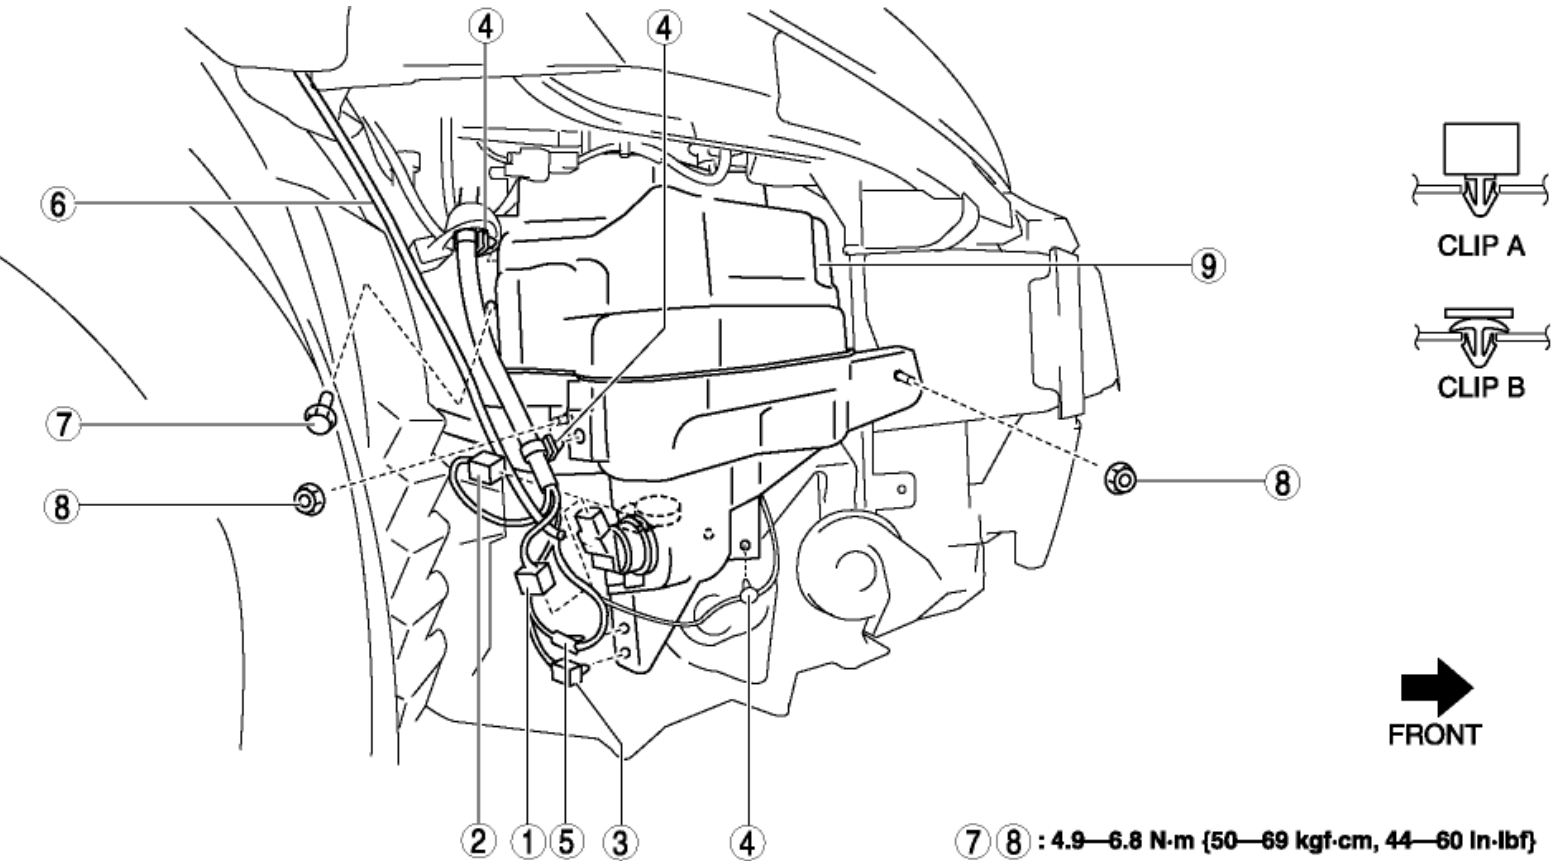

1	Windshield washer motor connector
2	Washer fluid-level sensor connector
3	Vehicles connector
4	Clip B
5	Clip A
6	Windshield washer hose
7	Bolt
8	Nut

9 Washer tank

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)