


## 2012 - Mazda6 - Body and Accessories

### WASHER FLUID-LEVEL SENSOR REMOVAL/ INSTALLATION

- 1. Disconnect the negative battery cable.
- 2. Remove the front bumper. (See [FRONT BUMPER REMOVAL/ INSTALLATION](#).)
- 3. Remove the washer tank. (See [WASHER TANK REMOVAL/ INSTALLATION](#).)
- 4. Remove in the order indicated in the table.

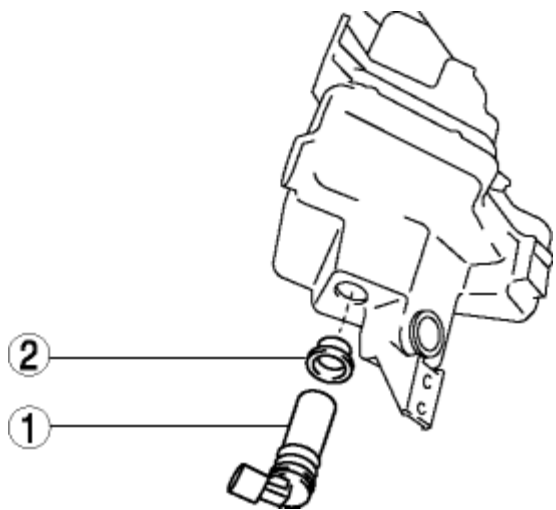


|   |                           |
|---|---------------------------|
| 1 | Washer fluid-level sensor |
| 2 | Grommet                   |

- 5. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

WASHER FLUID-LEVEL SENSOR REMOVAL/ INSTALLATION

- 1. Disconnect the negative battery cable.
- 2. Remove the front bumper. (See [FRONT BUMPER REMOVAL/ INSTALLATION.](#))
- 3. Remove the washer tank. (See [WASHER TANK REMOVAL/ INSTALLATION.](#))
- 4. Remove in the order indicated in the table.

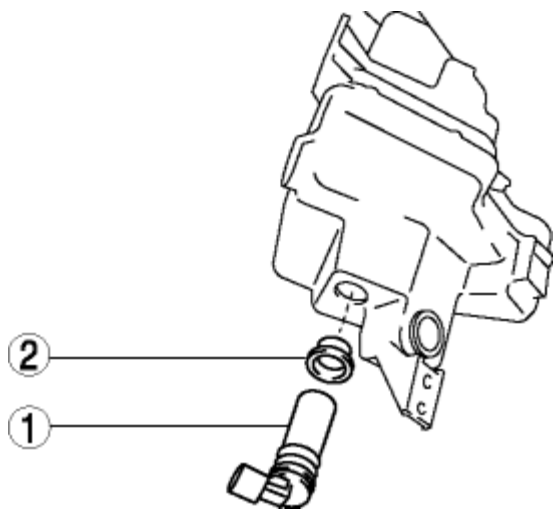

|   |                           |
|---|---------------------------|
| 1 | Washer fluid-level sensor |
| 2 | Grommet                   |

- 5. Install in the reverse order of removal.