


2012 - Mazda6 - Body and Accessories

WASHER FLUID-LEVEL SENSOR INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the front bumper. (See FRONT BUMPER REMOVAL/ INSTALLATION.)
- 3. Verify that continuity between the washer fluid-level sensor terminals is as indicated in the table.

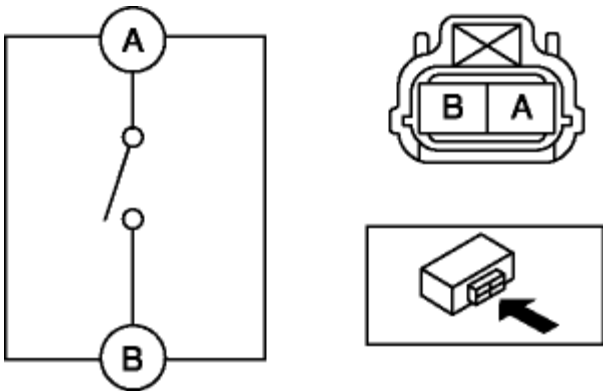

- If not as specified, replace the washer fluid-level sensor. (See WASHER FLUID-LEVEL SENSOR REMOVAL/ INSTALLATION.)


○ — ○ : Continuity

Fluid level	Terminal	
	A	B
Above low		
Below low	○ — ○	○ — ○

2012 - Mazda6 - Body and Accessories

WASHER FLUID-LEVEL SENSOR INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the front bumper. (See FRONT BUMPER REMOVAL/ INSTALLATION.)
- 3. Verify that continuity between the washer fluid-level sensor terminals is as indicated in the table.

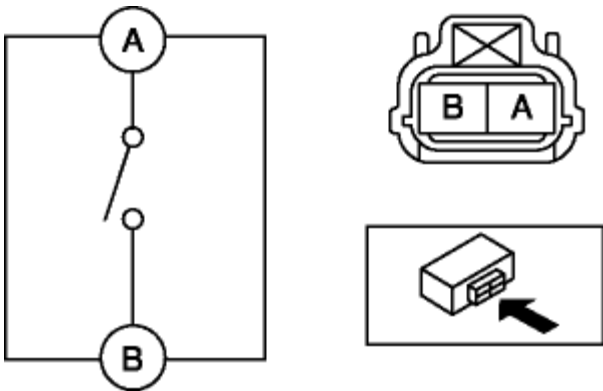

- If not as specified, replace the washer fluid-level sensor. (See WASHER FLUID-LEVEL SENSOR REMOVAL/ INSTALLATION.)

○ — ○ : Continuity

Fluid level	Terminal	
	A	B
Above low		
Below low	○ — ○	○ — ○