


2012 - Mazda6 - Body and Accessories

WINDSHIELD WASHER NOZZLE REMOVAL/ INSTALLATION

1. Remove the windshield wiper arm and blade. (See [WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION](#).)
2. Remove the cowl grille. (See [COWL GRILLE REMOVAL/ INSTALLATION](#).)
3. Remove the windshield washer hose from the windshield washer nozzle.
4. Squeeze the tabs of the windshield washer nozzle.
5. Pull the windshield washer nozzle out to remove it.

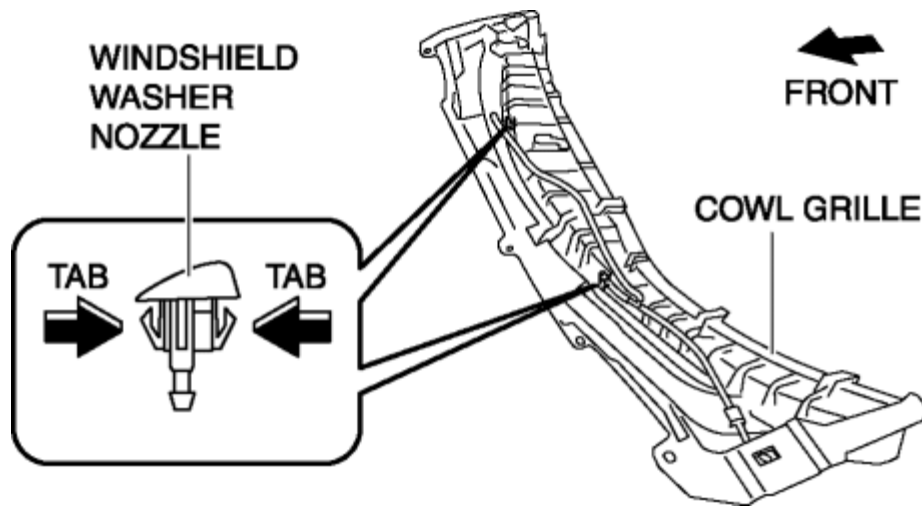


6. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

WINDSHIELD WASHER NOZZLE REMOVAL/ INSTALLATION

1. Remove the windshield wiper arm and blade. (See [WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION](#).)
2. Remove the cowl grille. (See [COWL GRILLE REMOVAL/ INSTALLATION](#).)
3. Remove the windshield washer hose from the windshield washer nozzle.
4. Squeeze the tabs of the windshield washer nozzle.
5. Pull the windshield washer nozzle out to remove it.

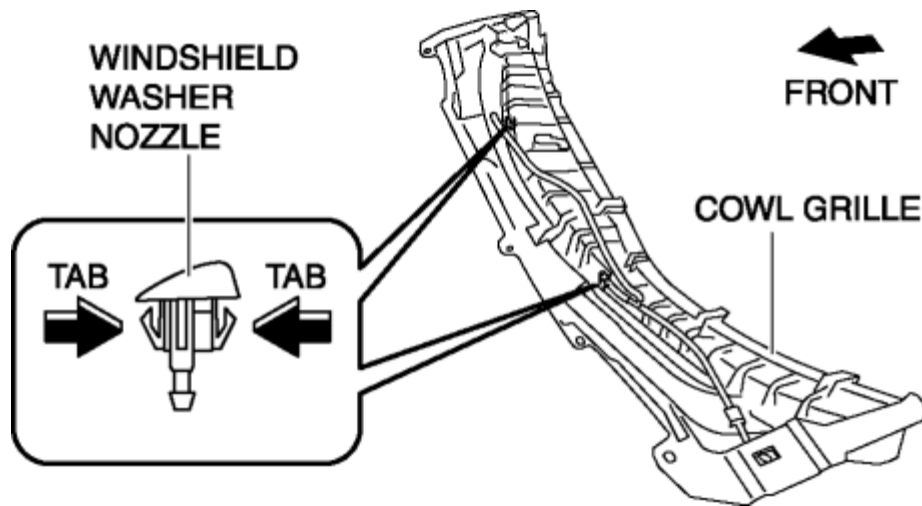

6. Install in the reverse order of removal.