


2012 - Mazda6 - Body and Accessories


WINDSHIELD WASHER HOSE REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the front mudguard (RH). (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
3. Disconnect the windshield washer hose A from the windshield washer motor.

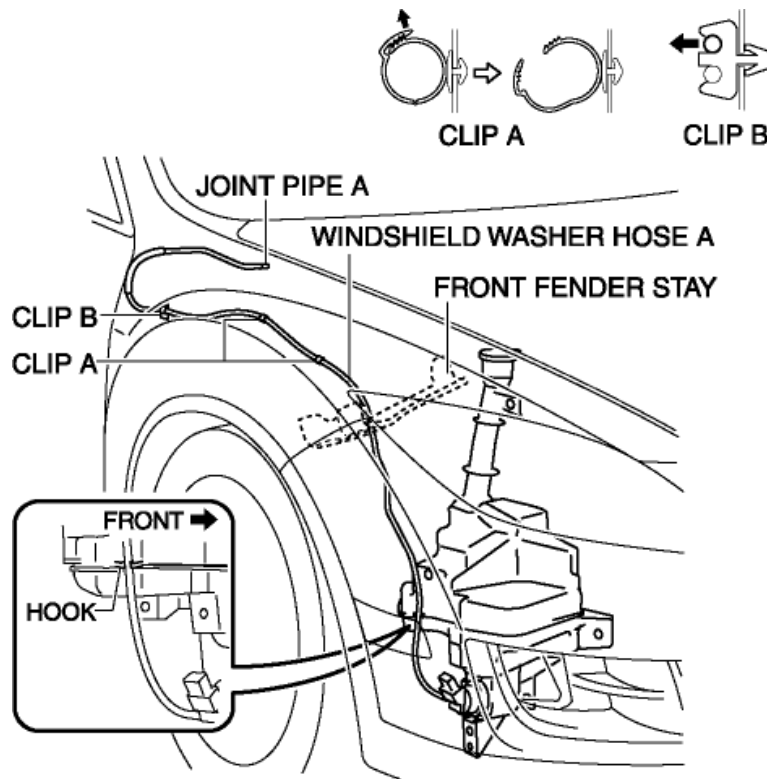

4. Remove the windshield washer hose A from the clip A, B.
5. Disconnect the windshield washer hose from the joint pipe A.
6. Remove the windshield washer hose A.
7. Remove the joint pipe A.
8. Remove the windshield wiper arm and blade. (See [WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION.](#))
9. Remove the cowl grille. (See [COWL GRILLE REMOVAL/ INSTALLATION.](#))
10. Disconnect the windshield washer hose B from the check valve.
11. Remove the windshield washer hose B.
12. Remove the check valve.
13. Disconnect windshield washer hose C from the joint pipe B.
14. Remove the windshield washer hose C.
15. Remove the joint pipe B.
16. Disconnect the windshield washer hose E from the windshield washer nozzle (RH).
17. Remove the windshield washer hose D.
18. Remove the windshield washer hose D from the hook.

19. Disconnect the windshield washer hose E from the joint pipe C.
20. Remove the windshield washer hose E.
21. Remove the joint pipe C.
22. Remove the windshield washer hose F from the hook.
23. Disconnect the windshield washer hose F from the windshield washer nozzle (LH).
24. Remove the windshield washer hose F.

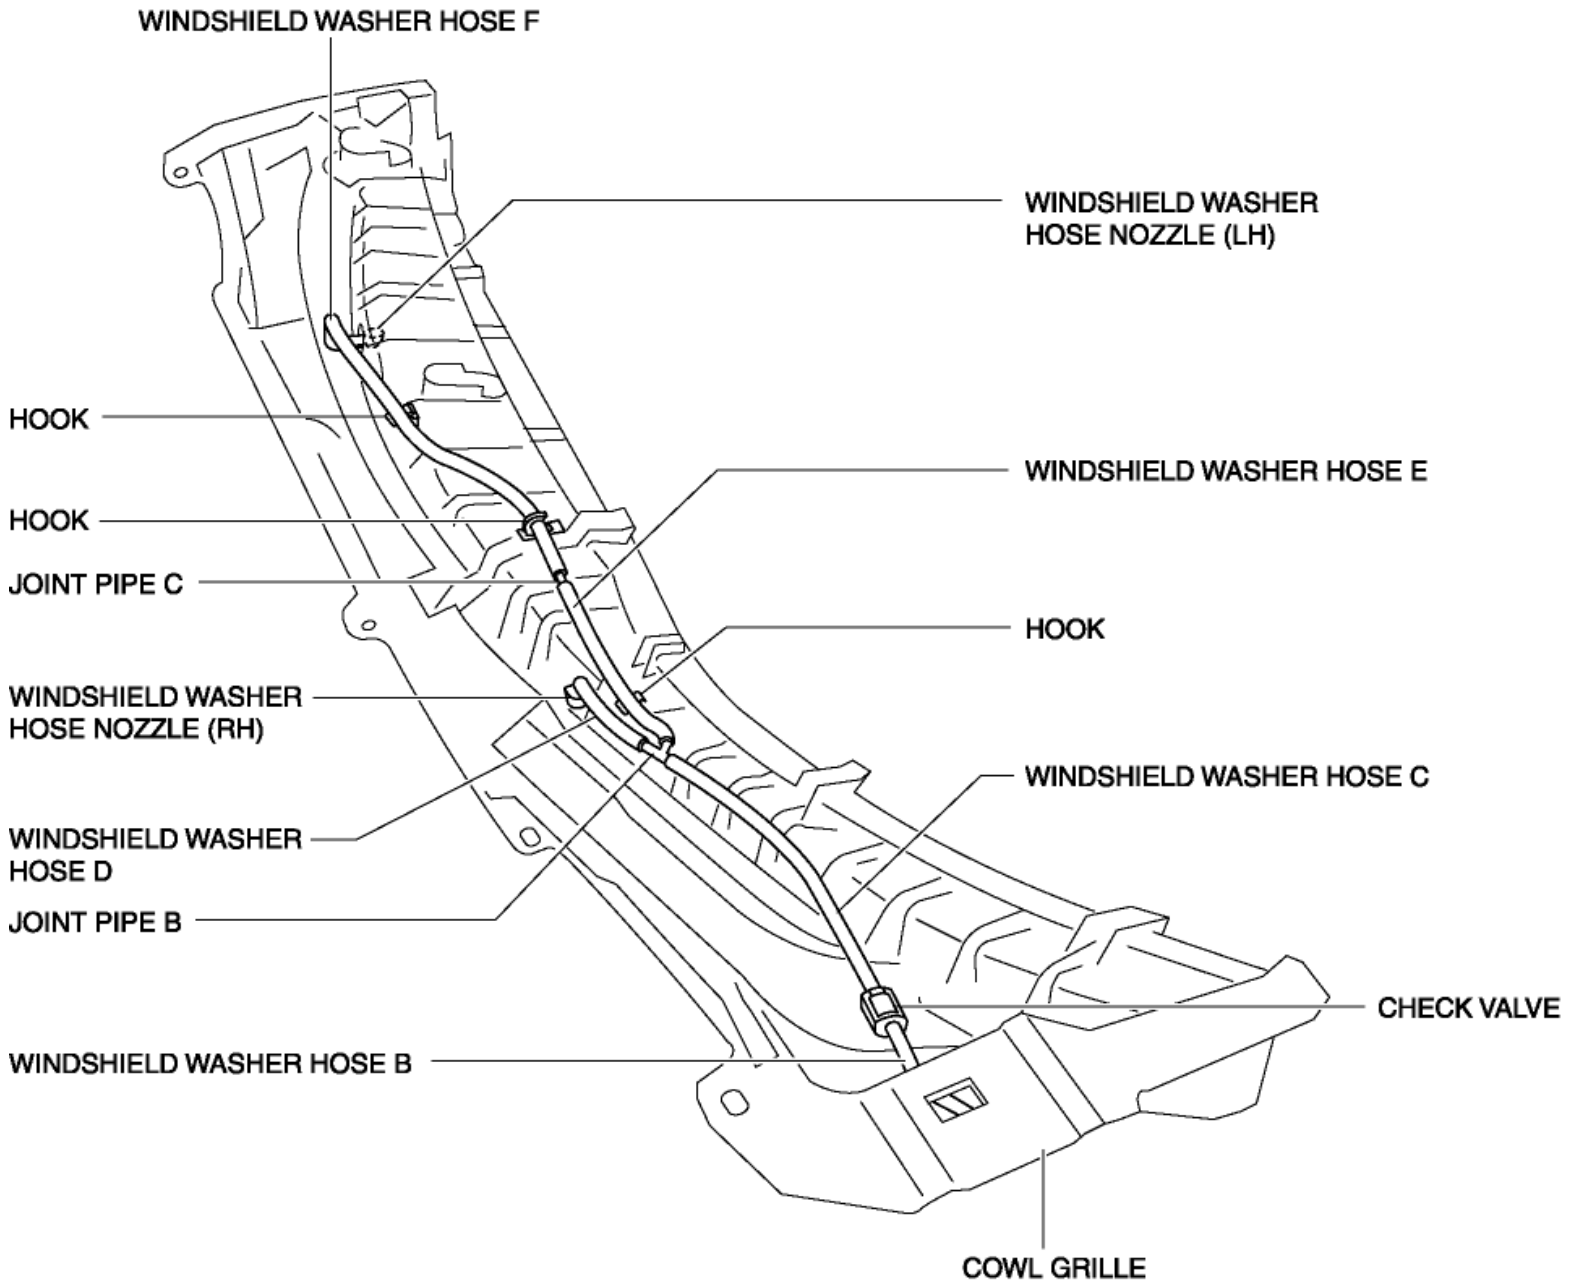


25. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories


WINDSHIELD WASHER HOSE REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the front mudguard (RH). (See [FRONT MUDGUARD REMOVAL/ INSTALLATION](#).)
3. Disconnect the windshield washer hose A from the windshield washer motor.

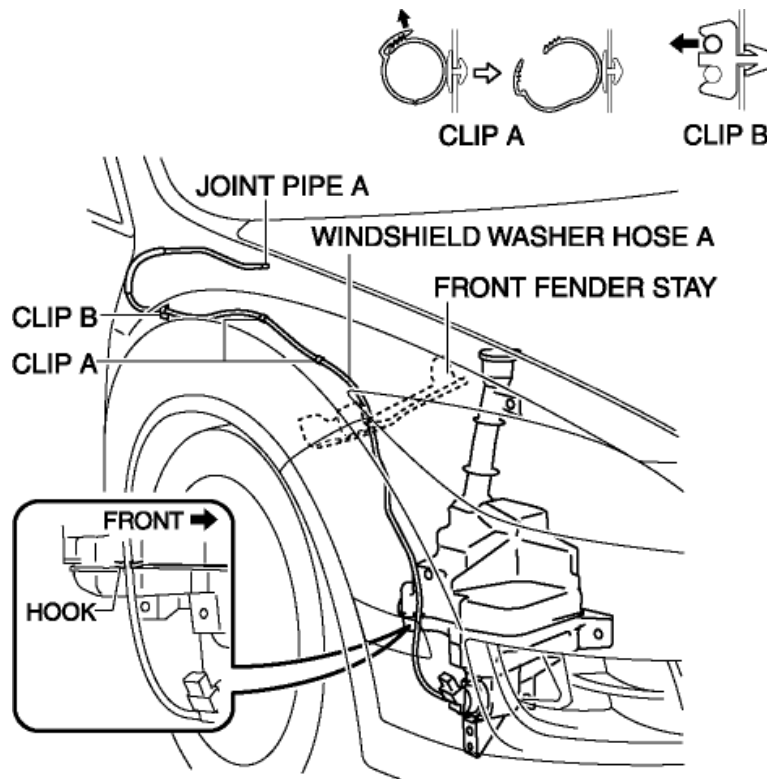

4. Remove the windshield washer hose A from the clip A, B.
5. Disconnect the windshield washer hose from the joint pipe A.
6. Remove the windshield washer hose A.
7. Remove the joint pipe A.
8. Remove the windshield wiper arm and blade. (See [WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION](#).)
9. Remove the cowl grille. (See [COWL GRILLE REMOVAL/ INSTALLATION](#).)
10. Disconnect the windshield washer hose B from the check valve.
11. Remove the windshield washer hose B.
12. Remove the check valve.
13. Disconnect windshield washer hose C from the joint pipe B.
14. Remove the windshield washer hose C.
15. Remove the joint pipe B.
16. Disconnect the windshield washer hose E from the windshield washer nozzle (RH).
17. Remove the windshield washer hose D.
18. Remove the windshield washer hose D from the hook.

19. Disconnect the windshield washer hose E from the joint pipe C.
20. Remove the windshield washer hose E.
21. Remove the joint pipe C.
22. Remove the windshield washer hose F from the hook.
23. Disconnect the windshield washer hose F from the windshield washer nozzle (LH).
24. Remove the windshield washer hose F.

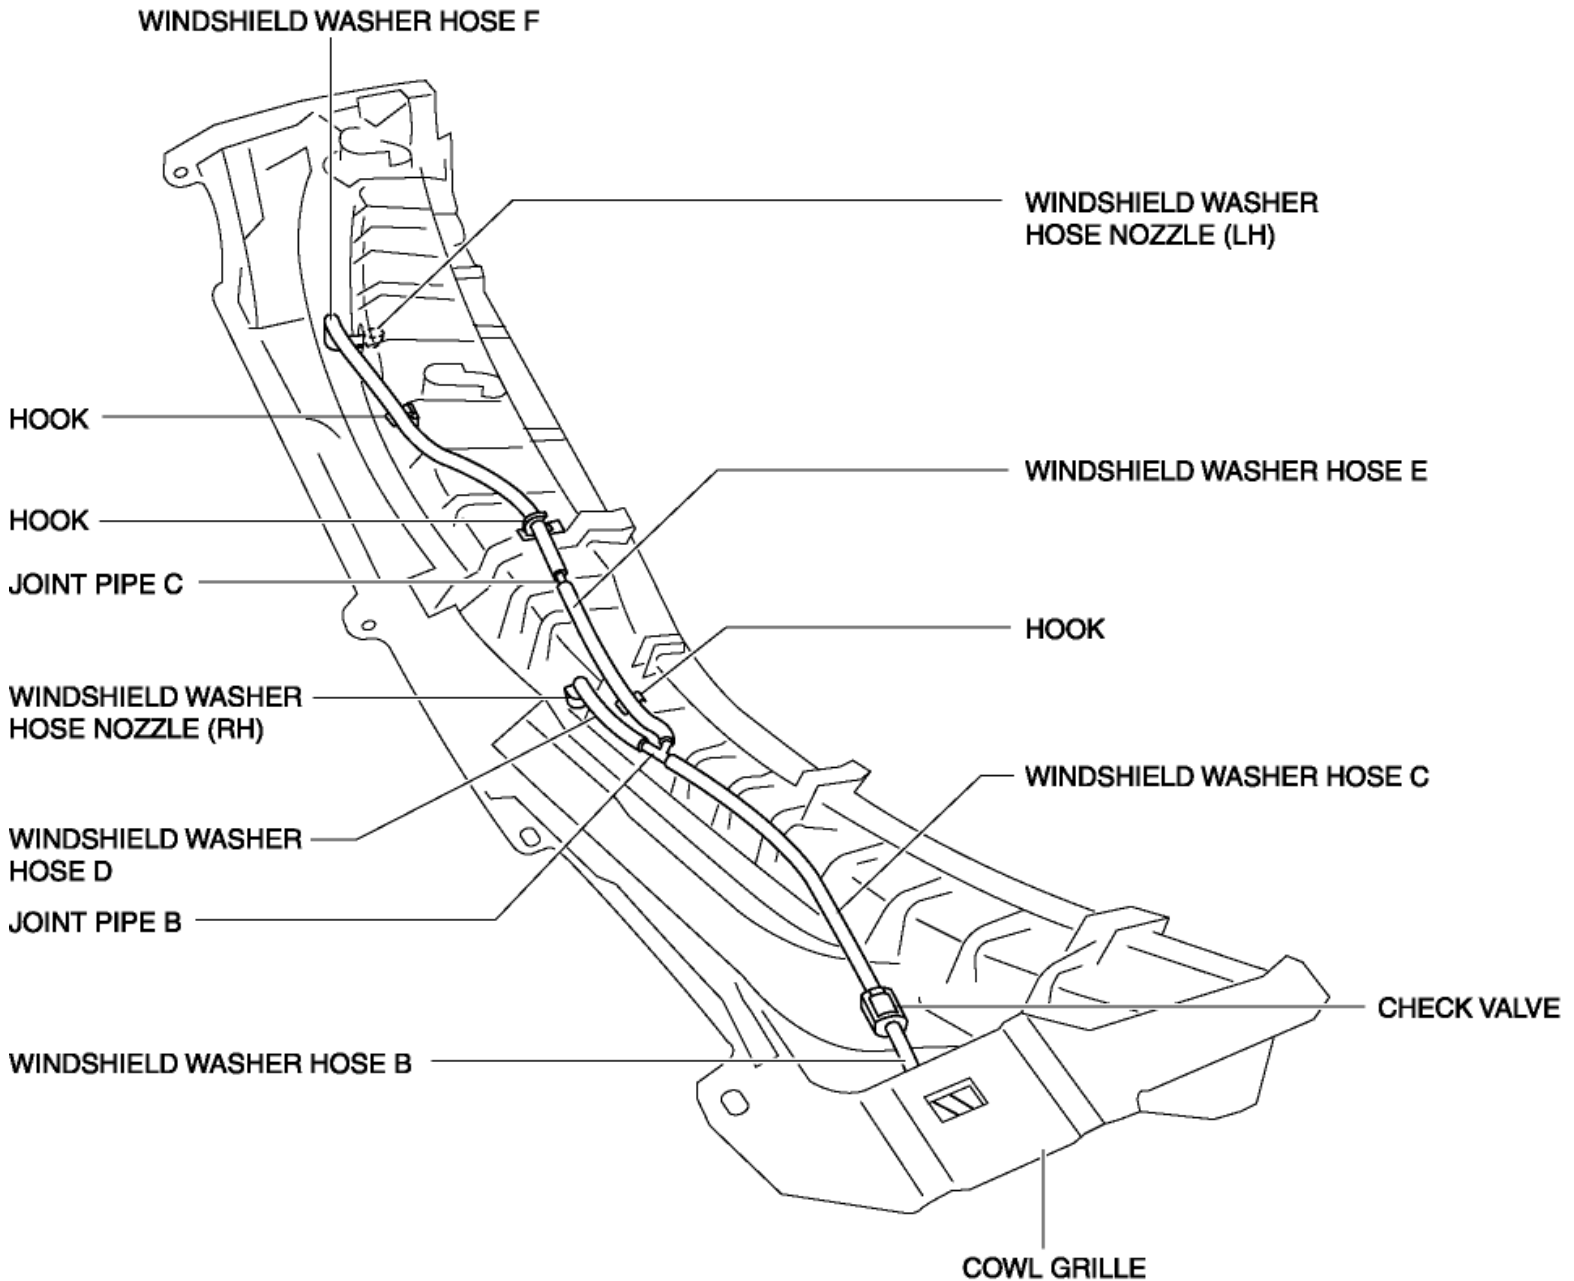

25. Install in the reverse order of removal.