


2012 - Mazda6 - Body and Accessories

WINDSHIELD WASHER MOTOR REMOVAL/ INSTALLATION

- 1. Disconnect the negative battery cable.
- 2. Remove the front mudguard (RH). (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
- 3. Remove in the order indicated in the table.

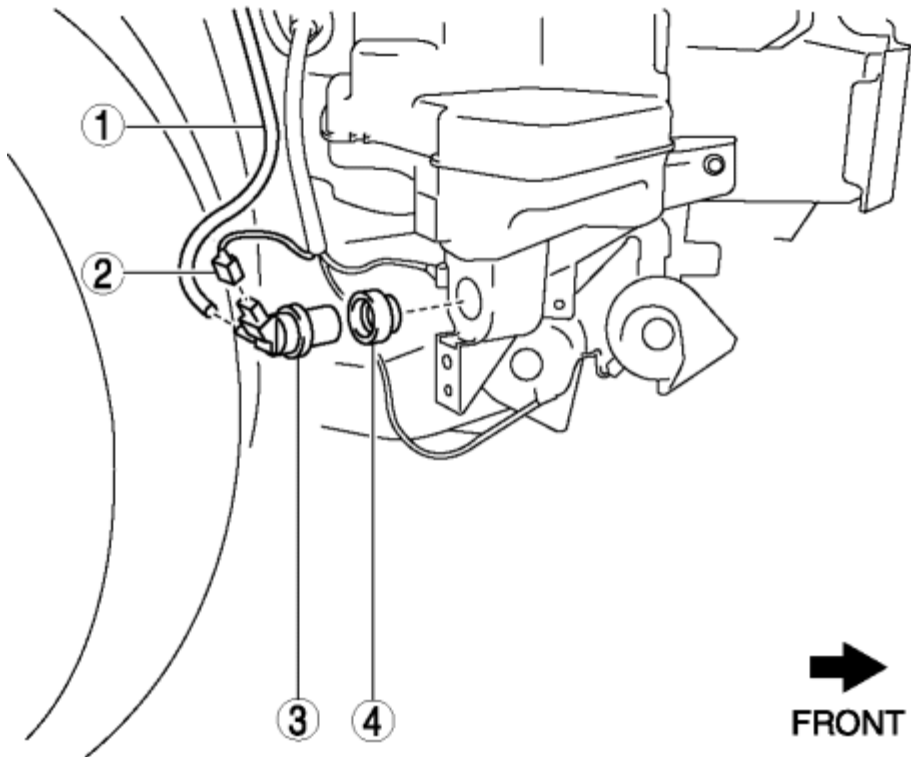


1	Windshield washer hose
2	Windshield washer motor connector
3	Windshield washer motor
4	Grommet

- 4. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

WINDSHIELD WASHER MOTOR REMOVAL/ INSTALLATION

- 1. Disconnect the negative battery cable.
- 2. Remove the front mudguard (RH). (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
- 3. Remove in the order indicated in the table.

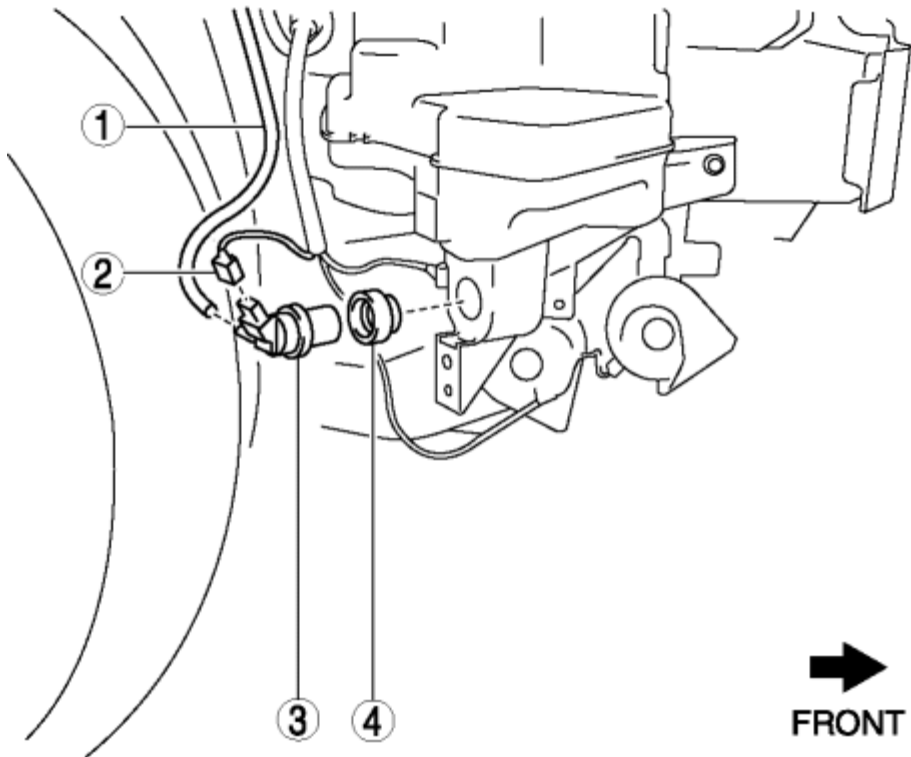

1	Windshield washer hose
2	Windshield washer motor connector
3	Windshield washer motor
4	Grommet

- 4. Install in the reverse order of removal.

