


2012 - Mazda6 - Body and Accessories

WINDSHIELD WASHER MOTOR INSPECTION

1. Disconnect the negative battery cable.
2. Remove the front mudguard (RH). (See [FRONT MUDGUARD REMOVAL/ INSTALLATION](#).)
3. Disconnect the windshield washer motor connector.
4. After connecting washer motor terminal A to the positive battery terminal, and terminal B to the negative battery terminal, verify that washer fluid flows to the windshield washer hose.

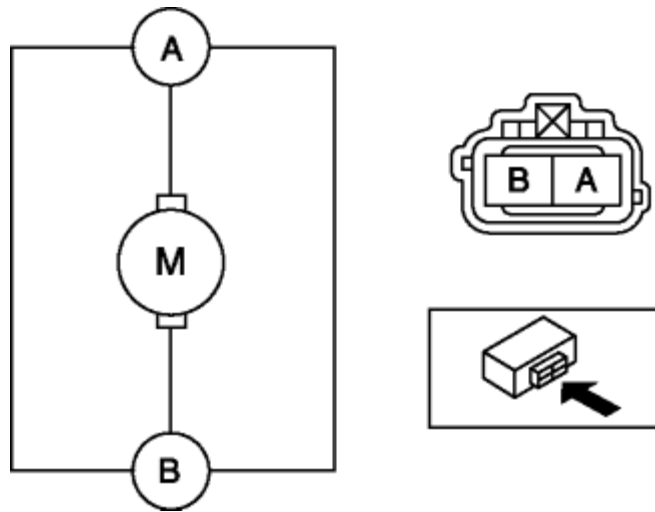


- If there is any malfunction, replace the windshield washer motor. (See [WINDSHIELD WASHER MOTOR REMOVAL/ INSTALLATION](#).)

2012 - Mazda6 - Body and Accessories

WINDSHIELD WASHER MOTOR INSPECTION

1. Disconnect the negative battery cable.
2. Remove the front mudguard (RH). (See [FRONT MUDGUARD REMOVAL/ INSTALLATION](#).)
3. Disconnect the windshield washer motor connector.
4. After connecting washer motor terminal A to the positive battery terminal, and terminal B to the negative battery terminal, verify that washer fluid flows to the windshield washer hose.

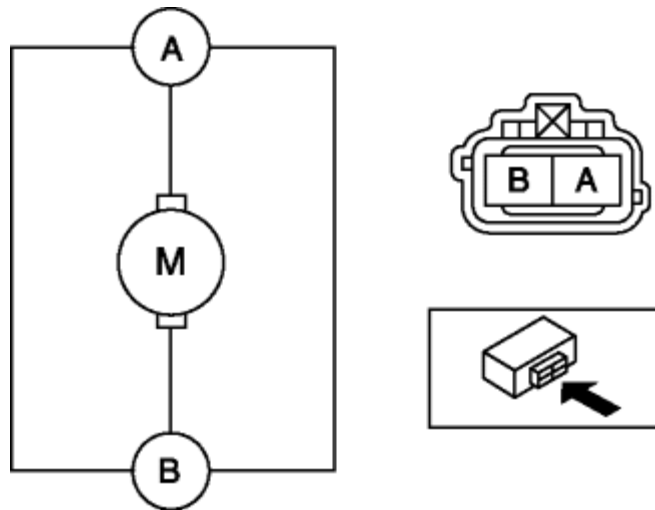

- If there is any malfunction, replace the windshield washer motor. (See [WINDSHIELD WASHER MOTOR REMOVAL/ INSTALLATION](#).)