


2012 - Mazda6 - Body and Accessories

ENTERTAINMENT LOCATION INDEX

Audio system

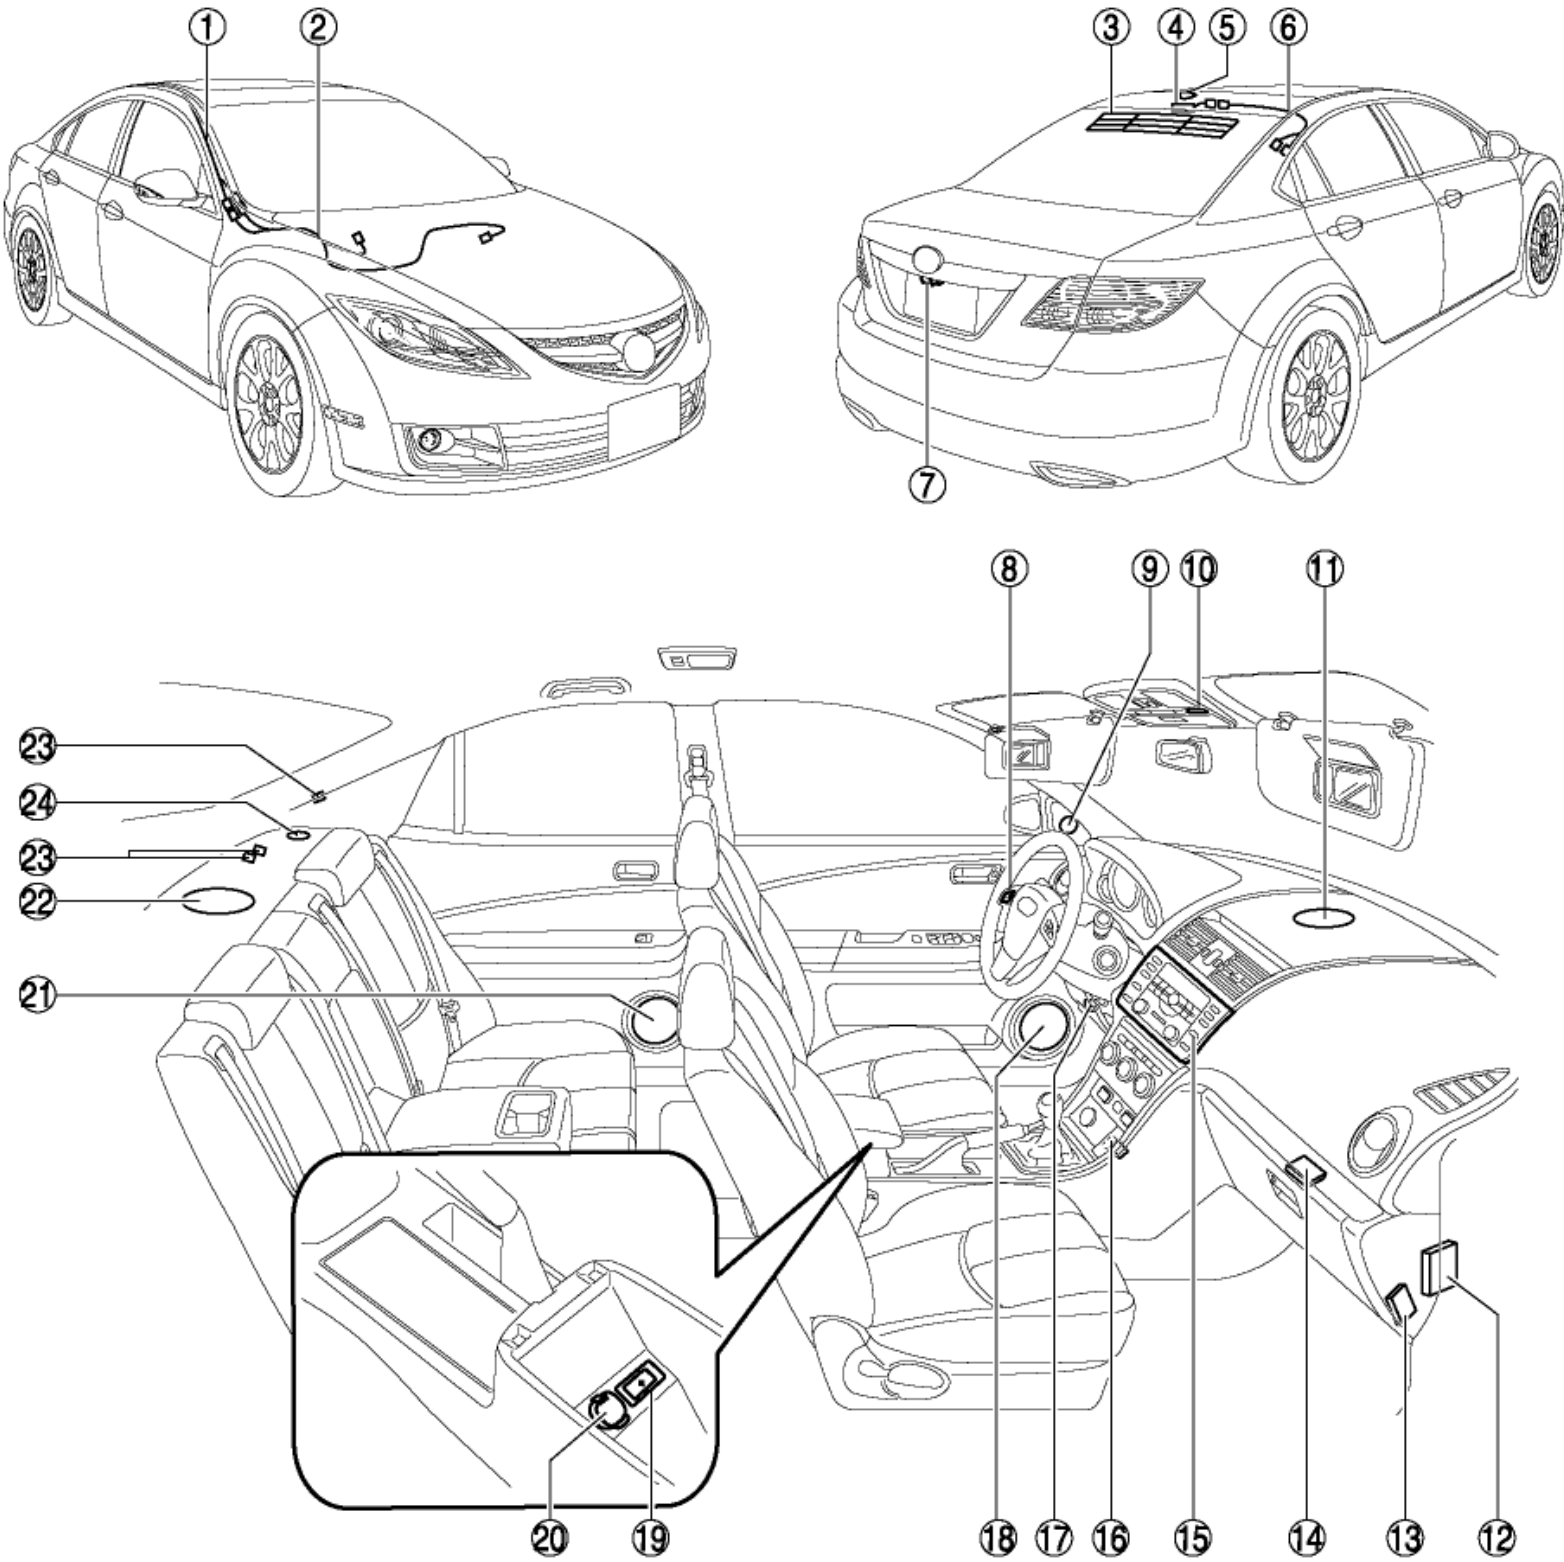

1	Antenna feeder No.2 (See ANTENNA FEEDER LOCATION.) (See ANTENNA FEEDER NO.2 REMOVAL/ INSTALLATION.) (See ANTENNA FEEDER NO.2 INSPECTION.)
2	Antenna feeder No.1 (See ANTENNA FEEDER LOCATION.) (See ANTENNA FEEDER NO.1 REMOVAL/ INSTALLATION.) (See ANTENNA FEEDER NO.1 INSPECTION.)
3	Glass antenna (See GLASS ANTENNA INSPECTION.)
4	Antenna amplifier (See ANTENNA AMPLIFIER REMOVAL/ INSTALLATION.) (See ANTENNA AMPLIFIER INSPECTION.)
5	SIRIUS satellite radio antenna (with SIRIUS satellite radio system) (See SIRIUS SATELLITE RADIO ANTENNA REMOVAL/ INSTALLATION.) (See SIRIUS SATELLITE RADIO ANTENNA INSPECTION.)
6	Antenna feeder No.3 (See ANTENNA FEEDER LOCATION.) (See ANTENNA FEEDER NO.3 REMOVAL/ INSTALLATION.) (See ANTENNA FEEDER NO.3 INSPECTION.)
7	Rear mount camera (with audio unit (with display)) (See REAR MOUNT CAMERA REMOVAL/ INSTALLATION.)
8	Steering switch (See STEERING SWITCH REMOVAL/ INSTALLATION.) (See STEERING SWITCH INSPECTION.)
9	Tweeter (See TWEETER REMOVAL/ INSTALLATION.) (See TWEETER INSPECTION.)
10	Microphone (with Bluetooth system) (See MICROPHONE REMOVAL/ INSTALLATION.)
11	Front center speaker (with Bose®) (See FRONT CENTER SPEAKER REMOVAL/ INSTALLATION.)

	(See FRONT CENTER SPEAKER INSPECTION .)
12	Audio amplifier (with Bose®) (See AUDIO AMPLIFIER REMOVAL/ INSTALLATION .)
13	Bluetooth unit (with Bluetooth system) (See Bluetooth UNIT REMOVAL/ INSTALLATION .)
14	SIRIUS satellite radio unit (with SIRIUS satellite radio system) (See SIRIUS SATELLITE RADIO UNIT REMOVAL/ INSTALLATION .)
15	Audio unit (See AUDIO UNIT REMOVAL/ INSTALLATION .) (See ENTERTAINMENT PERSONALIZATION FEATURES SETTING PROCEDURE .)
16	Accessory socket (front) (See ACCESSORY SOCKET REMOVAL/ INSTALLATION .) (See ACCESSORY SOCKET INSPECTION .)
17	AudioPilot® 2 microphone (with Bose®) (See AudioPilot® 2 MICROPHONE REMOVAL/ INSTALLATION .)
18	Front door speaker (See FRONT DOOR SPEAKER REMOVAL/ INSTALLATION .) (See FRONT DOOR SPEAKER INSPECTION .)
19	Auxiliary jack (See AUXILIARY JACK REMOVAL/ INSTALLATION .) (See AUXILIARY JACK INSPECTION .)
20	Accessory socket (rear) (See ACCESSORY SOCKET REMOVAL/ INSTALLATION .) (See ACCESSORY SOCKET INSPECTION .)
21	Rear door speaker (See REAR DOOR SPEAKER REMOVAL/ INSTALLATION .) (See REAR DOOR SPEAKER INSPECTION .)
22	Rear center speaker (with Bose®) (See REAR CENTER SPEAKER REMOVAL/ INSTALLATION .) (See REAR CENTER SPEAKER INSPECTION .)
23	Condenser


(See **CONDENSER REMOVAL/ INSTALLATION.**)

24 Rear speaker (with Bose®)

(See **REAR SPEAKER REMOVAL/ INSTALLATION.**)

(See **REAR SPEAKER INSPECTION.**)

Car-navigation system

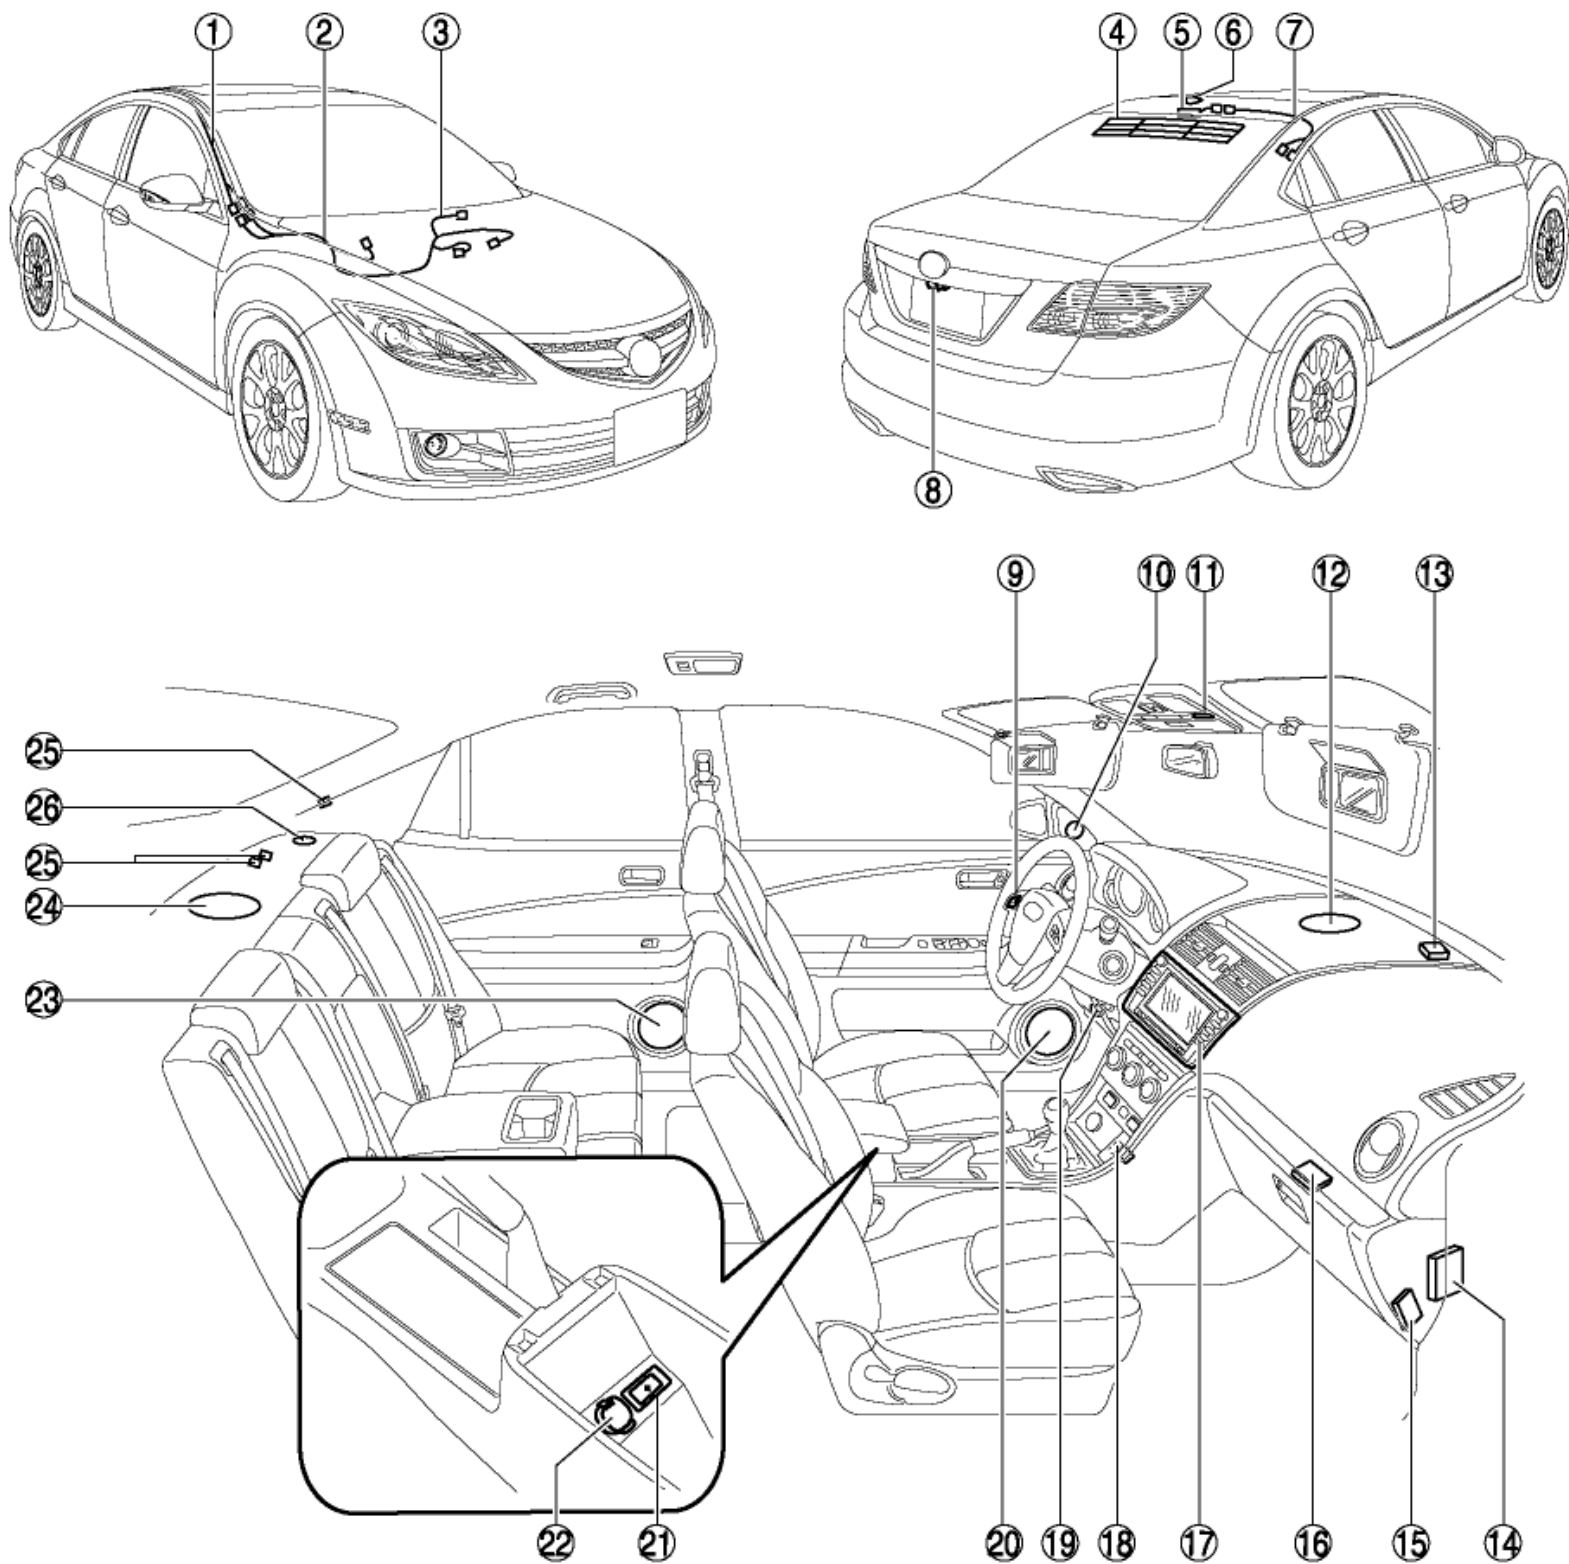

1	Antenna feeder No.2 (See ANTENNA FEEDER LOCATION.) (See ANTENNA FEEDER NO.2 REMOVAL/ INSTALLATION.) (See ANTENNA FEEDER NO.2 INSPECTION.)
2	Antenna feeder No.1 (See ANTENNA FEEDER LOCATION.) (See ANTENNA FEEDER NO.1 REMOVAL/ INSTALLATION.) (See ANTENNA FEEDER NO.1 INSPECTION.)
3	GPS antenna feeder (See ANTENNA FEEDER LOCATION.) (See GPS ANTENNA FEEDER REMOVAL/ INSTALLATION.) (See GPS ANTENNA FEEDER INSPECTION.)
4	Glass antenna (See GLASS ANTENNA INSPECTION.)
5	Antenna amplifier (See ANTENNA AMPLIFIER REMOVAL/ INSTALLATION.) (See ANTENNA AMPLIFIER INSPECTION.)
6	SIRIUS satellite radio antenna (See SIRIUS SATELLITE RADIO ANTENNA REMOVAL/ INSTALLATION.) (See SIRIUS SATELLITE RADIO ANTENNA INSPECTION.)
7	Antenna feeder No.3 (See ANTENNA FEEDER LOCATION.) (See ANTENNA FEEDER NO.3 REMOVAL/ INSTALLATION.) (See ANTENNA FEEDER NO.3 INSPECTION.)
8	Rear mount camera (See REAR MOUNT CAMERA REMOVAL/ INSTALLATION.)
9	Steering switch (See STEERING SWITCH REMOVAL/ INSTALLATION.) (See STEERING SWITCH INSPECTION.)
10	Tweeter (See TWEETER REMOVAL/ INSTALLATION.) (See TWEETER INSPECTION.)


11	Microphone (See MICROPHONE REMOVAL/ INSTALLATION.)
12	Front center speaker (See FRONT CENTER SPEAKER REMOVAL/ INSTALLATION.) (See FRONT CENTER SPEAKER INSPECTION.)
13	GPS antenna (See GPS ANTENNA REMOVAL/ INSTALLATION.)
14	Audio amplifier (See AUDIO AMPLIFIER REMOVAL/ INSTALLATION.)
15	Bluetooth unit (See Bluetooth UNIT REMOVAL/ INSTALLATION.)
16	SIRIUS satellite radio unit (See SIRIUS SATELLITE RADIO UNIT REMOVAL/ INSTALLATION.)
17	Car-navigation unit (See CAR-NAVIGATION UNIT REMOVAL/ INSTALLATION.) (See ENTERTAINMENT PERSONALIZATION FEATURES SETTING PROCEDURE.)
18	Accessory socket (front) (See ACCESSORY SOCKET REMOVAL/ INSTALLATION.) (See ACCESSORY SOCKET INSPECTION.)
19	AudioPilot® 2 microphone (See AudioPilot® 2 MICROPHONE REMOVAL/ INSTALLATION.)
20	Front door speaker (See FRONT DOOR SPEAKER REMOVAL/ INSTALLATION.) (See FRONT DOOR SPEAKER INSPECTION.)
21	Auxiliary jack (See AUXILIARY JACK REMOVAL/ INSTALLATION.) (See AUXILIARY JACK INSPECTION.)
22	Accessory socket (rear) (See ACCESSORY SOCKET REMOVAL/ INSTALLATION.) (See ACCESSORY SOCKET INSPECTION.)
23	Rear door speaker (See REAR DOOR SPEAKER REMOVAL/ INSTALLATION.)

	(See REAR DOOR SPEAKER I N S P E C T I O N .)
24	Rear center speaker (See REAR CENTER SPEAKER REMOVAL/ I N S T A L L A T I O N .) (See REAR CENTER SPEAKER I N S P E C T I O N .)
25	Condenser (See CONDENSER REMOVAL/ I N S T A L L A T I O N .)
26	Rear speaker (See REAR SPEAKER REMOVAL/ I N S T A L L A T I O N .) (See REAR SPEAKER I N S P E C T I O N .)

2012 - Mazda6 - Body and Accessories

ENTERTAINMENT LOCATION INDEX

Audio system

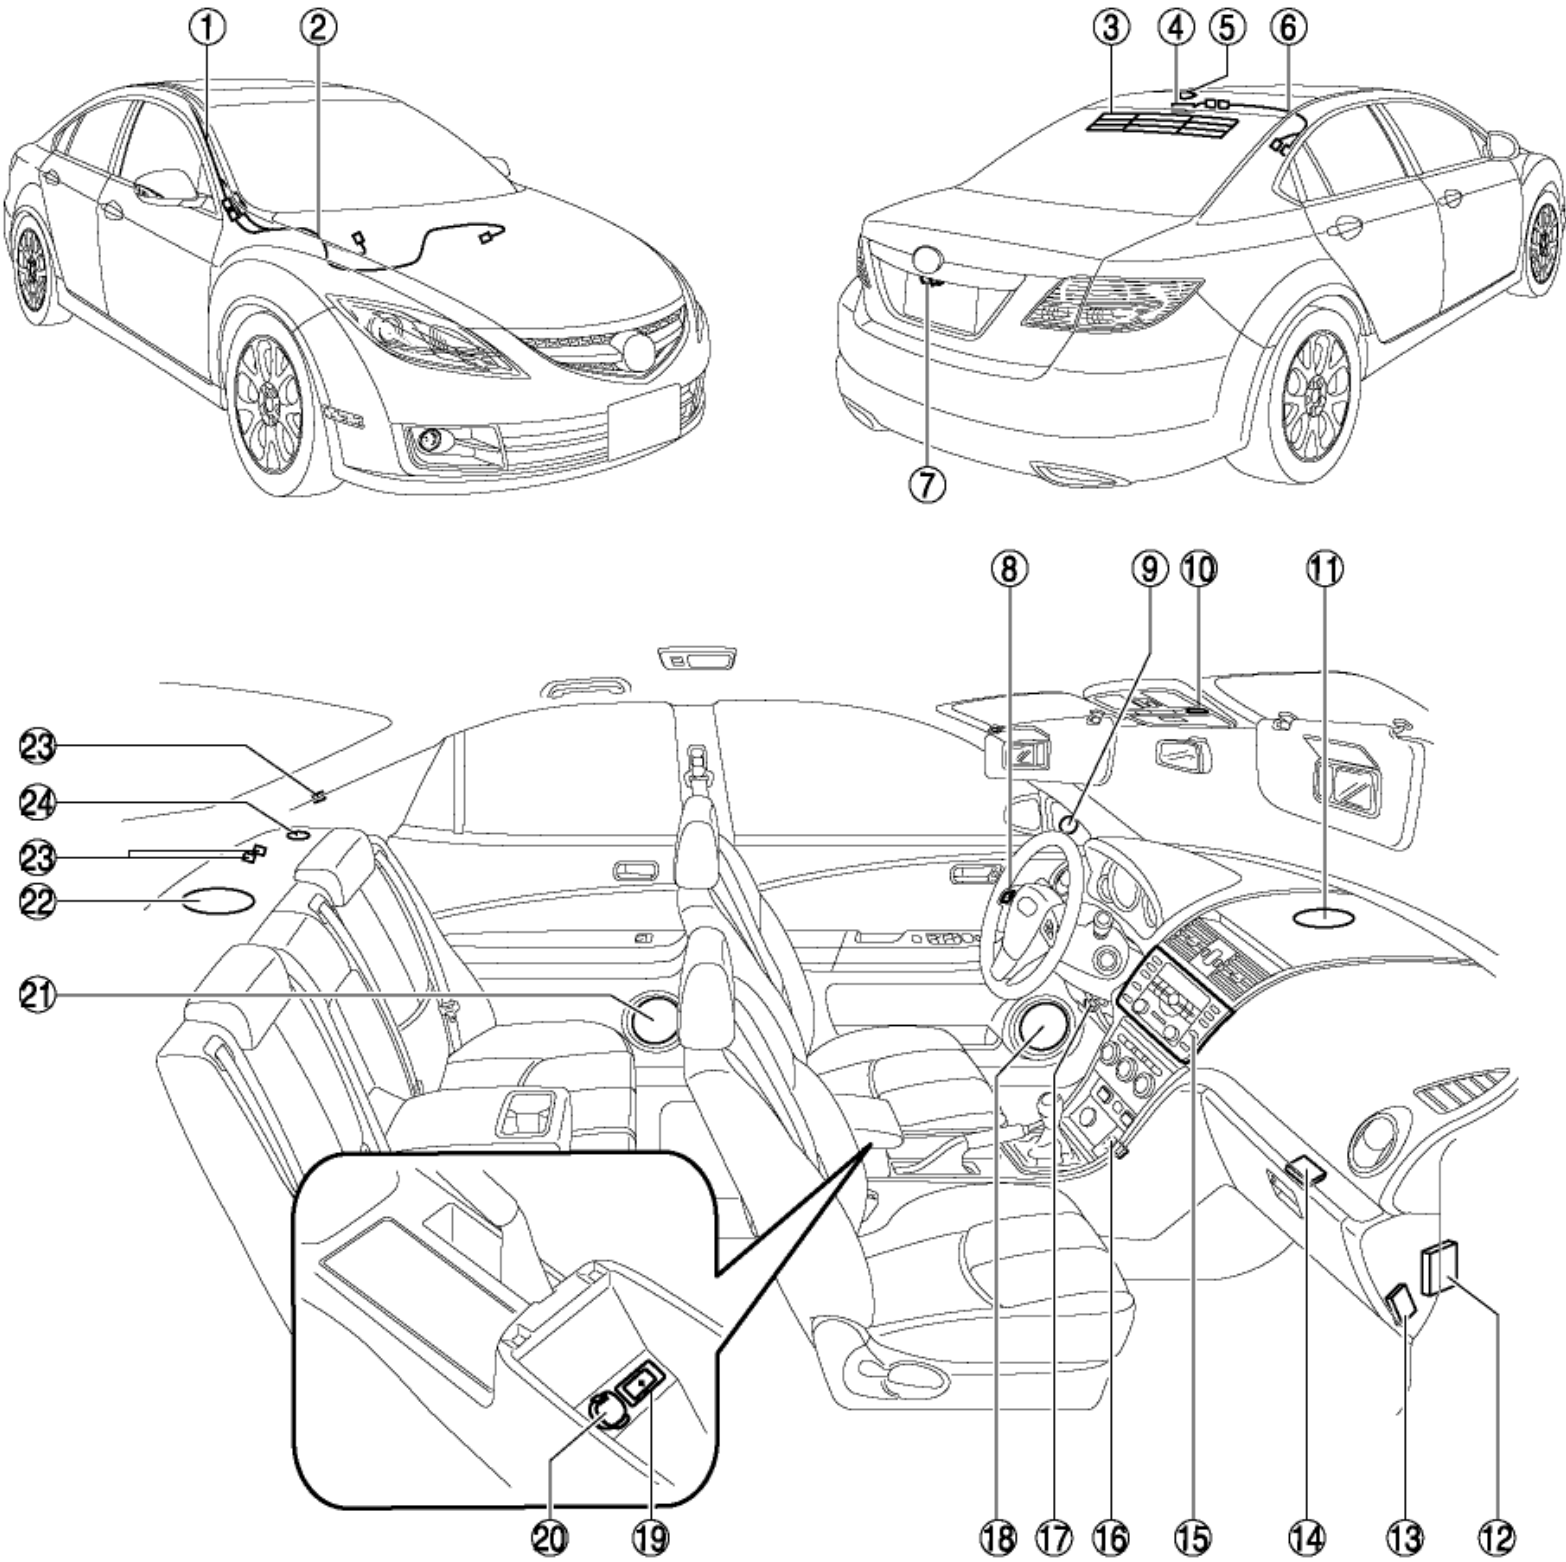

1	Antenna feeder No.2 (See ANTENNA FEEDER LOCATION.) (See ANTENNA FEEDER NO.2 REMOVAL/ INSTALLATION.) (See ANTENNA FEEDER NO.2 INSPECTION.)
2	Antenna feeder No.1 (See ANTENNA FEEDER LOCATION.) (See ANTENNA FEEDER NO.1 REMOVAL/ INSTALLATION.) (See ANTENNA FEEDER NO.1 INSPECTION.)
3	Glass antenna (See GLASS ANTENNA INSPECTION.)
4	Antenna amplifier (See ANTENNA AMPLIFIER REMOVAL/ INSTALLATION.) (See ANTENNA AMPLIFIER INSPECTION.)
5	SIRIUS satellite radio antenna (with SIRIUS satellite radio system) (See SIRIUS SATELLITE RADIO ANTENNA REMOVAL/ INSTALLATION.) (See SIRIUS SATELLITE RADIO ANTENNA INSPECTION.)
6	Antenna feeder No.3 (See ANTENNA FEEDER LOCATION.) (See ANTENNA FEEDER NO.3 REMOVAL/ INSTALLATION.) (See ANTENNA FEEDER NO.3 INSPECTION.)
7	Rear mount camera (with audio unit (with display)) (See REAR MOUNT CAMERA REMOVAL/ INSTALLATION.)
8	Steering switch (See STEERING SWITCH REMOVAL/ INSTALLATION.) (See STEERING SWITCH INSPECTION.)
9	Tweeter (See TWEETER REMOVAL/ INSTALLATION.) (See TWEETER INSPECTION.)
10	Microphone (with Bluetooth system) (See MICROPHONE REMOVAL/ INSTALLATION.)
11	Front center speaker (with Bose®) (See FRONT CENTER SPEAKER REMOVAL/ INSTALLATION.)

	(See FRONT CENTER SPEAKER INSPECTION.)
12	Audio amplifier (with Bose®) (See AUDIO AMPLIFIER REMOVAL/ INSTALLATION.)
13	Bluetooth unit (with Bluetooth system) (See Bluetooth UNIT REMOVAL/ INSTALLATION.)
14	SIRIUS satellite radio unit (with SIRIUS satellite radio system) (See SIRIUS SATELLITE RADIO UNIT REMOVAL/ INSTALLATION.)
15	Audio unit (See AUDIO UNIT REMOVAL/ INSTALLATION.) (See ENTERTAINMENT PERSONALIZATION FEATURES SETTING PROCEDURE.)
16	Accessory socket (front) (See ACCESSORY SOCKET REMOVAL/ INSTALLATION.) (See ACCESSORY SOCKET INSPECTION.)
17	AudioPilot® 2 microphone (with Bose®) (See AudioPilot® 2 MICROPHONE REMOVAL/ INSTALLATION.)
18	Front door speaker (See FRONT DOOR SPEAKER REMOVAL/ INSTALLATION.) (See FRONT DOOR SPEAKER INSPECTION.)
19	Auxiliary jack (See AUXILIARY JACK REMOVAL/ INSTALLATION.) (See AUXILIARY JACK INSPECTION.)
20	Accessory socket (rear) (See ACCESSORY SOCKET REMOVAL/ INSTALLATION.) (See ACCESSORY SOCKET INSPECTION.)
21	Rear door speaker (See REAR DOOR SPEAKER REMOVAL/ INSTALLATION.) (See REAR DOOR SPEAKER INSPECTION.)
22	Rear center speaker (with Bose®) (See REAR CENTER SPEAKER REMOVAL/ INSTALLATION.) (See REAR CENTER SPEAKER INSPECTION.)
23	Condenser


(See **CONDENSER REMOVAL/ INSTALLATION.**)

24 Rear speaker (with Bose®)

(See **REAR SPEAKER REMOVAL/ INSTALLATION.**)

(See **REAR SPEAKER INSPECTION.**)

Car-navigation system

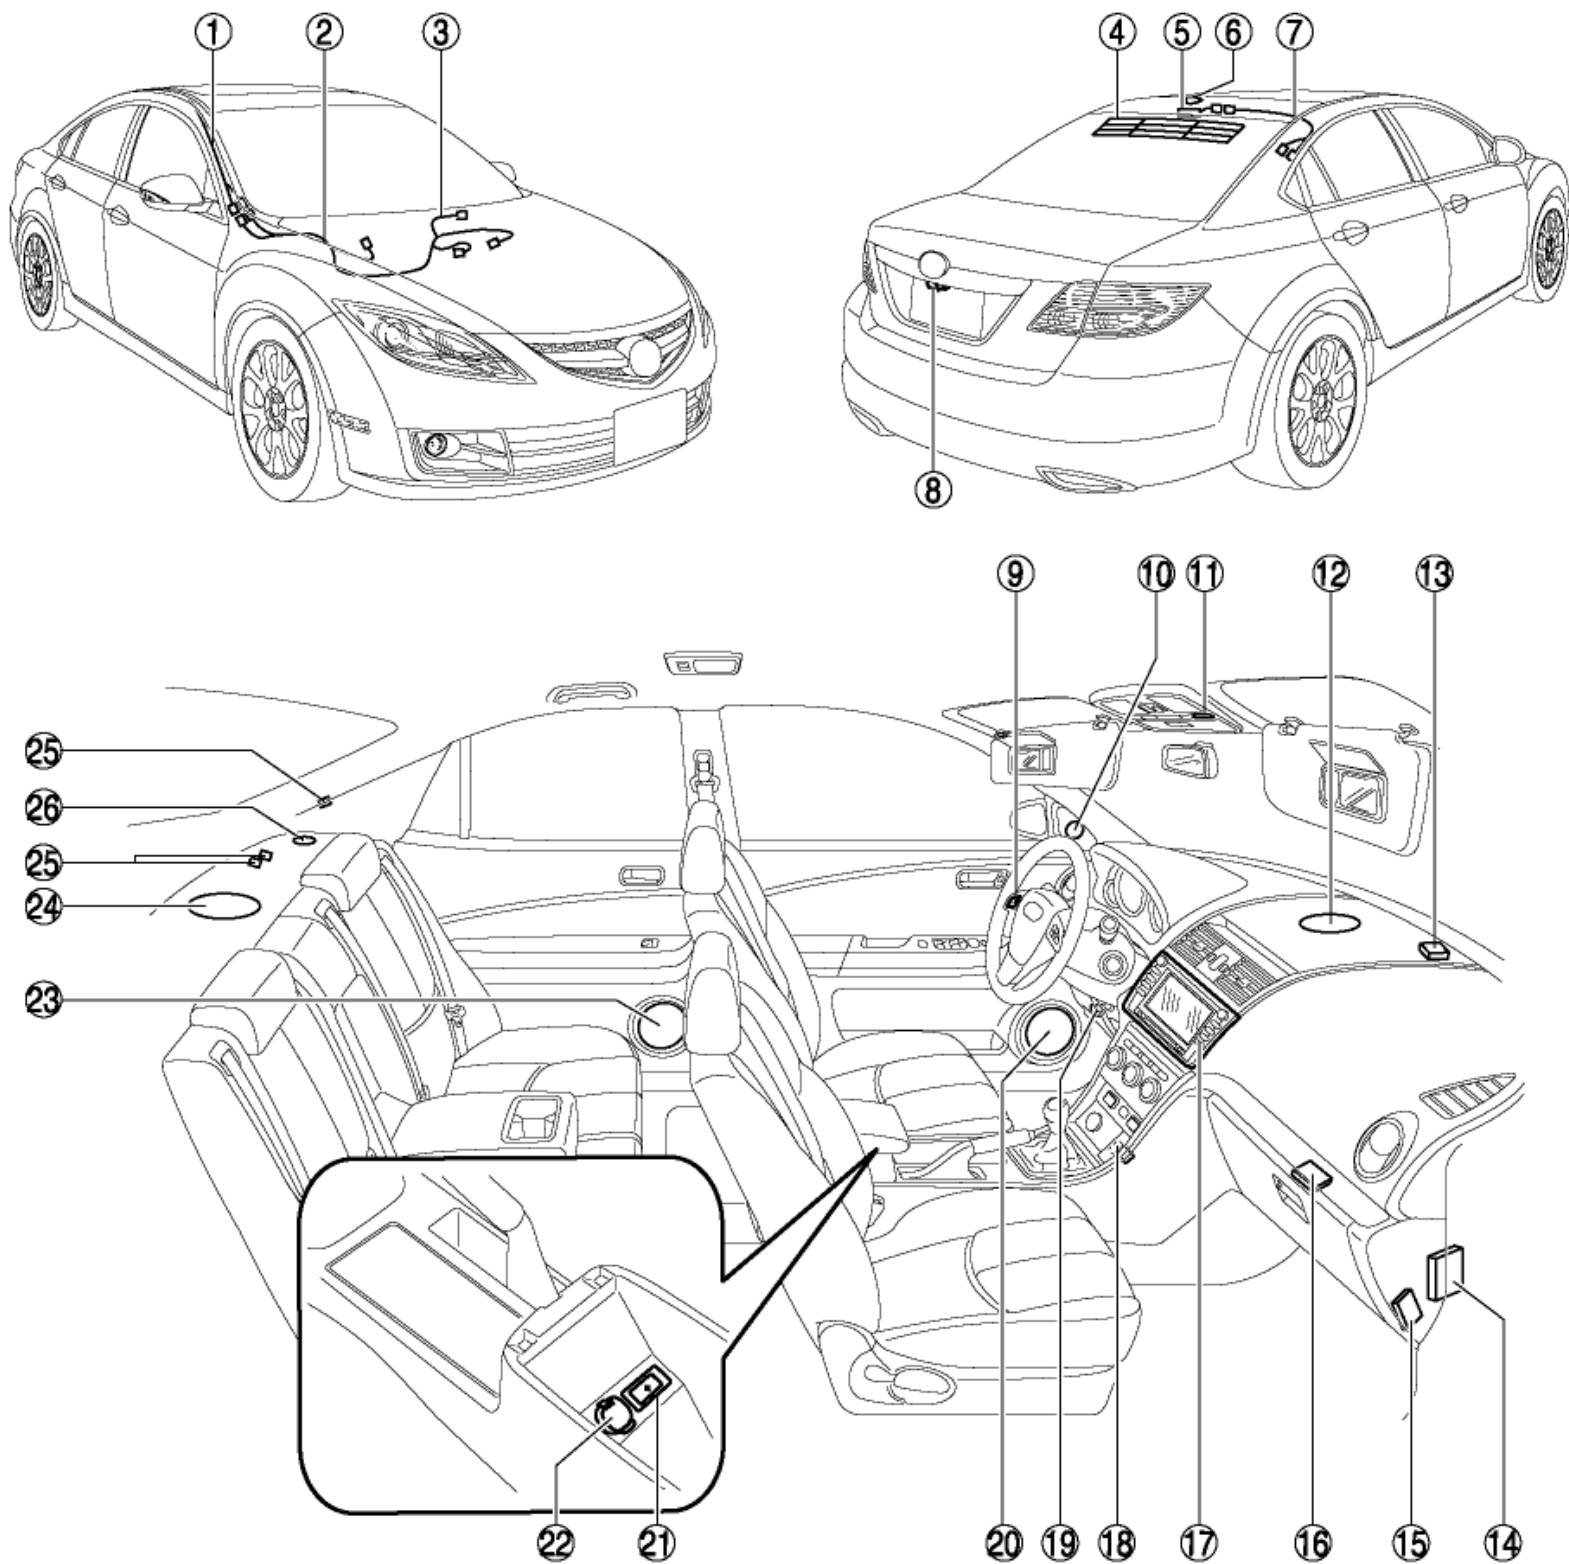

1	Antenna feeder No.2 (See ANTENNA FEEDER LOCATION.) (See ANTENNA FEEDER NO.2 REMOVAL/ INSTALLATION.) (See ANTENNA FEEDER NO.2 INSPECTION.)
2	Antenna feeder No.1 (See ANTENNA FEEDER LOCATION.) (See ANTENNA FEEDER NO.1 REMOVAL/ INSTALLATION.) (See ANTENNA FEEDER NO.1 INSPECTION.)
3	GPS antenna feeder (See ANTENNA FEEDER LOCATION.) (See GPS ANTENNA FEEDER REMOVAL/ INSTALLATION.) (See GPS ANTENNA FEEDER INSPECTION.)
4	Glass antenna (See GLASS ANTENNA INSPECTION.)
5	Antenna amplifier (See ANTENNA AMPLIFIER REMOVAL/ INSTALLATION.) (See ANTENNA AMPLIFIER INSPECTION.)
6	SIRIUS satellite radio antenna (See SIRIUS SATELLITE RADIO ANTENNA REMOVAL/ INSTALLATION.) (See SIRIUS SATELLITE RADIO ANTENNA INSPECTION.)
7	Antenna feeder No.3 (See ANTENNA FEEDER LOCATION.) (See ANTENNA FEEDER NO.3 REMOVAL/ INSTALLATION.) (See ANTENNA FEEDER NO.3 INSPECTION.)
8	Rear mount camera (See REAR MOUNT CAMERA REMOVAL/ INSTALLATION.)
9	Steering switch (See STEERING SWITCH REMOVAL/ INSTALLATION.) (See STEERING SWITCH INSPECTION.)
10	Tweeter (See TWEETER REMOVAL/ INSTALLATION.) (See TWEETER INSPECTION.)

11	Microphone (See MICROPHONE REMOVAL/ INSTALLATION.)
12	Front center speaker (See FRONT CENTER SPEAKER REMOVAL/ INSTALLATION.) (See FRONT CENTER SPEAKER INSPECTION.)
13	GPS antenna (See GPS ANTENNA REMOVAL/ INSTALLATION.)
14	Audio amplifier (See AUDIO AMPLIFIER REMOVAL/ INSTALLATION.)
15	Bluetooth unit (See Bluetooth UNIT REMOVAL/ INSTALLATION.)
16	SIRIUS satellite radio unit (See SIRIUS SATELLITE RADIO UNIT REMOVAL/ INSTALLATION.)
17	Car-navigation unit (See CAR-NAVIGATION UNIT REMOVAL/ INSTALLATION.) (See ENTERTAINMENT PERSONALIZATION FEATURES SETTING PROCEDURE.)
18	Accessory socket (front) (See ACCESSORY SOCKET REMOVAL/ INSTALLATION.) (See ACCESSORY SOCKET INSPECTION.)
19	AudioPilot® 2 microphone (See AudioPilot® 2 MICROPHONE REMOVAL/ INSTALLATION.)
20	Front door speaker (See FRONT DOOR SPEAKER REMOVAL/ INSTALLATION.) (See FRONT DOOR SPEAKER INSPECTION.)
21	Auxiliary jack (See AUXILIARY JACK REMOVAL/ INSTALLATION.) (See AUXILIARY JACK INSPECTION.)
22	Accessory socket (rear) (See ACCESSORY SOCKET REMOVAL/ INSTALLATION.) (See ACCESSORY SOCKET INSPECTION.)
23	Rear door speaker (See REAR DOOR SPEAKER REMOVAL/ INSTALLATION.)

	(See REAR DOOR SPEAKER I N S P E C T I O N .)
24	Rear center speaker (See REAR CENTER SPEAKER REMOVAL/ I N S T A L L A T I O N .) (See REAR CENTER SPEAKER I N S P E C T I O N .)
25	Condenser (See CONDENSER REMOVAL/ I N S T A L L A T I O N .)
26	Rear speaker (See REAR SPEAKER REMOVAL/ I N S T A L L A T I O N .) (See REAR SPEAKER I N S P E C T I O N .)