


2012 - Mazda6 - Body and Accessories

ACCESSORY SOCKET REMOVAL/ INSTALLATION


Front

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - b. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - c. Shift knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
 - d. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
3. Remove in the order indicated in the table.

With keyless entry system

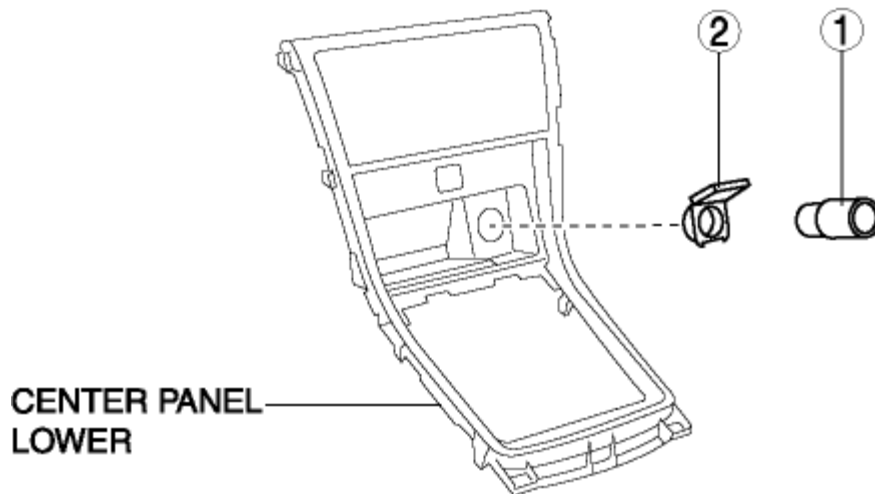

With advanced keyless entry and push button start system

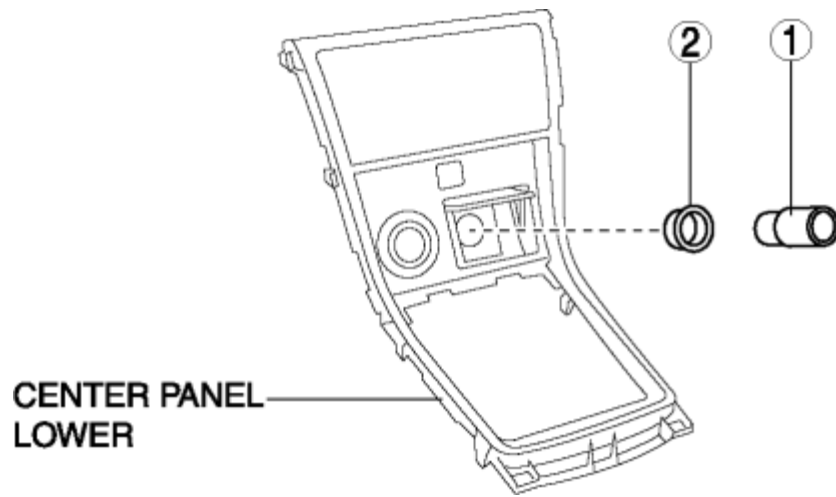


1	Accessory socket (Front) (See Accessory Socket Removal Note.)
2	Cap (See Cap Removal Note.)

4. Install in the reverse order of removal.

Rear

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - b. Shift knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
 - c. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - d. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - f. Rear console (See [REAR CONSOLE DISASSEMBLY/ ASSEMBLY.](#))
3. Remove in the order indicated in the table.

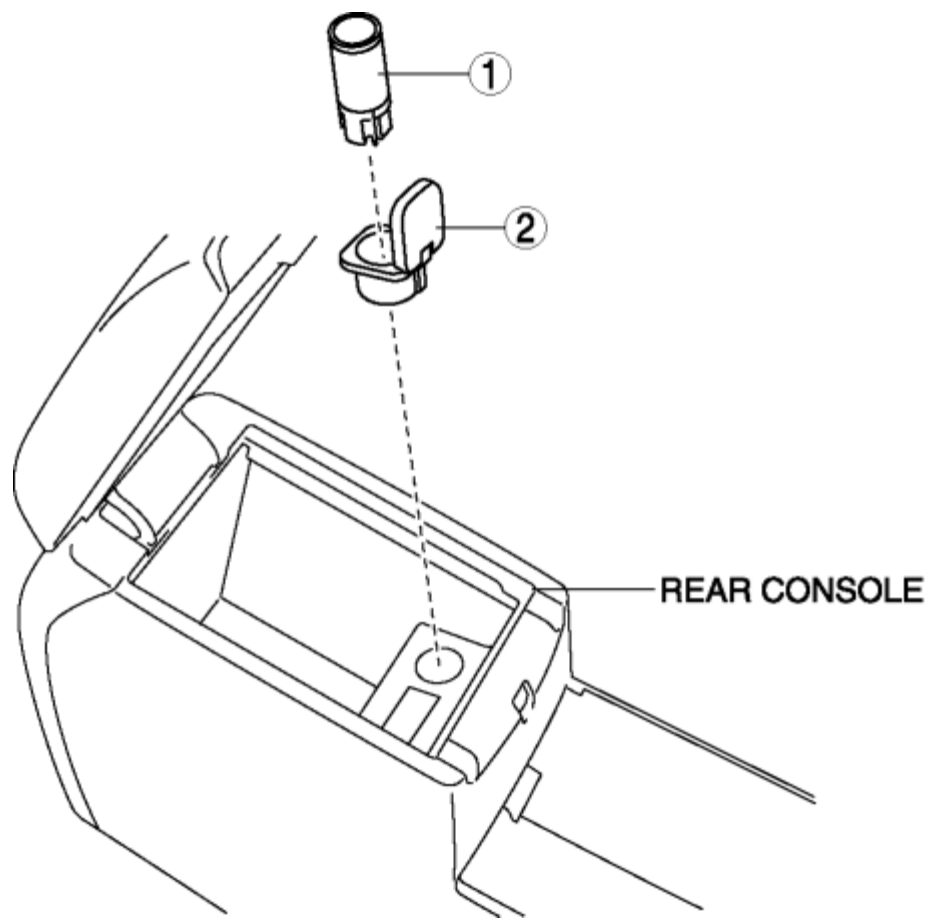


1	Accessory socket (Rear) (See Accessory Socket Removal Note.)
---	--

2	Cap (See Cap Removal Note.)
---	---

4. Install in the reverse order of removal.


Accessory Socket Removal Note

1. Remove the socket in the direction of the arrow (2) shown in the figure while opening the caps in the direction of the arrow (1) using a tape-wrapped fastener remover.

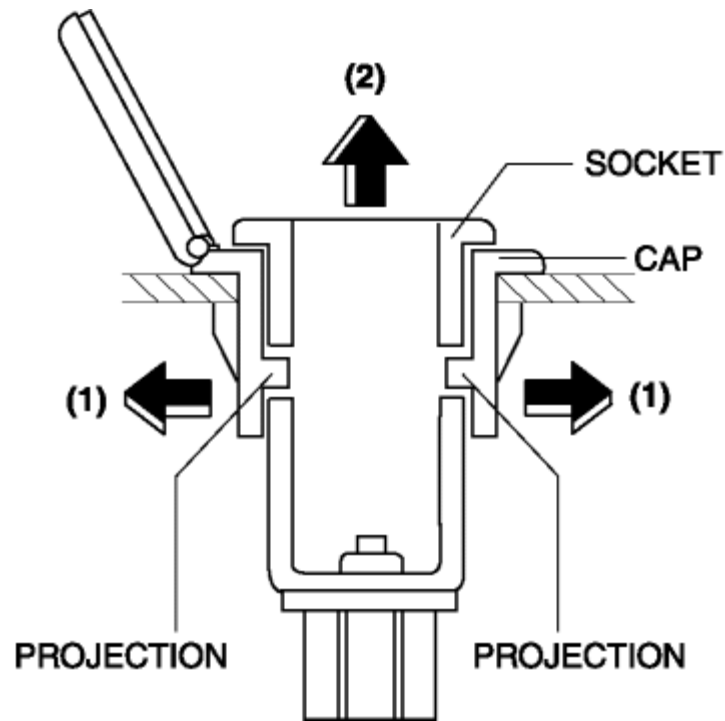

Cap Removal Note

1. Remove the cap in the direction of the arrow (2) shown in the figure while pressing the cap tabs in the direction of the arrow (1).

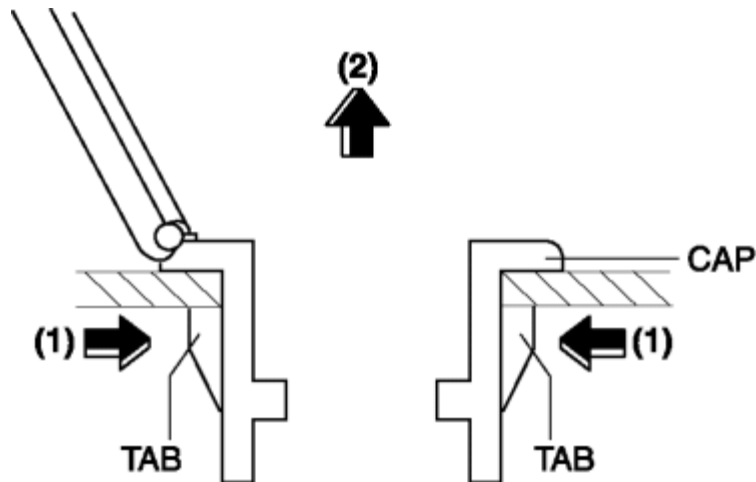


2012 - Mazda6 - Body and Accessories

ACCESSORY SOCKET REMOVAL/ INSTALLATION


Front

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - b. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - c. Shift knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
 - d. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
3. Remove in the order indicated in the table.

With keyless entry system

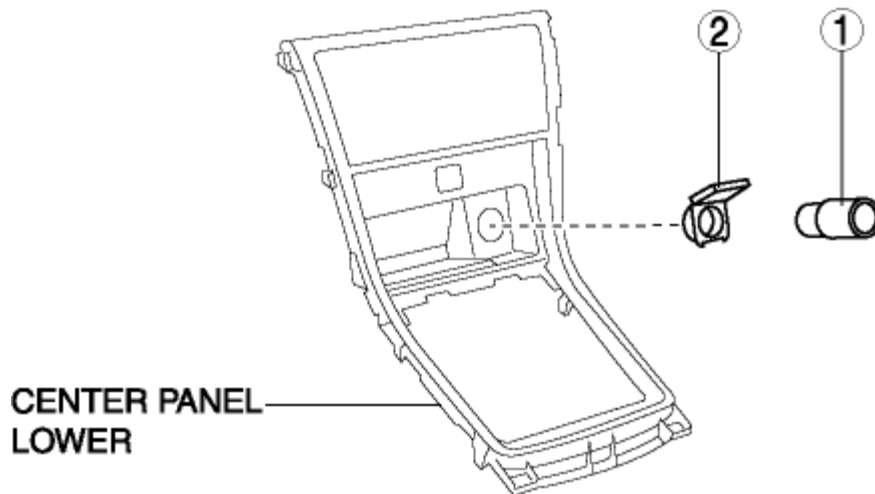

With advanced keyless entry and push button start system

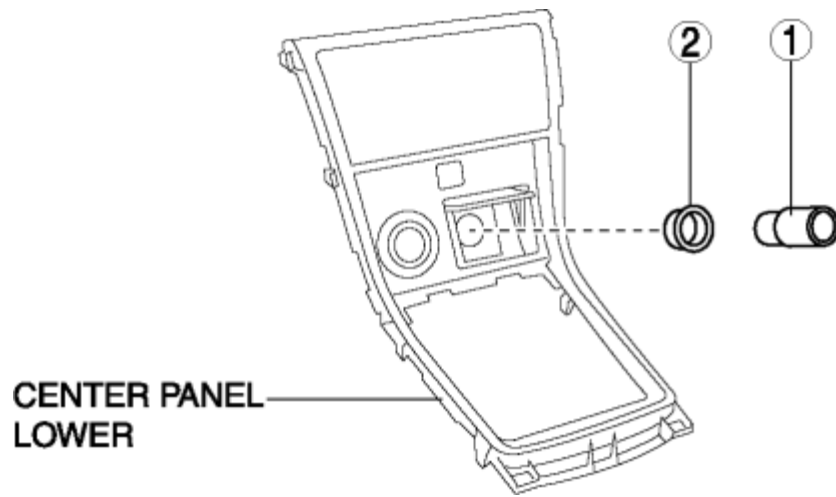


1	Accessory socket (Front) (See Accessory Socket Removal Note.)
2	Cap (See Cap Removal Note.)

4. Install in the reverse order of removal.

Rear

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - b. Shift knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
 - c. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - d. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - f. Rear console (See [REAR CONSOLE DISASSEMBLY/ ASSEMBLY.](#))
3. Remove in the order indicated in the table.

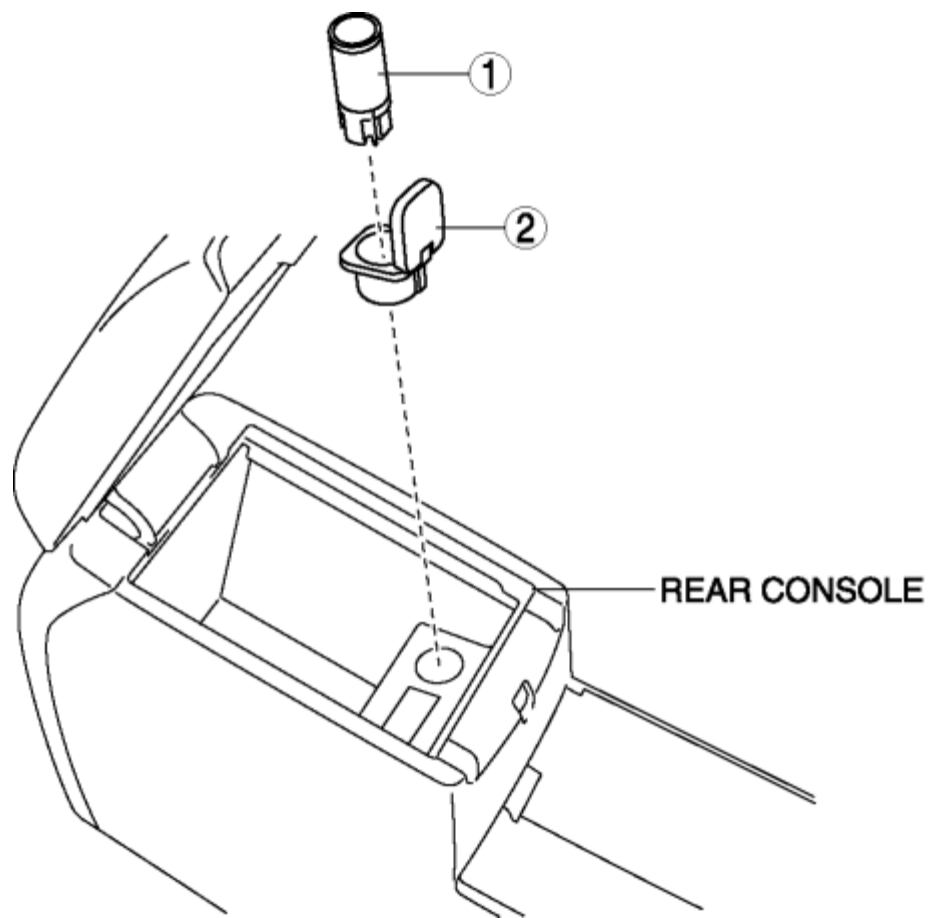


1	Accessory socket (Rear) (See Accessory Socket Removal Note.)
---	--

2	Cap (See Cap Removal Note.)
---	---

4. Install in the reverse order of removal.

Accessory Socket Removal Note

1. Remove the socket in the direction of the arrow (2) shown in the figure while opening the caps in the direction of the arrow (1) using a tape-wrapped fastener remover.

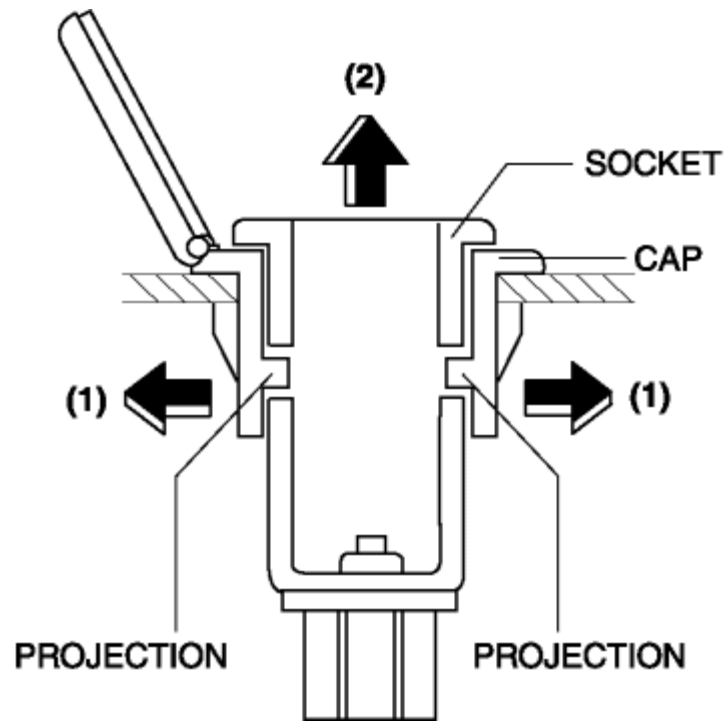

Cap Removal Note

1. Remove the cap in the direction of the arrow (2) shown in the figure while pressing the cap tabs in the direction of the arrow (1).

